

Custom
TRIM PACKAGES

Enhance The Look Of Your Home



HOMESTEAD
WOODWORKS



HOMESTEAD
WOODWORKS

www.hsww.ca

Table of Contents

| | |
|----------------|-------|
| Casing | 1-13 |
| Back Band | 14-15 |
| Crown Mould | 16-26 |
| Chair Rail | 27-28 |
| Panel Mould | 29-34 |
| Window Sill | 35 |
| T & G Paneling | 36-37 |
| Hand Rail | 38-42 |
| Base Board | 43-44 |
| Door Stop | 46 |
| Kitchen Door | 47 |
| Plinth Blocks | 48 |
| Shiplap | 49 |
| Raised Panels | 50 |
| Brick Mould | 51 |
| Door Styles | 53-54 |

Note:



To view profile in full scale, click the item code to view

www.hsww.ca



Homestead Woodworks
3575 Broadway ST.
Hawkesville Ont.
519-699-4529

Casing



CB-01

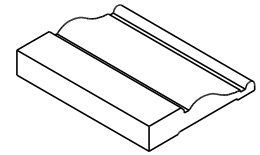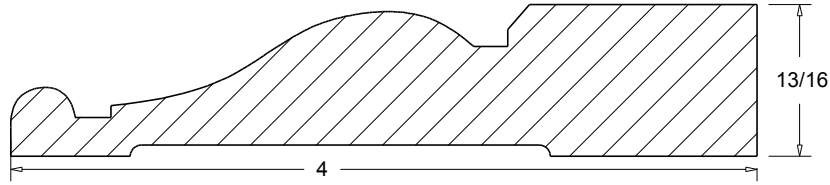



CB-02

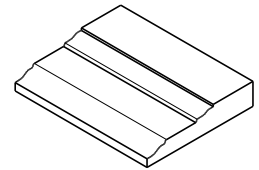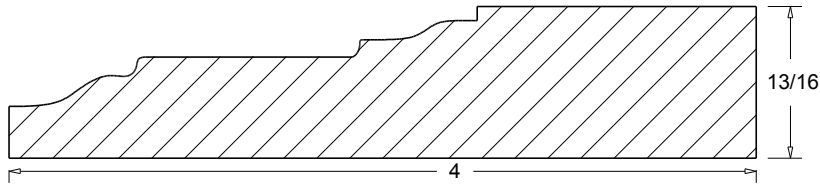



CB-03

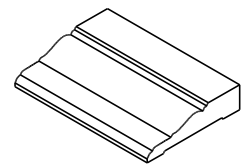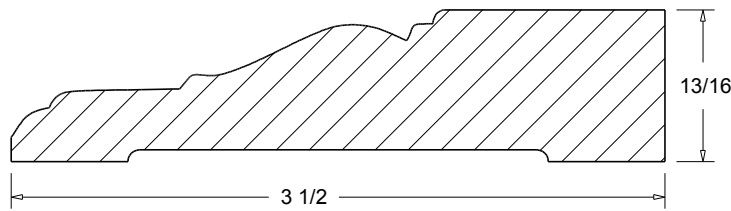



CB-04

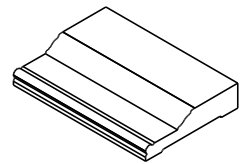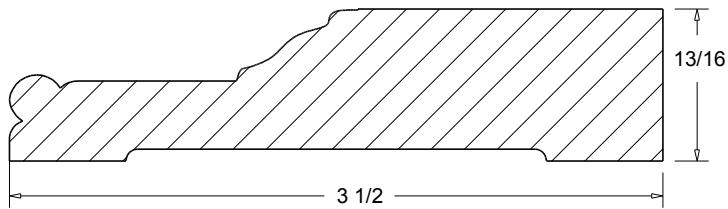

CB-05

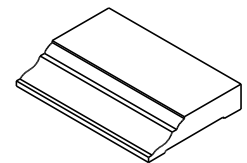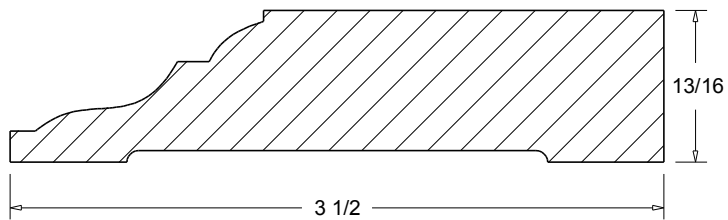

CB-06

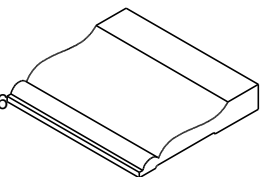
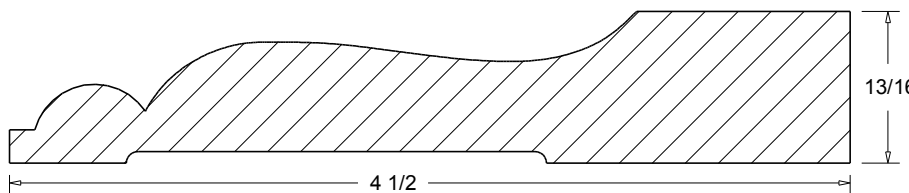


[Back](#) Press code to view full Scale





Casing



CB-07

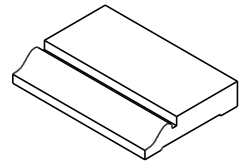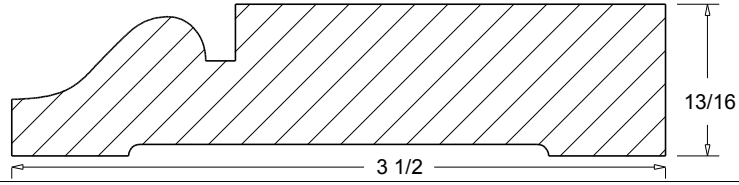



CB-08

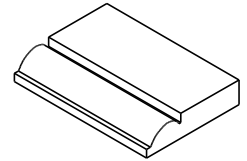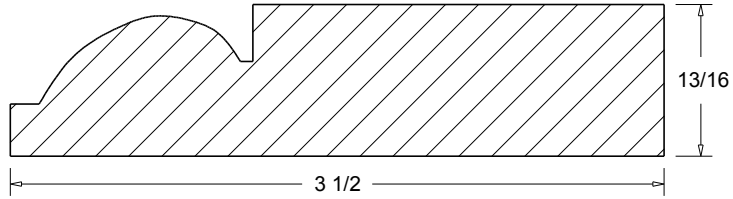



CB-09

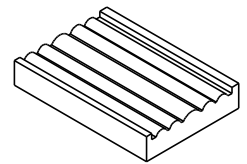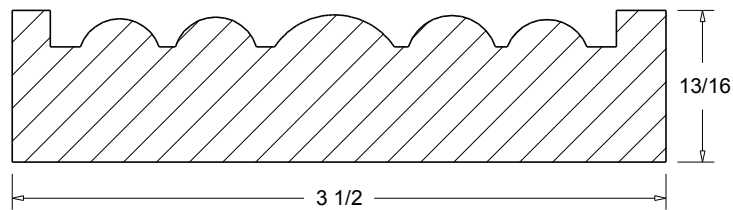


CB-10

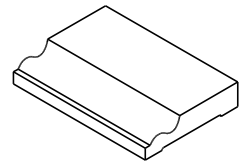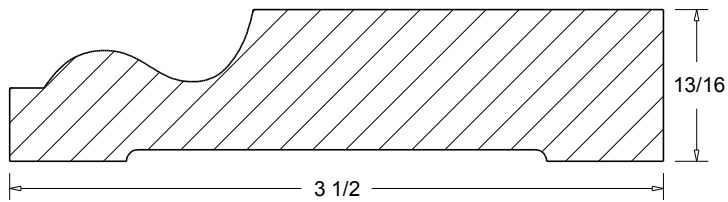


CB-11

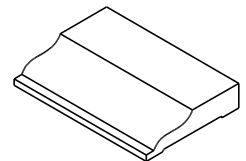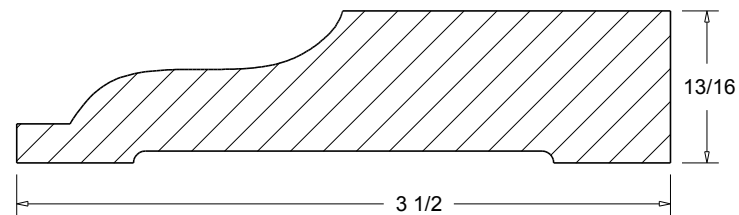

CB-12


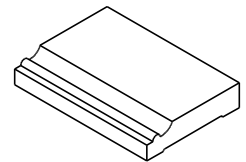


 Press code to view full Scale





Casing



CB-13

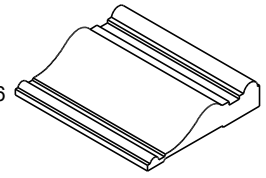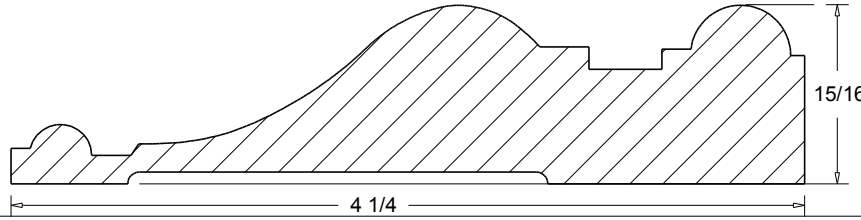



CB-14

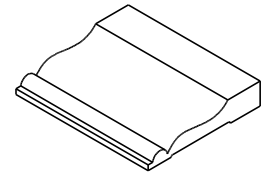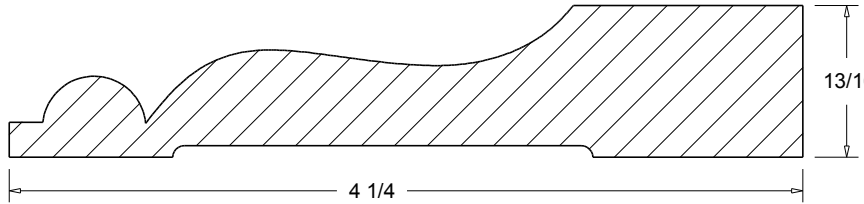



CB-15

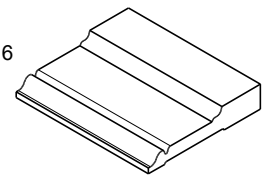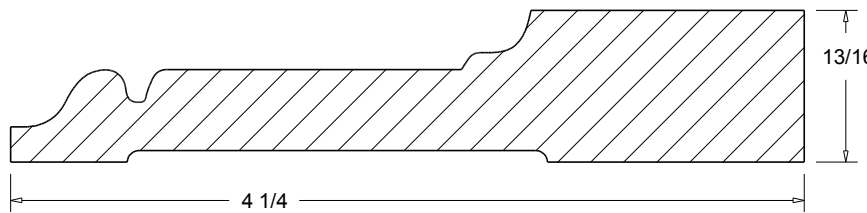



CB-16

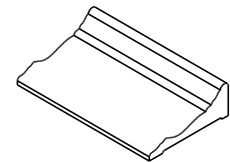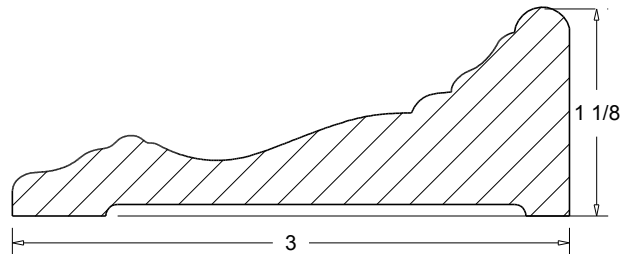


CB-17

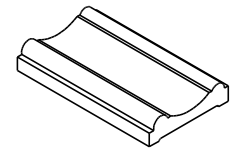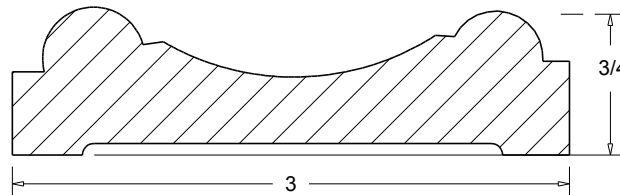

CB-18

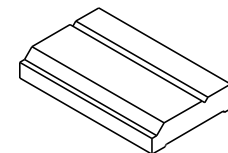
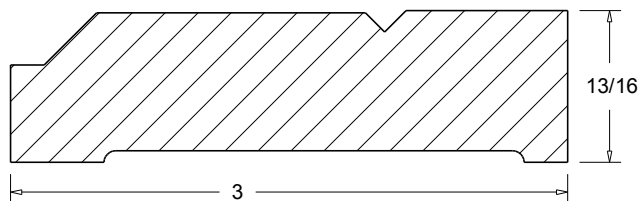


 Press code to view full Scale





Casing



CB-19

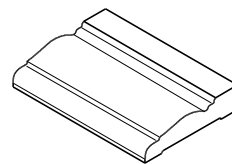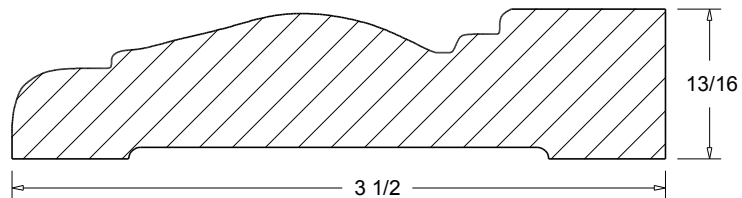



CB-20

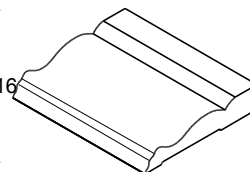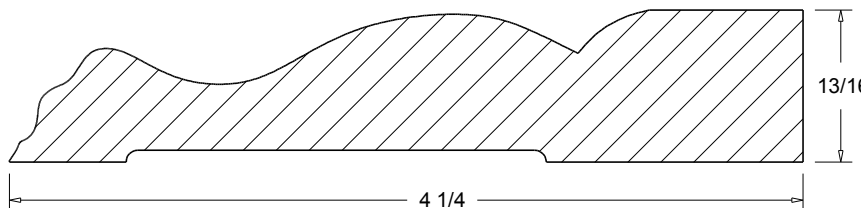



CB-21

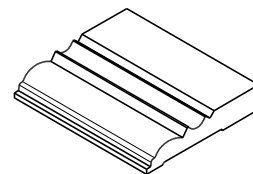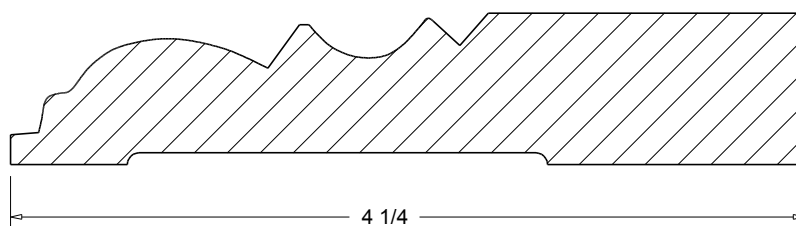



CB-22

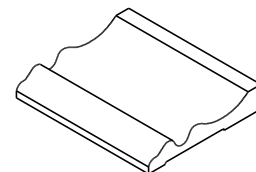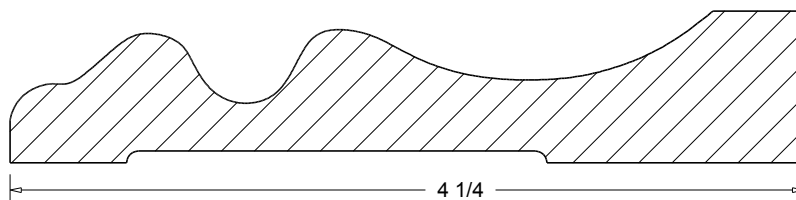

CB-23

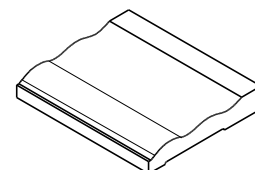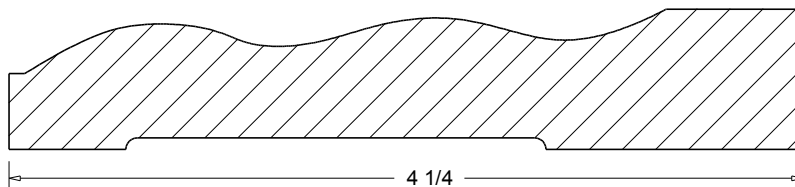

CB-24

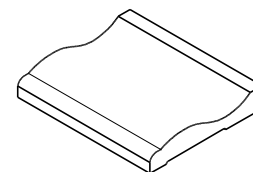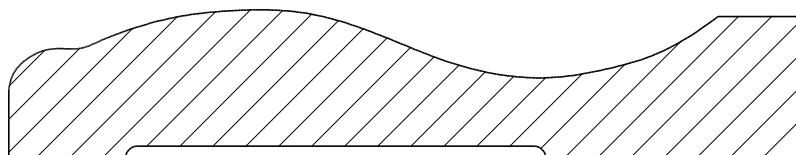



Press code to view full Scale





HOMESTEAD
WOODWORKS

Casing



CB-25

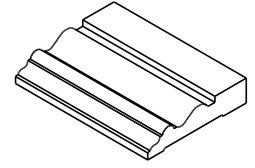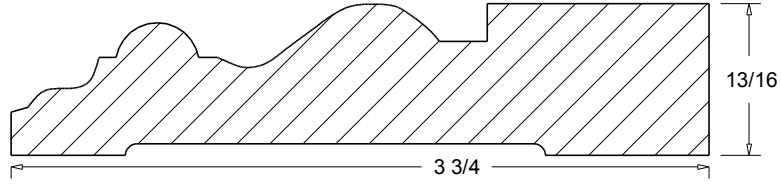



CB-26

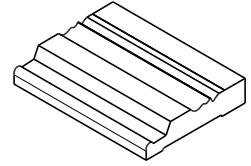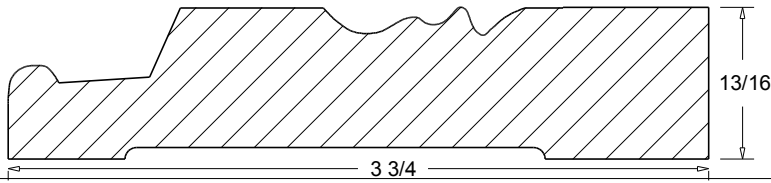



CB-27

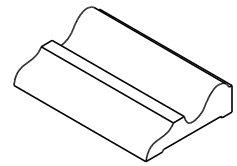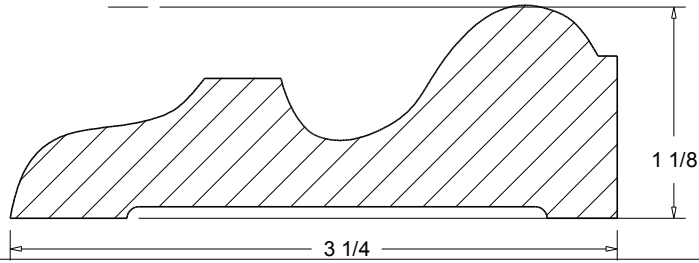



CB-28

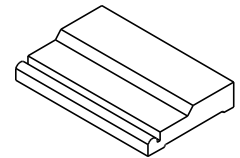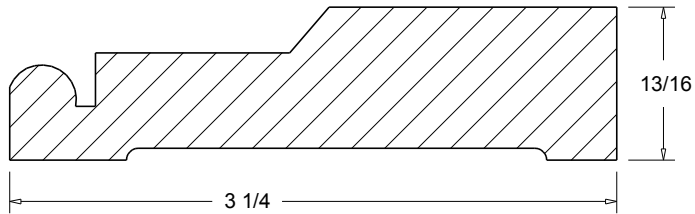


CB-29

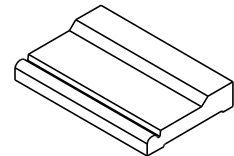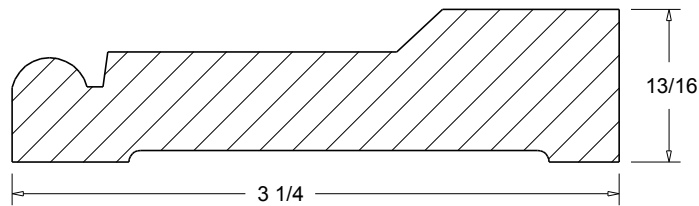

CB-30

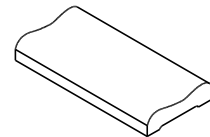
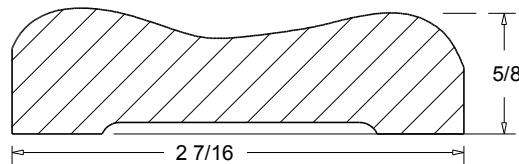


 Press code to view full Scale





Casing



CB-31

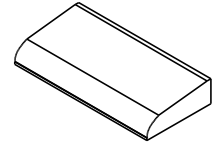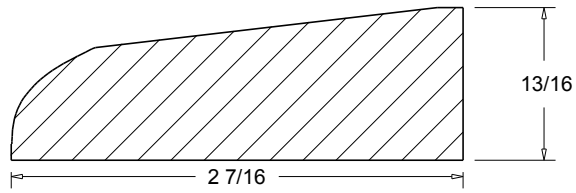



CB-32

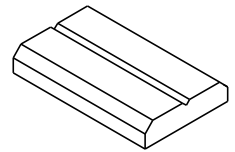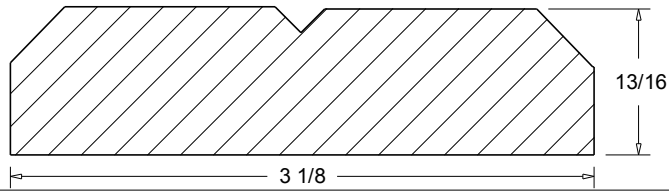



CB-33

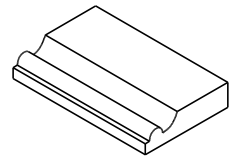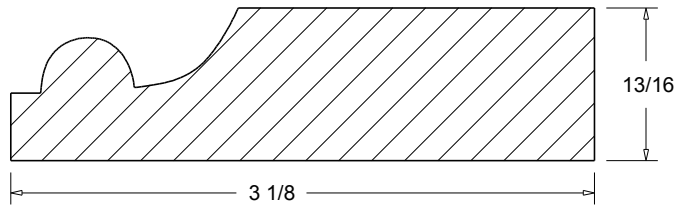



CB-34

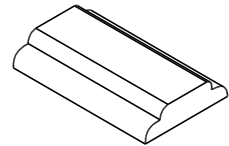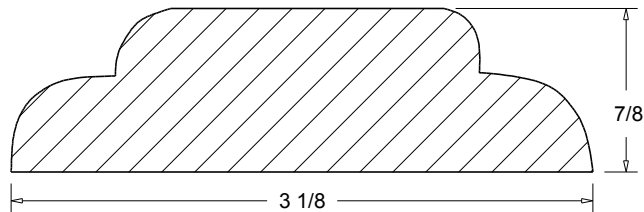


CB-35

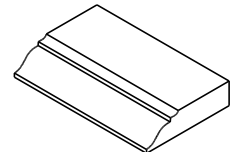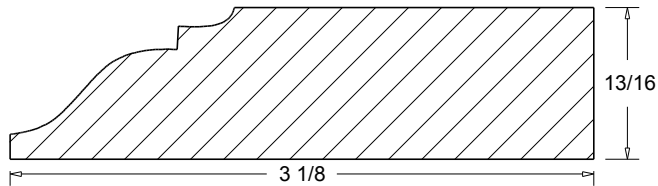

CB-36

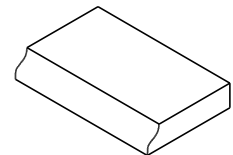
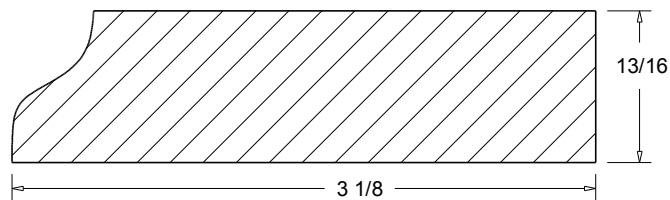


 Press code to view full Scale





Casing



CB-37

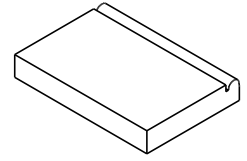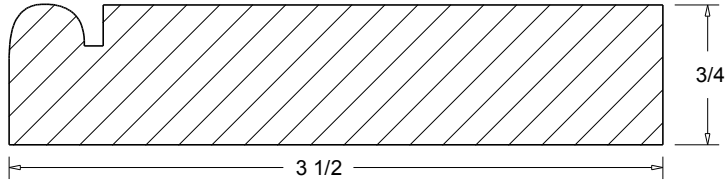



CB-38

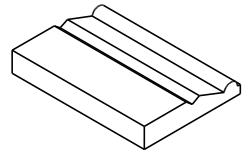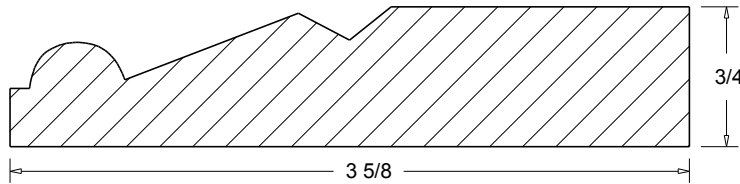



CB-40

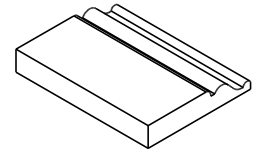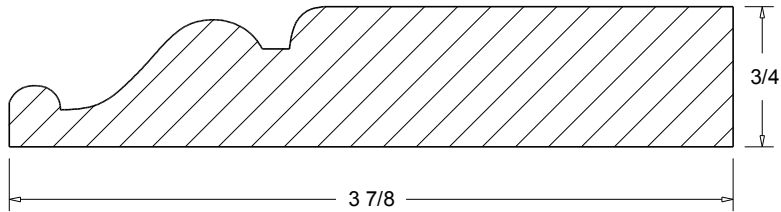


CB-41

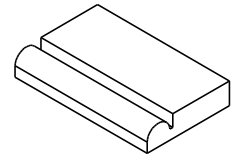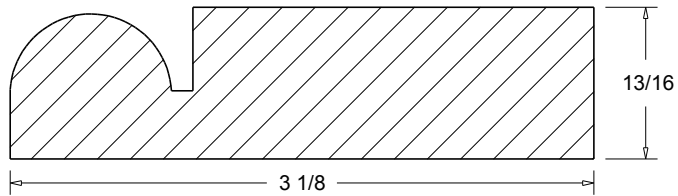

CB-42

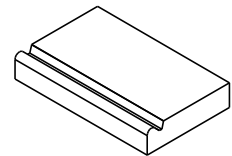
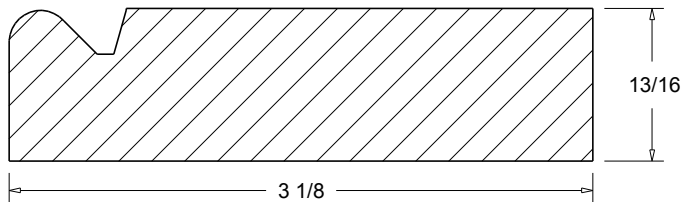


 Press code to view full Scale





Casing



CB-43

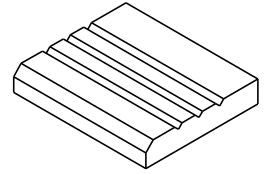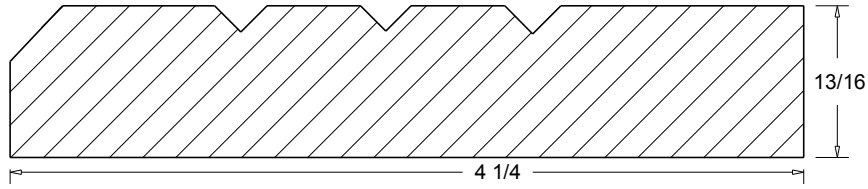



CB-44

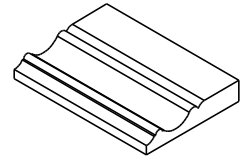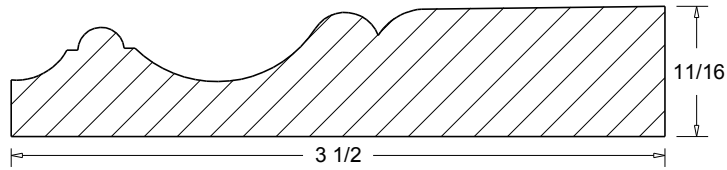



CB-45

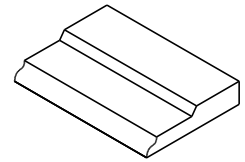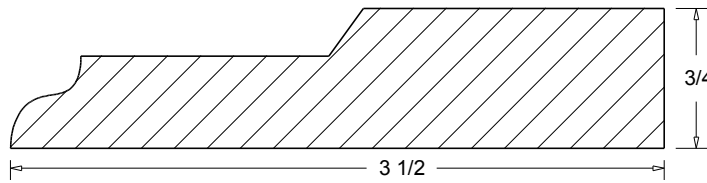



CB-46

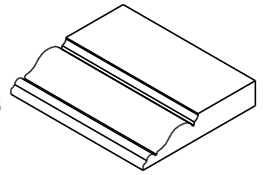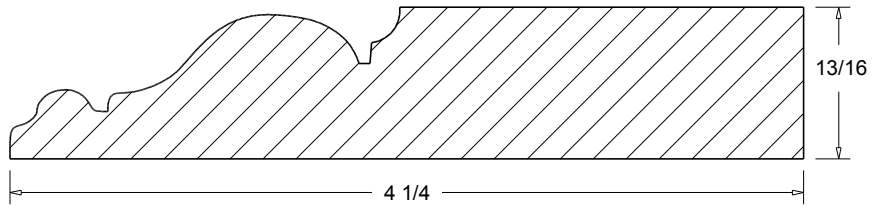


CB-47

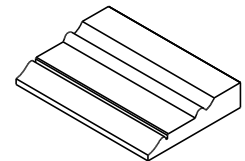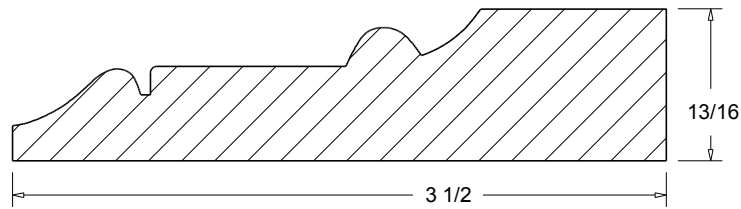

CB-48

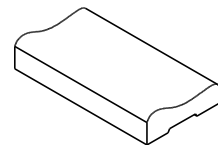
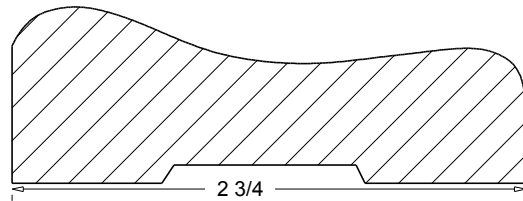


 Press code to view full Scale





Casing



CB-49

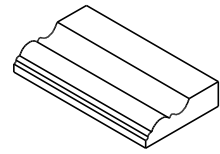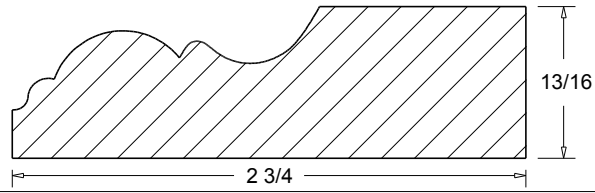



CB-50

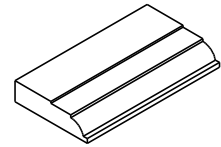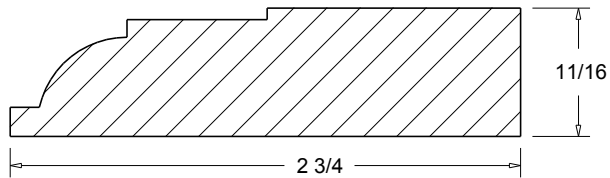



CB-51

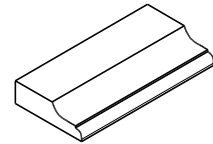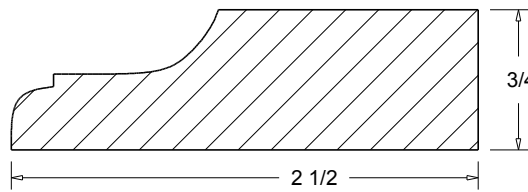


CB-52

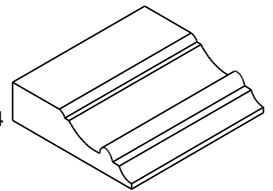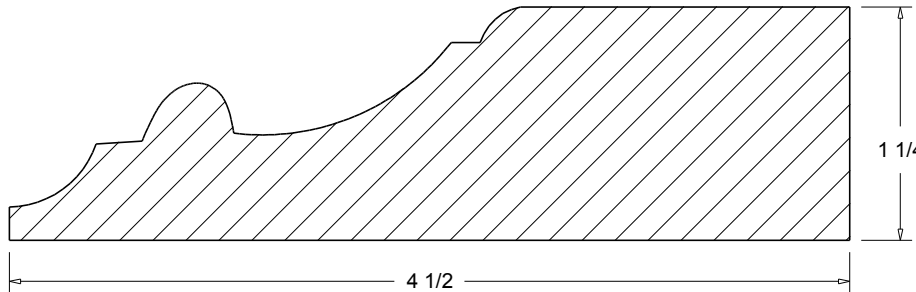


CB-53

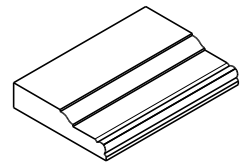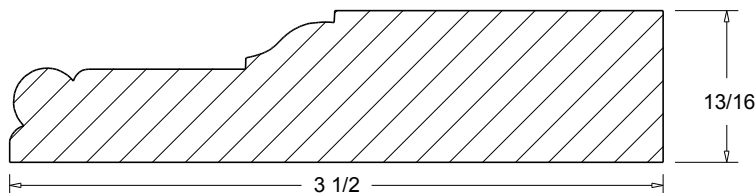



CB-54

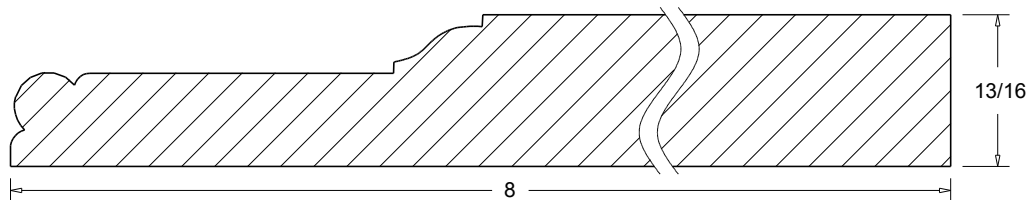



 Press code to view full Scale

Casing



CB-55

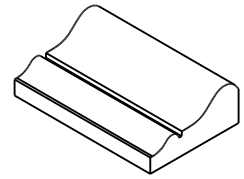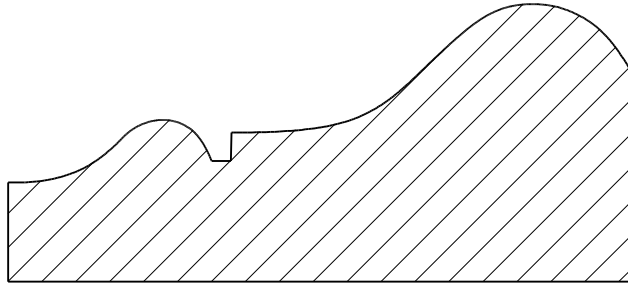



CB-56

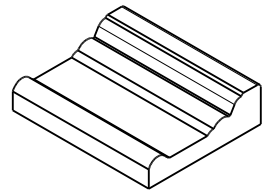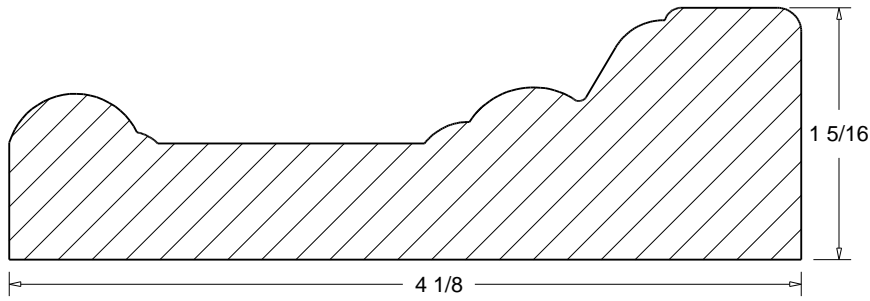


CB-57

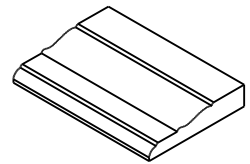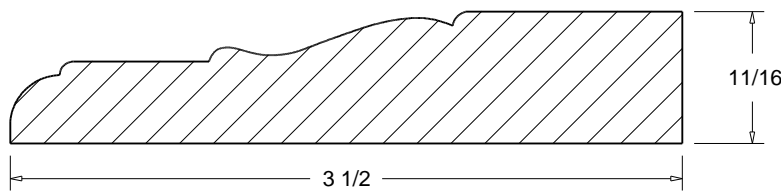



CB-58

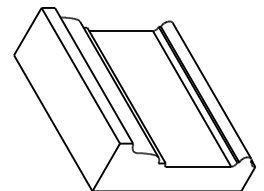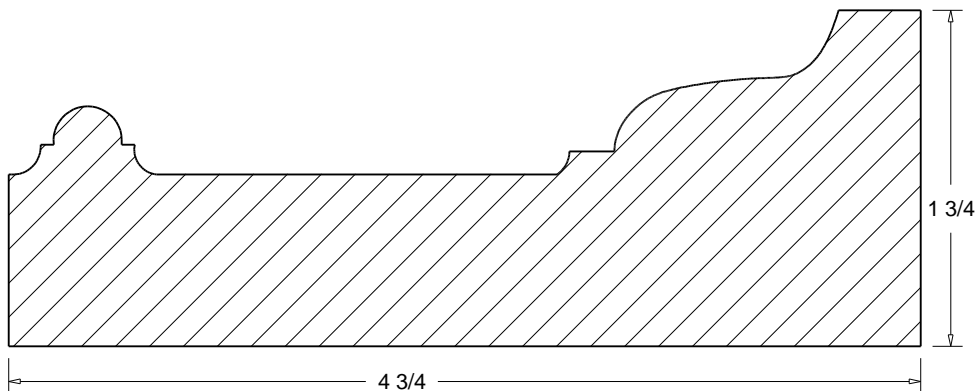



 Press code to view full Scale

Casing



CB-59

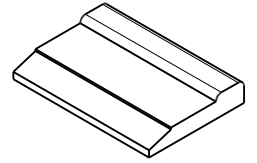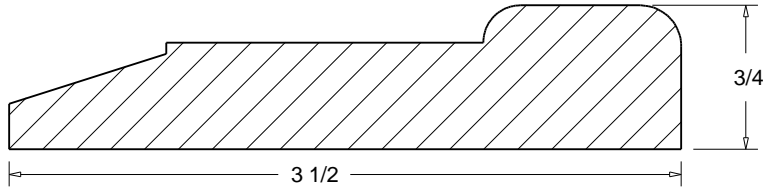



CB-60

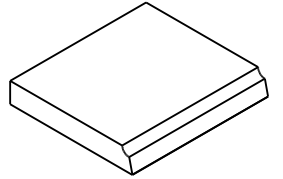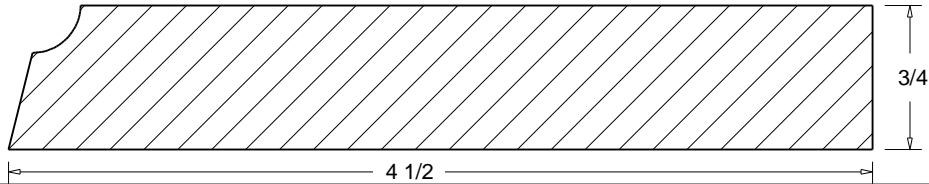



CB-61

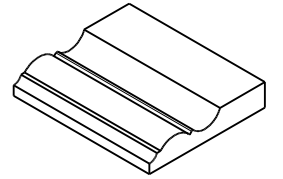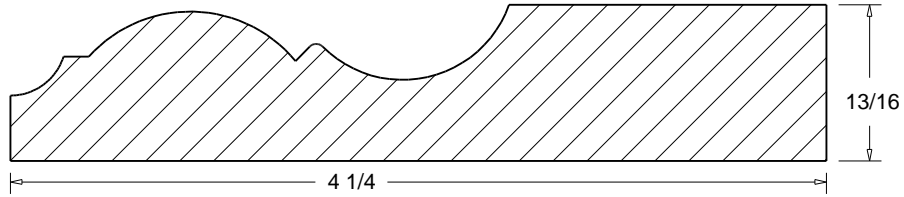



CB-62

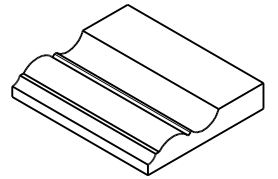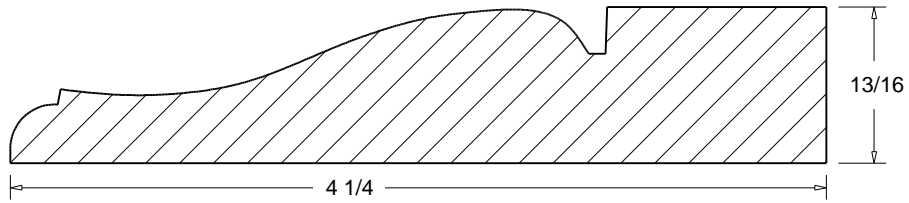



CB-63

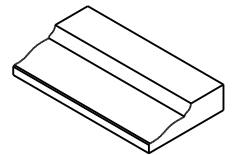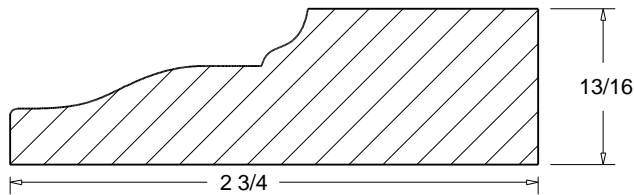

CB-64

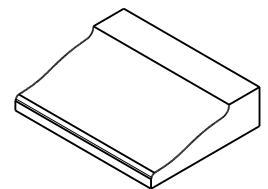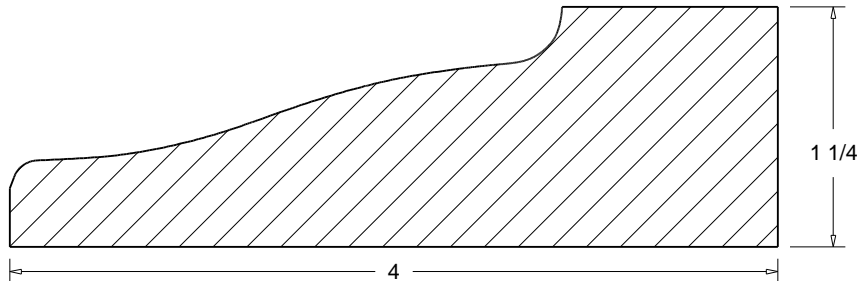



CB-65

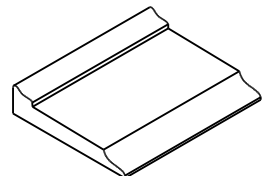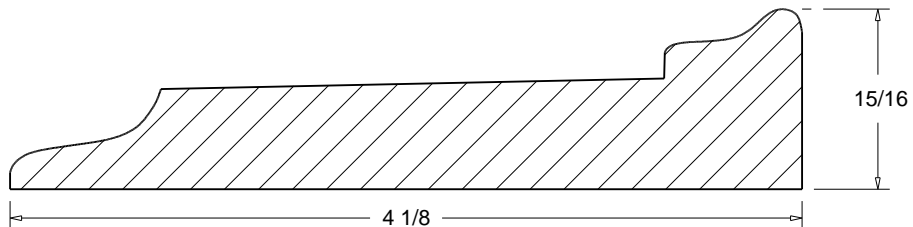



Press code to view full Scale

Casing

CB-66

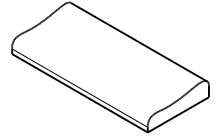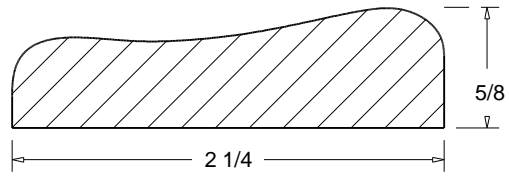

CB-67

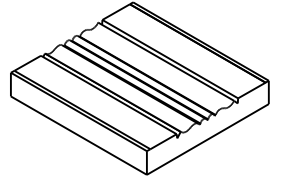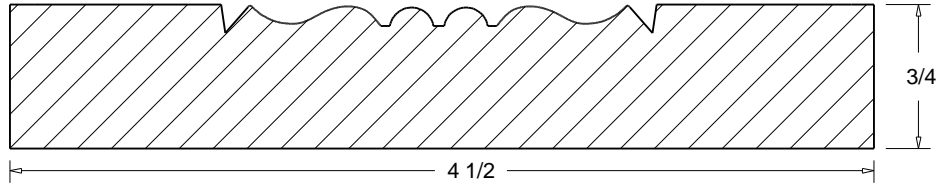



Press code to view full Scale





HOMESTEAD
WOODWORKS

Back Band



BB-01

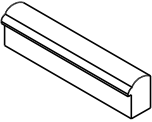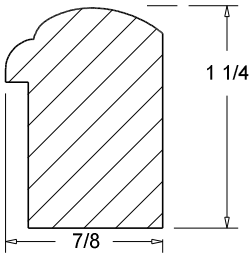



BB-02

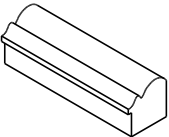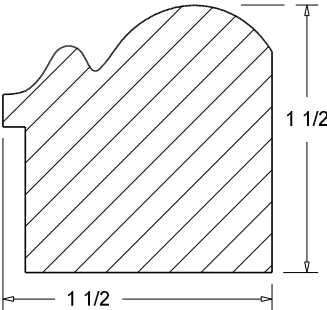



BB-03

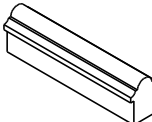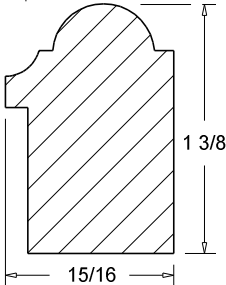


BB-04

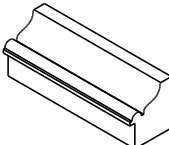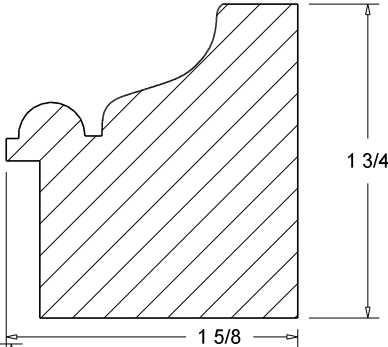

BB-05

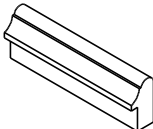
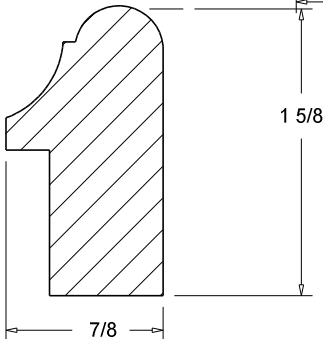


 Press code to view full Scale





Back Band



BB-06

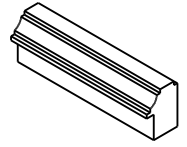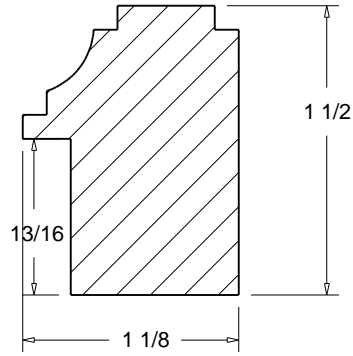



BB-07

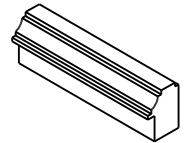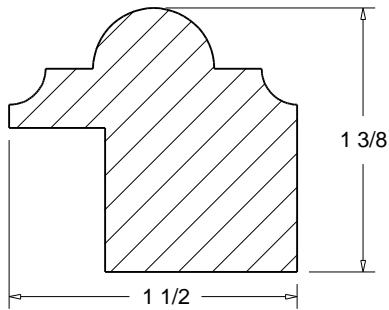


BB-08

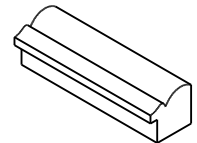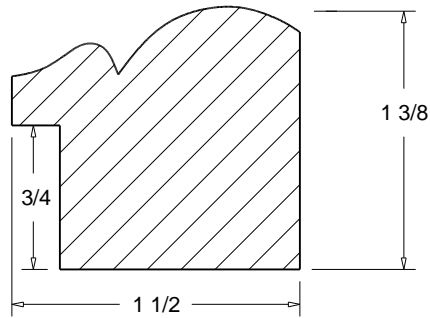

BB-09

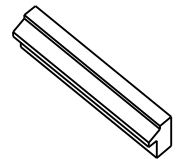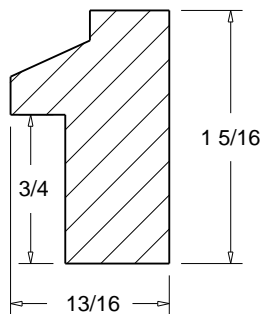


 Press code to view full Scale



HOMESTEAD
WOODWORKS

Crown Mould

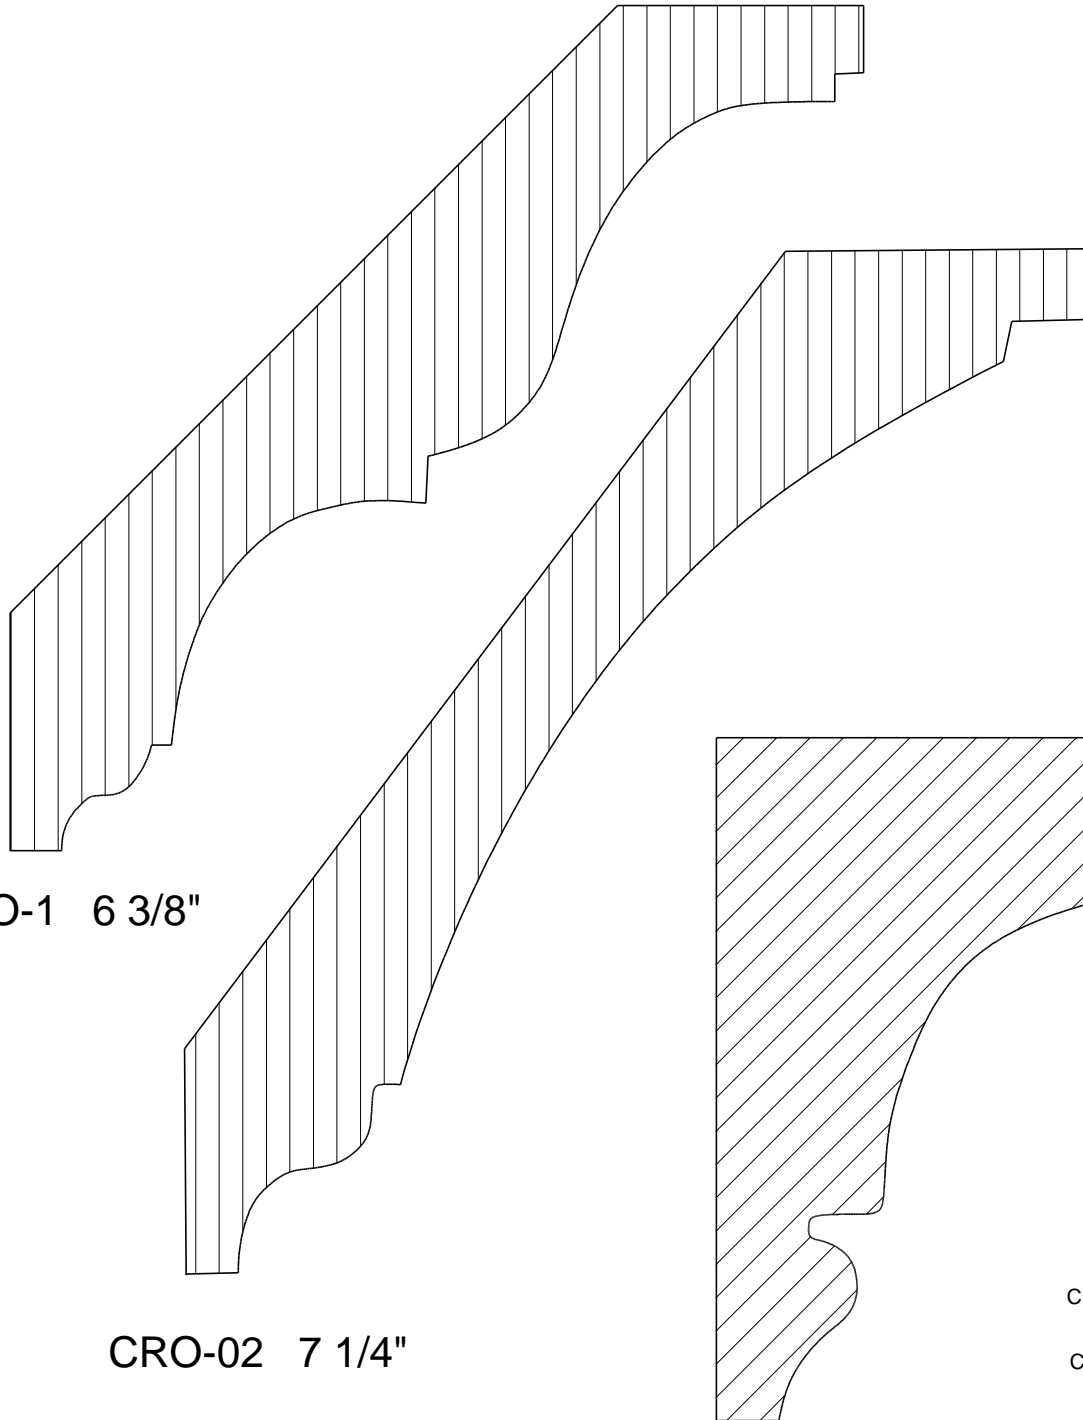


CRO-1 6 3/8"

CRO-02 7 1/4"

CRO-03 4 1/8"


A= PROJECTION
B= HEIGHT



CRO-01 (A 4 1/2")
(B 4 1/2")

CRO-02 (A 5 1/2")
(B 4 7/8")


CRO-03 (A 2")
(B 3 5/8")

 Press code to view full scale




HOMESTEAD
WOODWORKS


Crown Mould

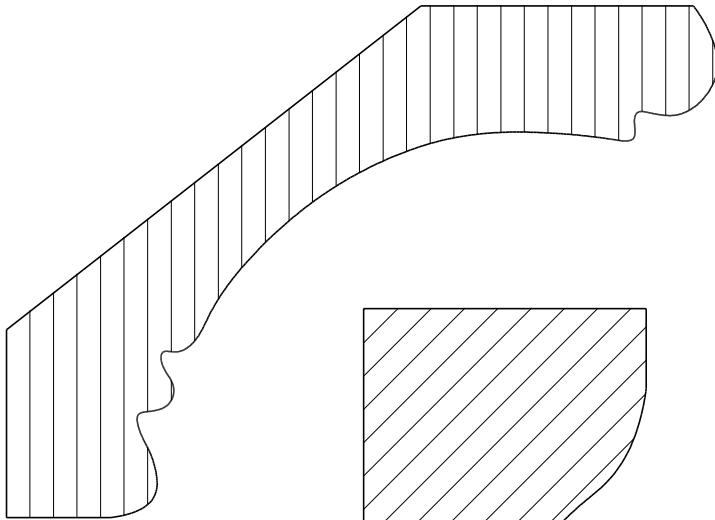

CRO-04 4 1/2"

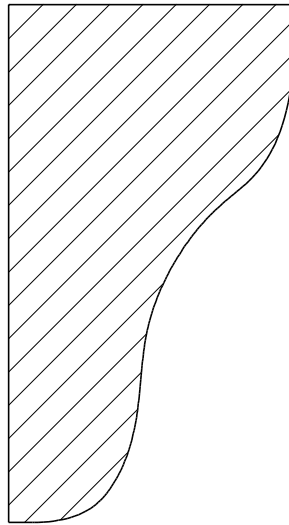


CRO-05 3 1/8"

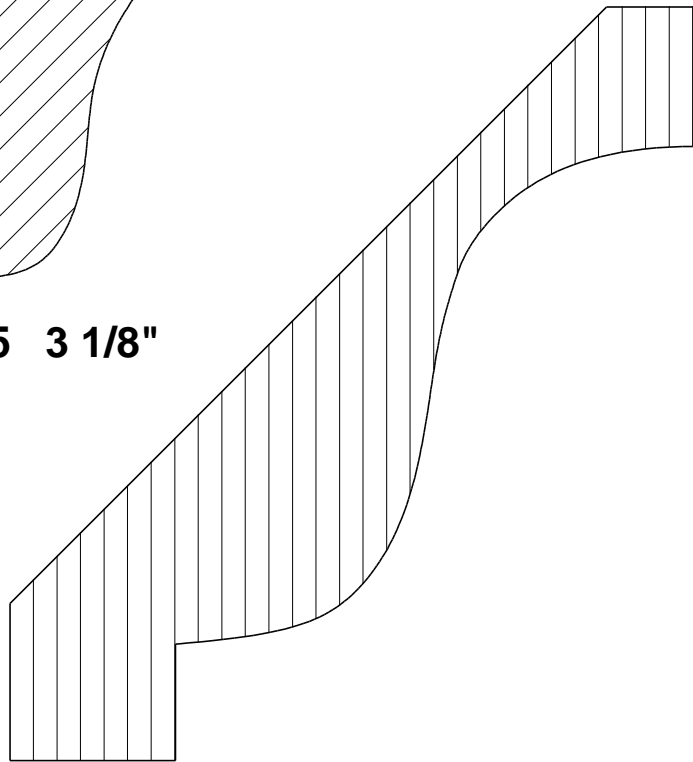

CRO-06 4 3/8"


**A=PROJECTION
B=HIGHT**



CRO-04 (A 3 5/8")
(B 2 3/4")

CRO-05 (A 1 1/2")
(B 2 3/4")


CRO-06 (A 3 5/8")
(B 4")

 Press code to view full scale




HOMESTEAD
WOODWORKS


Crown Mould

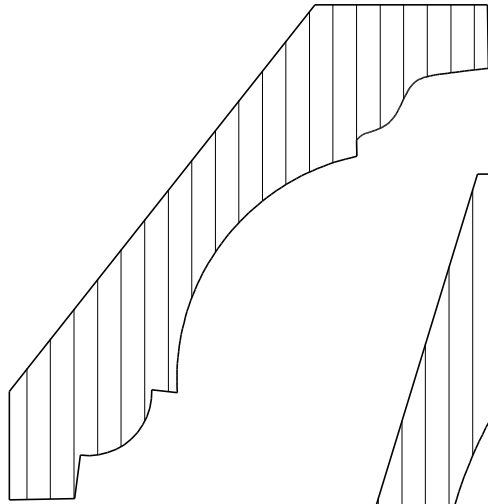

CRO-07 3 5/8"

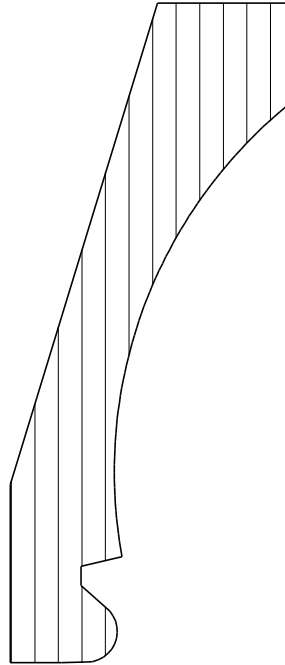


CRO-08 3 3/4"

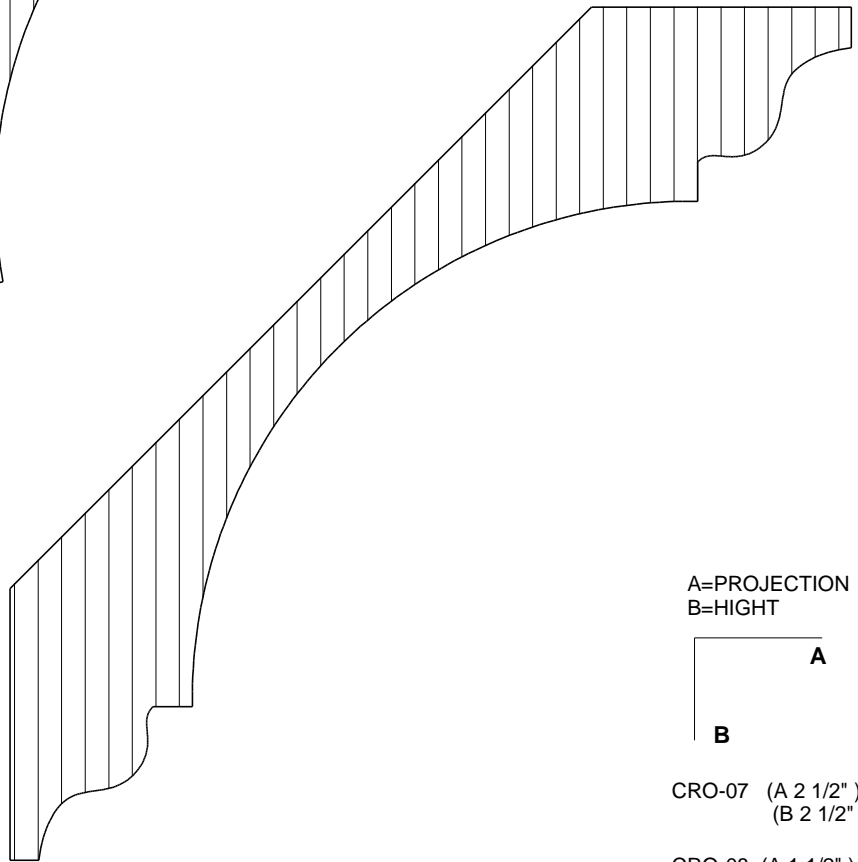

CRO-09 6 3/8"


A=PROJECTION
B=HIGHT



CRO-07 (A 2 1/2")
(B 2 1/2")

CRO-08 (A 1 1/2")
(B 3 1/2")


CRO-09 (A 4 1/2")
(B 4 1/2")

 Press code to view full scale




HOMESTEAD
WOODWORKS


Crown Mould

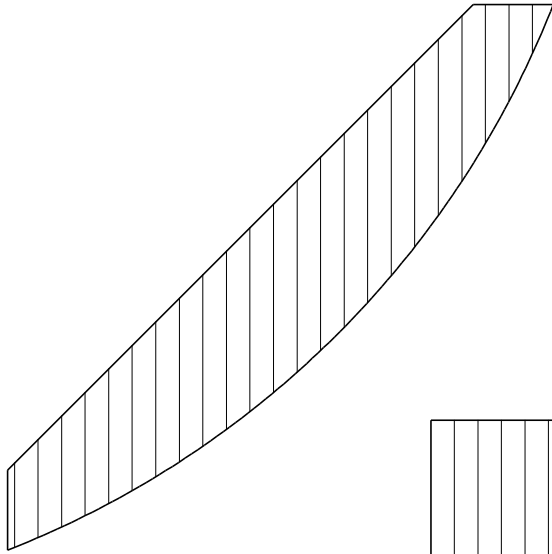

CRO-10 4 "

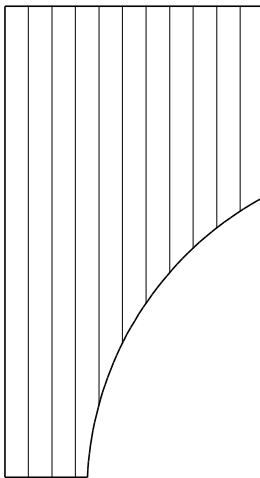


CRO-11 3 7/8"

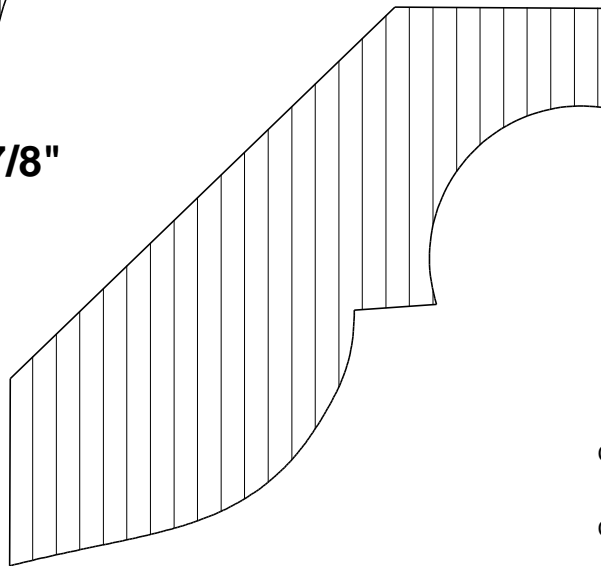

CRO-12 4 3/8"


A=PROJECTION
B=HIGHT



CRO-10 (A 2 7/8")
(B 2 7/8")

CRO-11 (A 1 3/8")
(B 2 1/2")


CRO-12 (A 3 1/8")
(B 3")

 Press code to view full scale




HOMESTEAD
WOODWORKS


Crown Mould

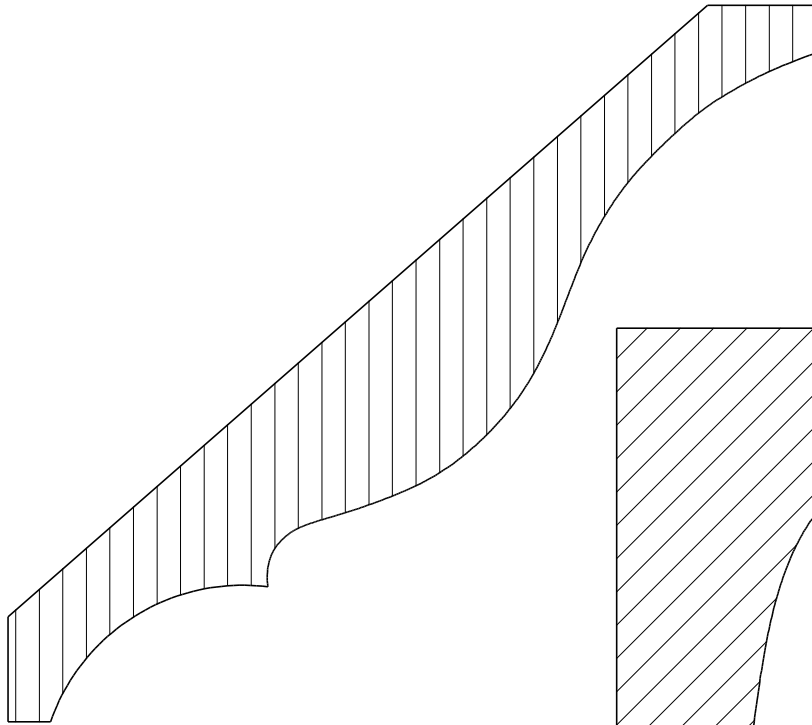

CRO-13 5 3/4 "

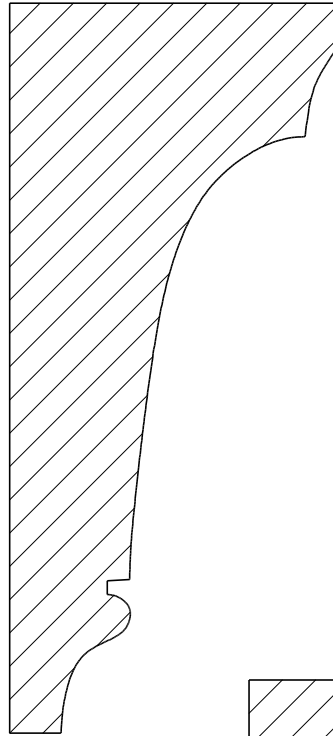


CRO-14 3 7/8"

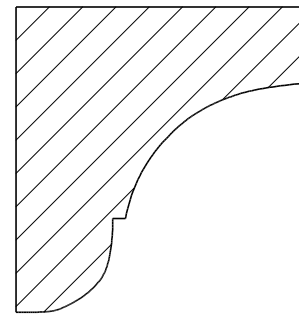

CRO-15 2 1/4"

A=PROJECTION
B=HIGHT



CRO-13 (A 4 1/4")
(B 3 3/4")

CRO-14 (A 1 3/4")
(B 3 7/8")

CRO-15 (A 1 9/16")
(B 1 5/8")




Press code to view full scale




HOMESTEAD
WOODWORKS


Crown Mould

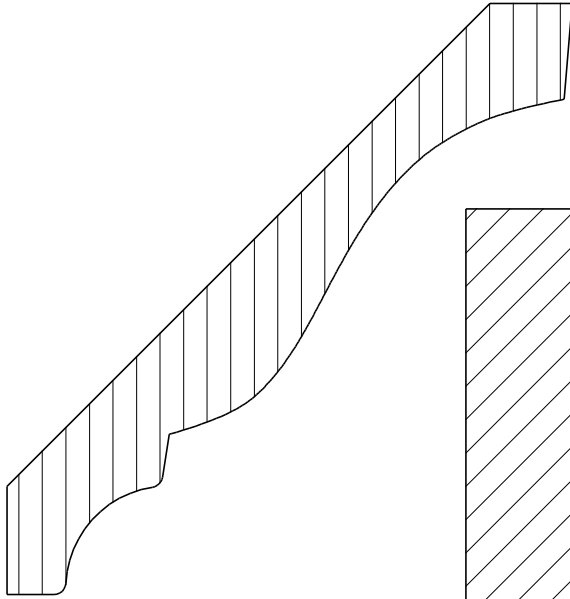

CRO-16 4 3/8 "

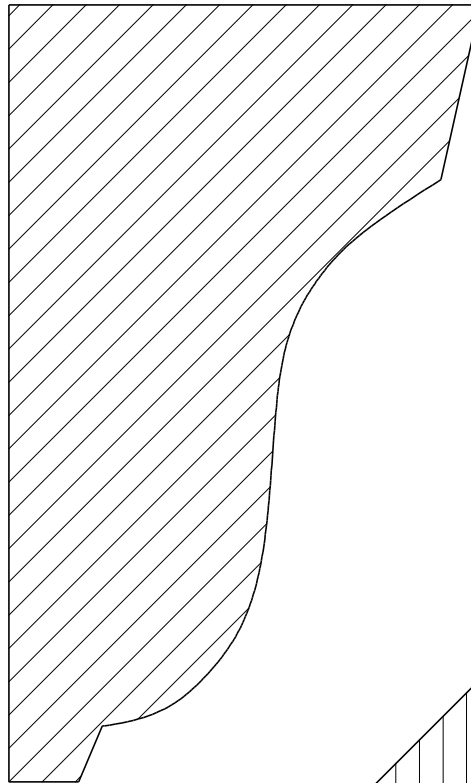


CRO-17 4 7/8"

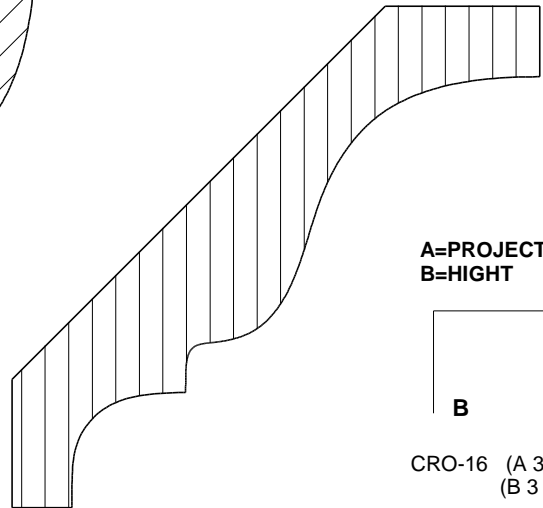

CRO-18 3 13/16"

**A=PROJECTION
B=HIGHT**



CRO-16 (A 3")
(B 3 1/8")

CRO-17 (A 2 1/2")
(B 4 1/8")

CRO-18 (A 2 13/16")
(B 2 5/8")




Press code to view full scale




HOMESTEAD
WOODWORKS


Crown Mould

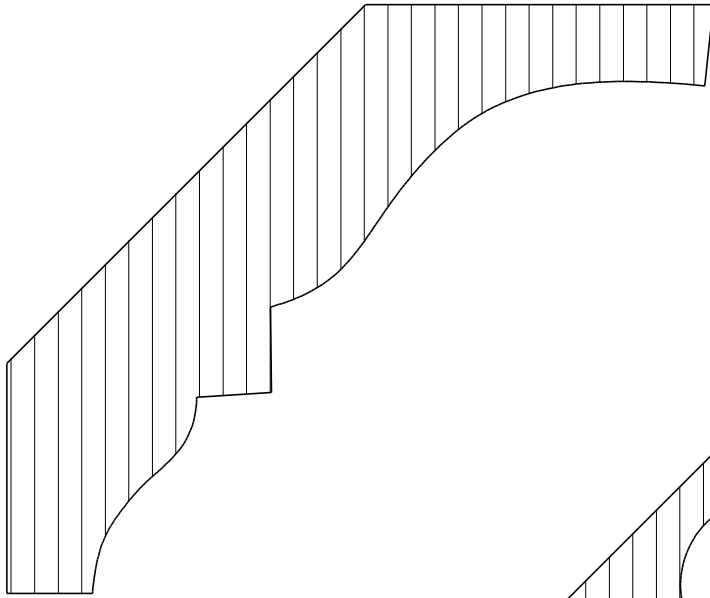

CRO-19 4 13/16 "

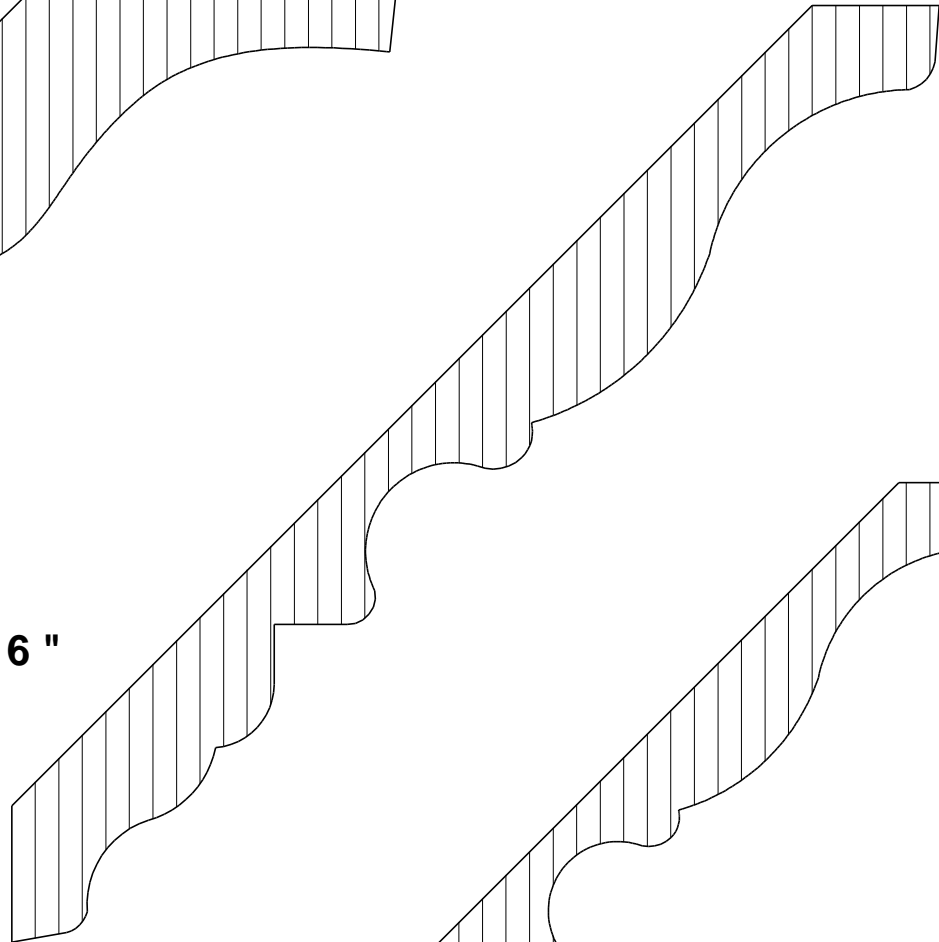


CRO-20 7"

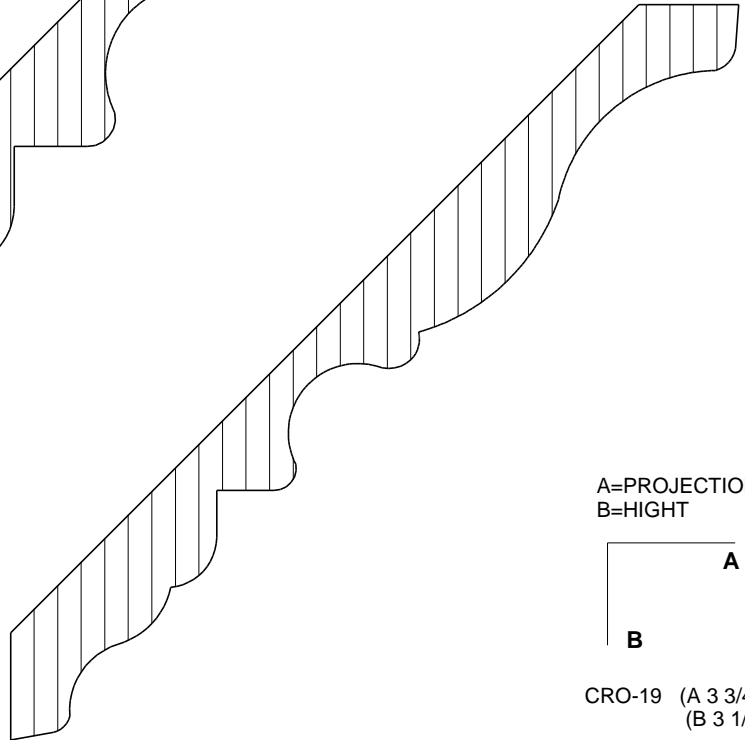

CRO-21 5 1/2"

A=PROJECTION
B=HIGHT



CRO-19 (A 3 3/4")
(B 3 1/8")

CRO-20 (A 4 15/16")
(B 4 15/16")

CRO-21 (A 3 13/16")
(B 3 7/8")




Press code to view full scale




HOMESTEAD
WOODWORKS


Crown Mould

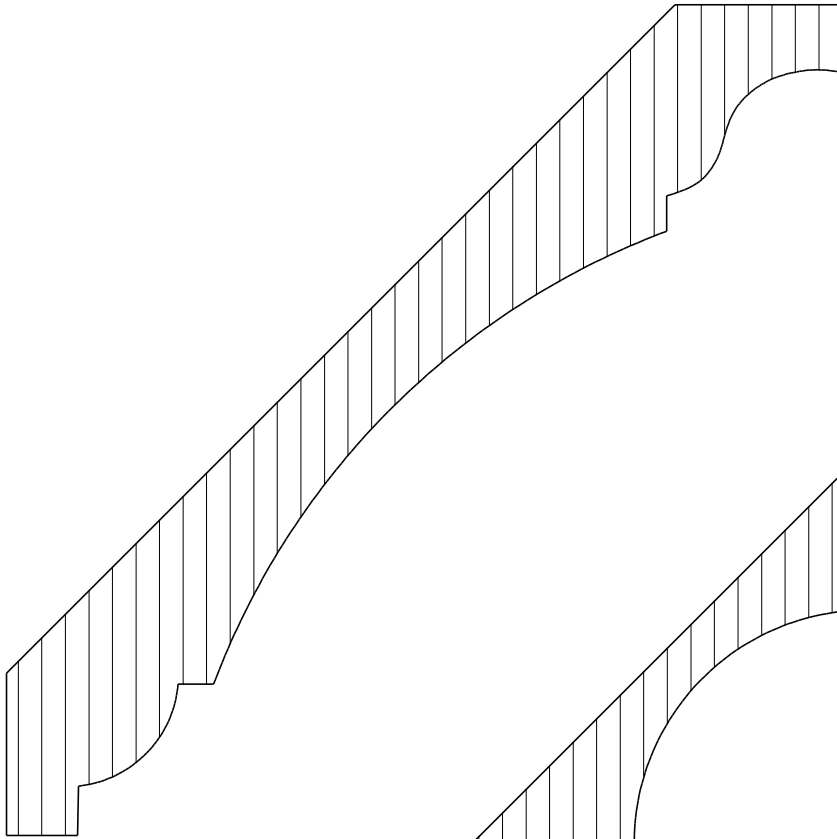

CRO-22 6 1/4 "

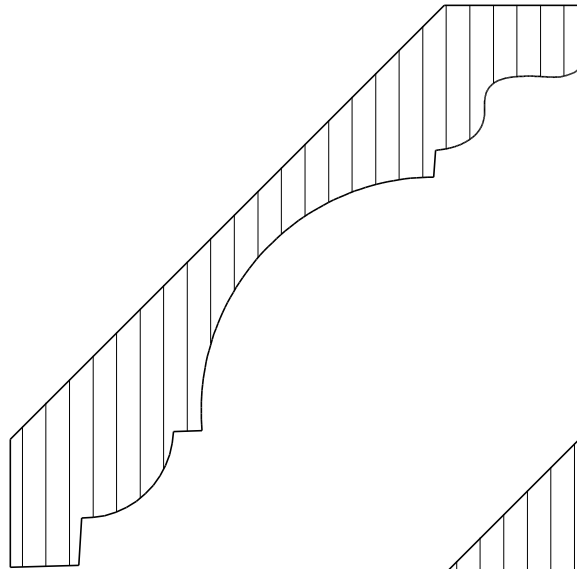


CRO-23 4 1/4"

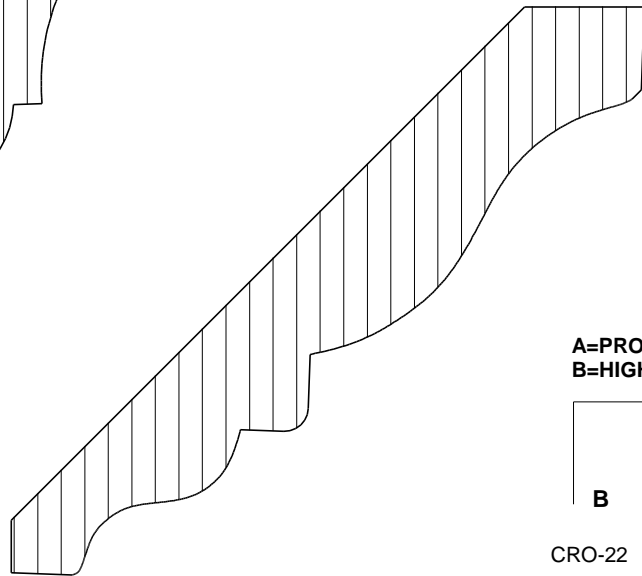

CRO-24 4 1/2"


**A=PROJECTION
B=HIGHT**



CRO-22 (A 4 7/16")
(B 4 7/16")

CRO-23 (A 3")
(B 3")


CRO-24 (A 3 3/8")
(B 3")

 Press code to view full scale



HOMESTEAD
WOODWORKS

Crown Mould

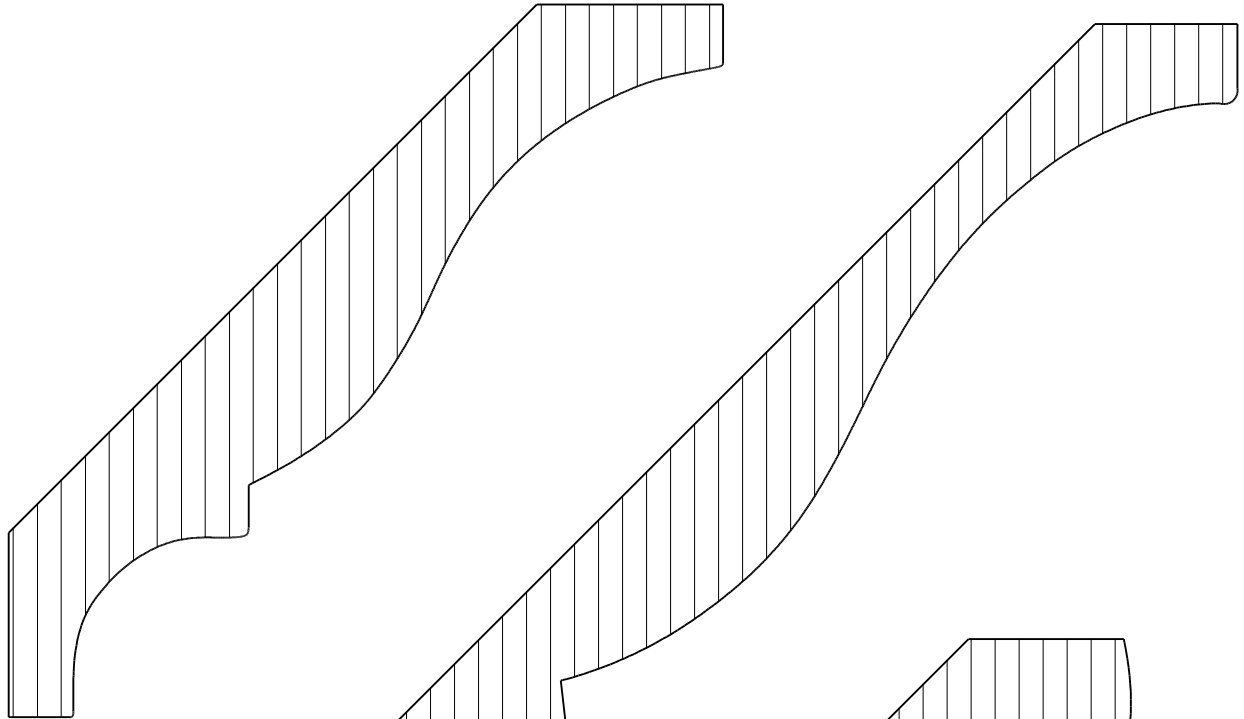


CRO-25 5 1/4 "

CRO-26 7 3/8"

CRO-27 4 1/2"


A=PROJECTION
B=HIGHT



CRO-25 (A 3 3/4")
(B 3 3/4")

CRO-26 (A 5 1/8")
(B 5 1/8")


CRO-27 (A 2 7/8")
(B 3 1/8")

 Press code to view full scale




HOMESTEAD
WOODWORKS


Crown Mould

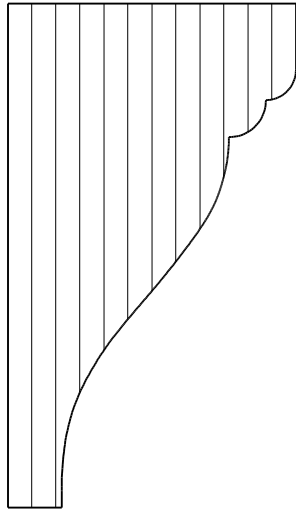

CRO-28 3 "

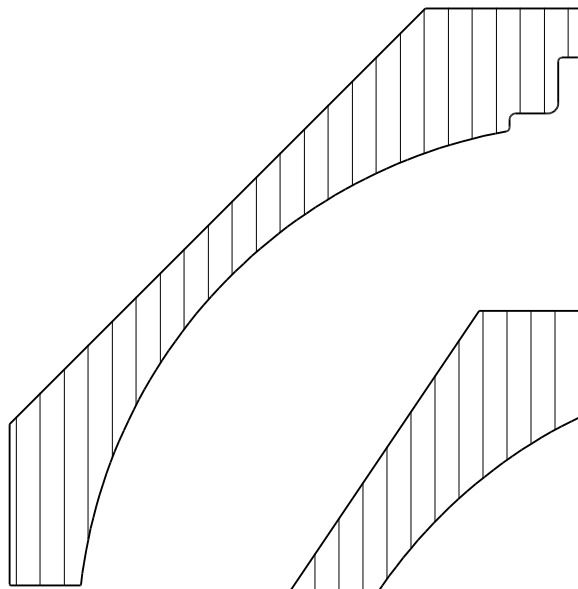


CRO-29 4 1/4"

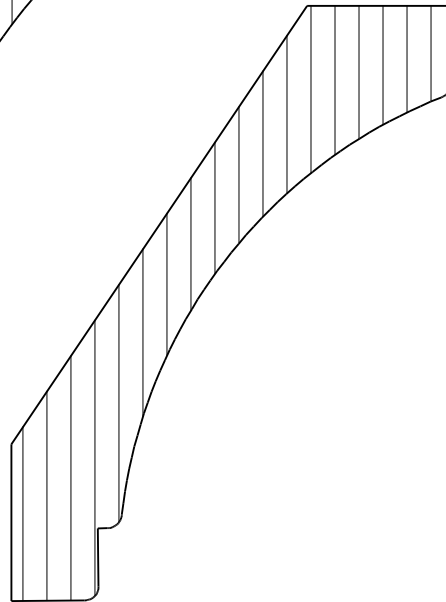

CRO-30 3 7/8"


A=PROJECTION
B=HIGHT



CRO-25 (A 1 1/2")
(B 2 5/8")

CRO-29 (A 3")
(B 3")


CRO-30 (A 2 1/4")
(B 3 1/8")

 Press code to view full scale




HOMESTEAD
WOODWORKS

Crown Mould

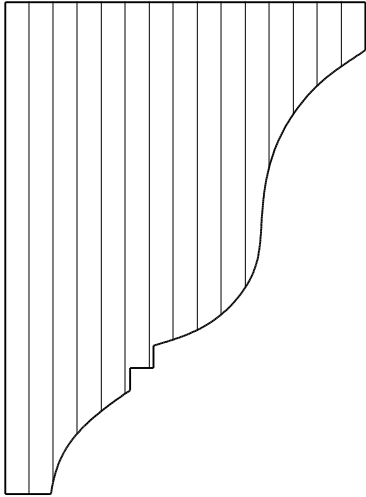


CRO-31 3 3/16 "

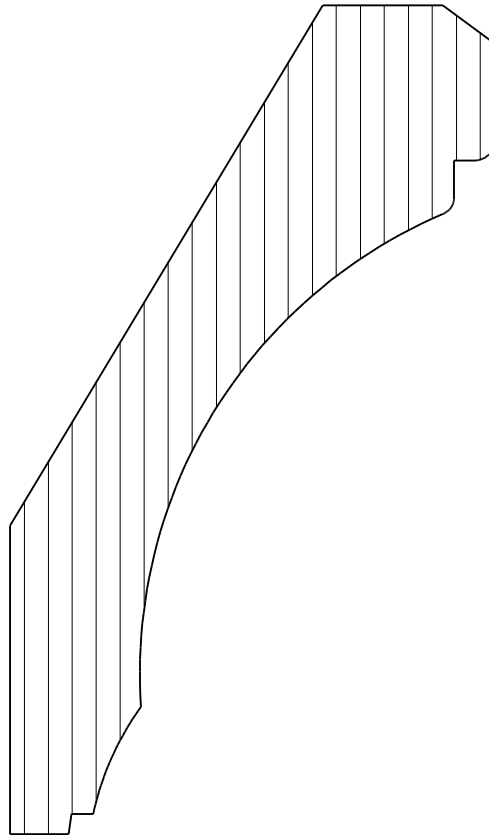


CRO-32 4 5/8"

A=PROJECTION
B=HIGHT



CRO-31 (A 1 7/8")
(B 2 9/16")

CRO-32 (A 2 1/2")
(B 4 3/16")



 Press code to view full scale





HOMESTEAD
WOODWORKS

Chair Rail



CHA-01

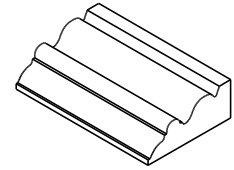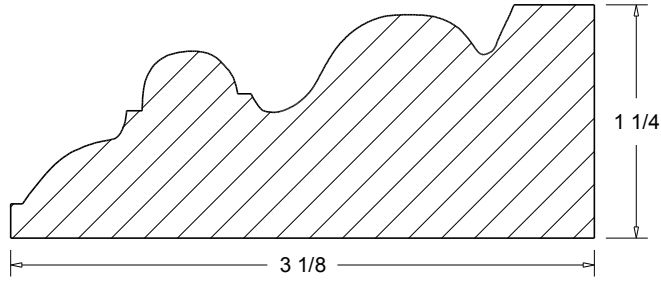



CHA-02

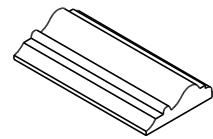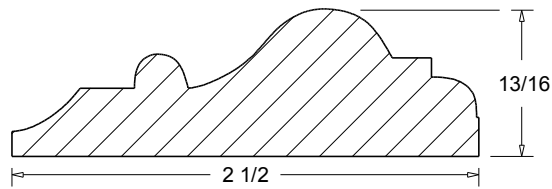



CHA-03

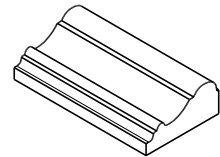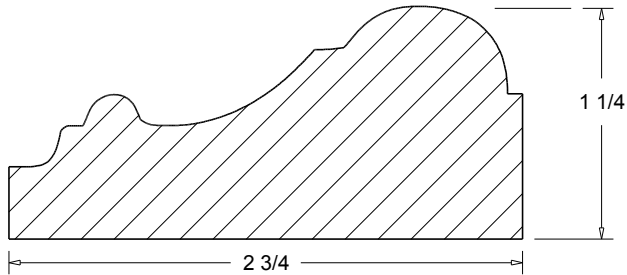


CHA-04

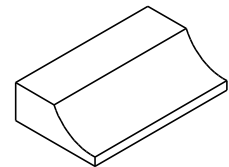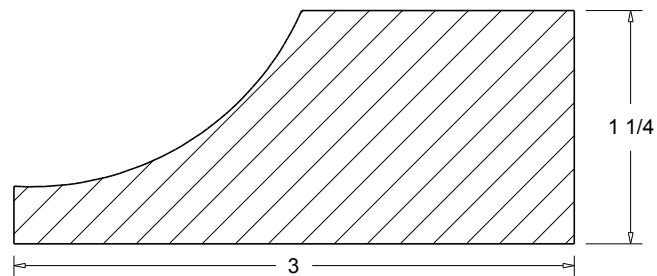

Cha-05

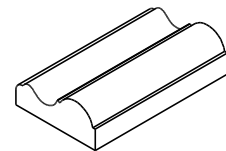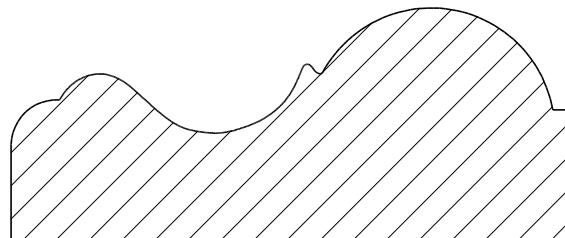


 Press code to view full Scale




Chair Rail


CHA-06

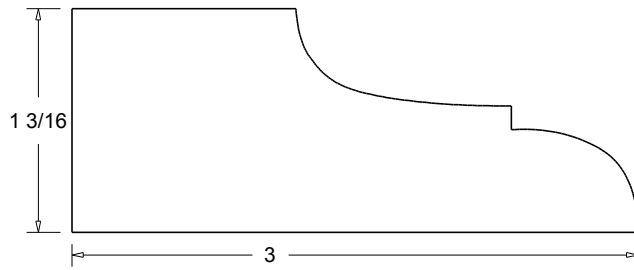


CHA-07

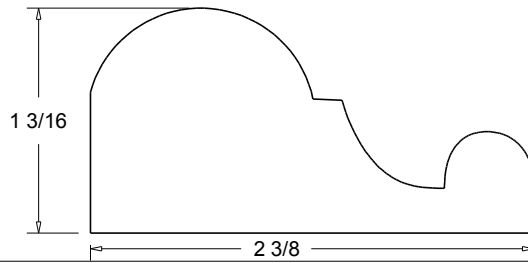

CHA-08


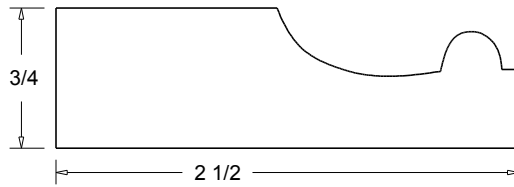


 Press code to view full Scale





Panel Mould



PAN-01

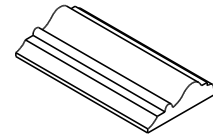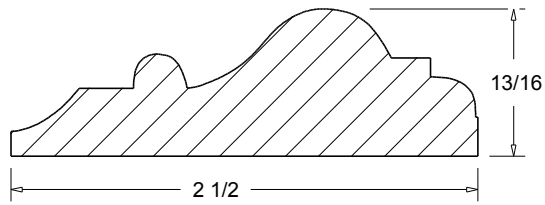



PAN-02

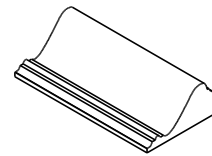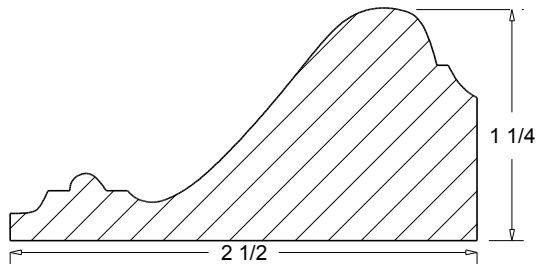



PAN-03

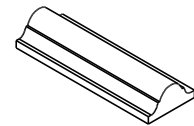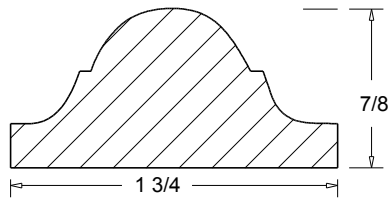



PAN-04

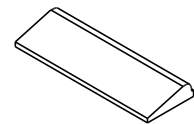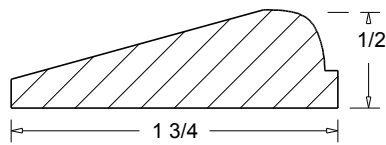


PAN-05

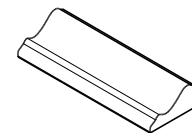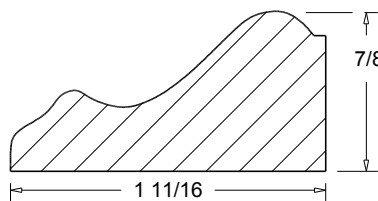



PAN-06

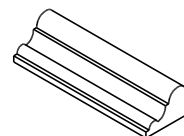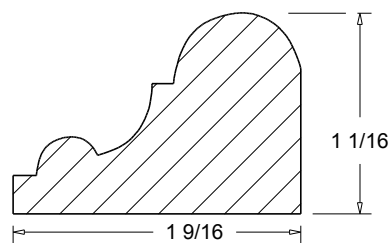


 Press code to view full Scale

Panel Mould



PAN-07

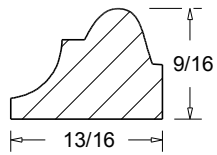



PAN-08





PAN-09

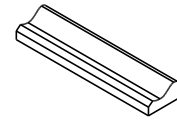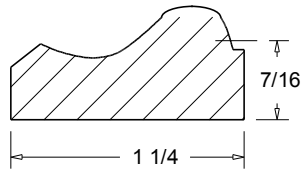



PAN-10

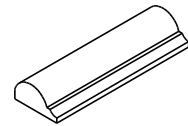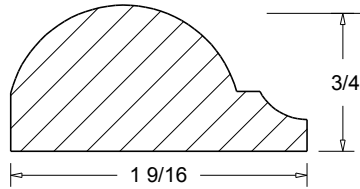


PAN-11

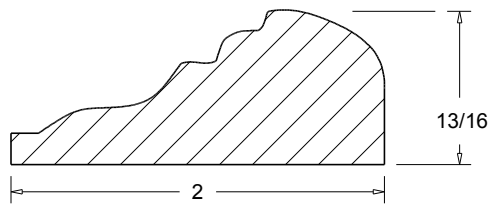

PAN-12

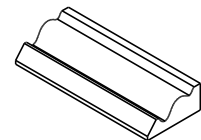
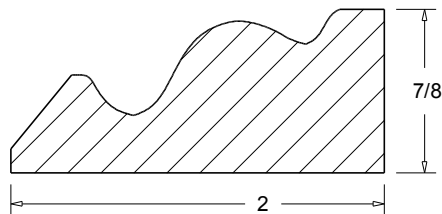


 Press code to view full Scale





Panel Mould



PAN-13

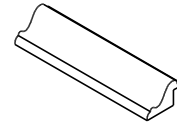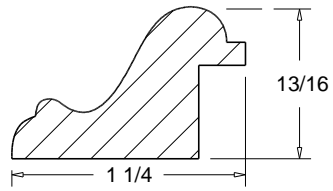



PAN-14

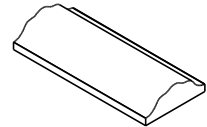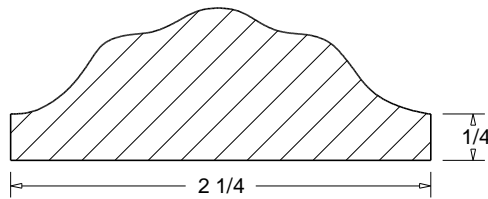



PAN-15

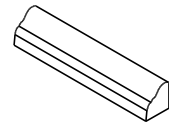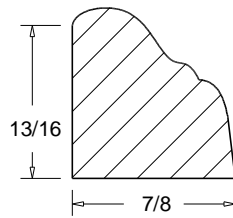



PAN-16

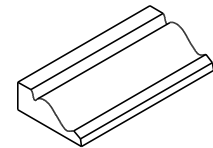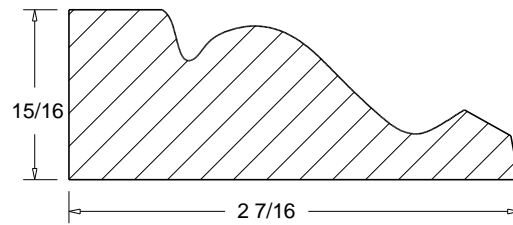



PAN-17

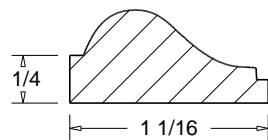


PAN-18

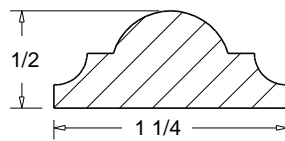



PAN-19

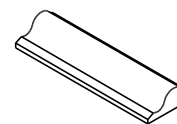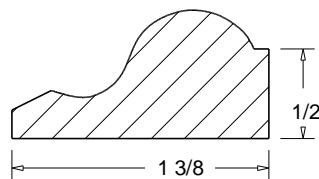



 Press code to view full Scale

Panel Mould



PAN-20

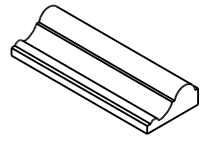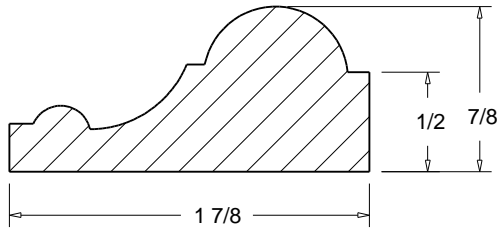



PAN-21

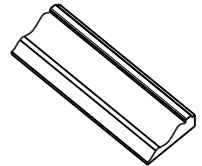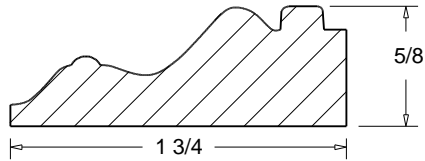


PAN-22

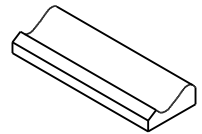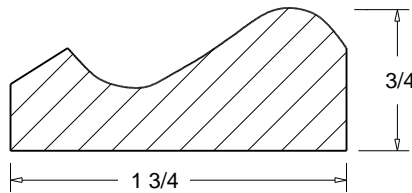



PAN-23

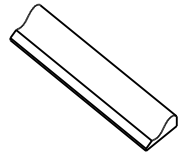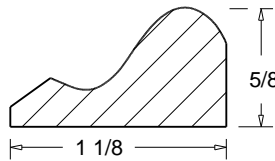



PAN-24

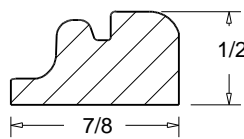


PAN-25

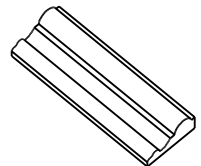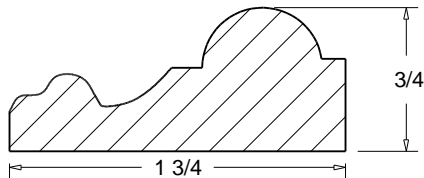

PAN-26

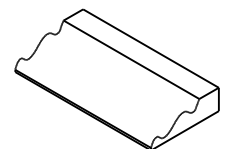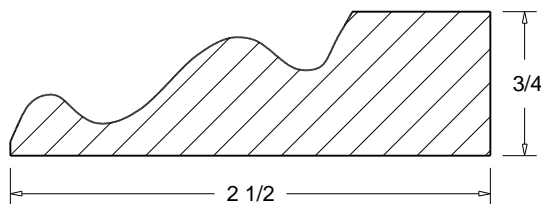



 Press code to view full Scale





HOMESTEAD
WOODWORKS

Panel Mould



PAN-27

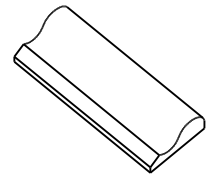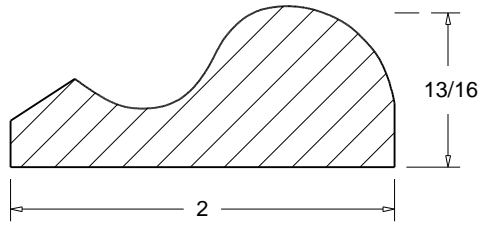



PAN-28

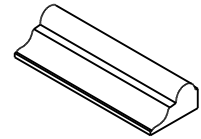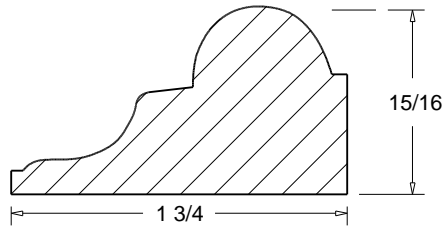



PAN-29

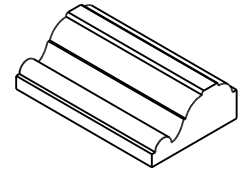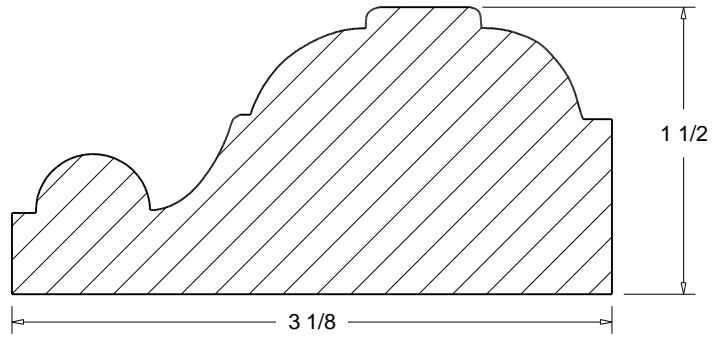



PAN-30

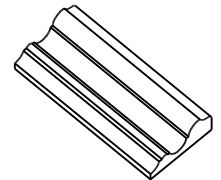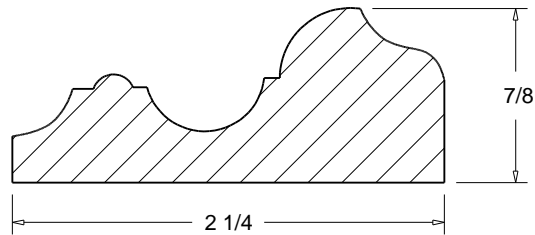


PAN-31

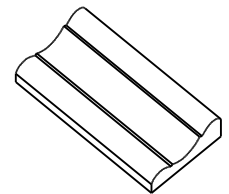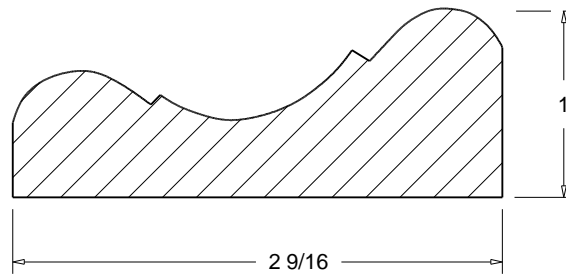

PAN-32

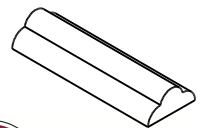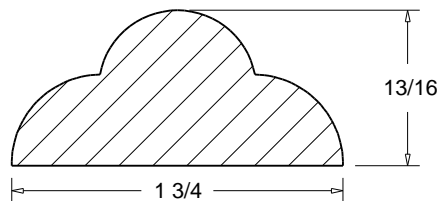



 Press code to view full Scale





HOMESTEAD
WOODWORKS

Panel Mould



PAN-33

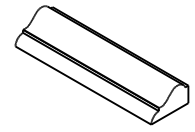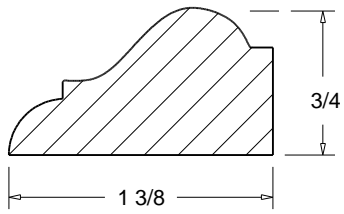



PAN-34

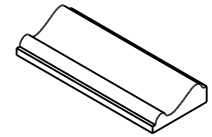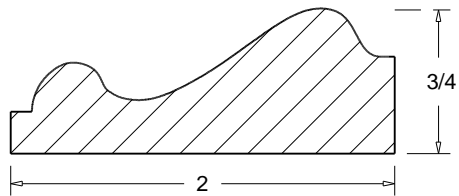


PAN-35

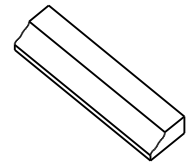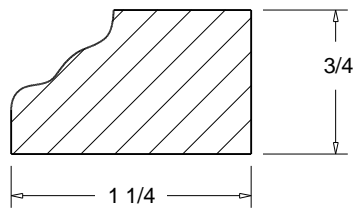

PAN-36

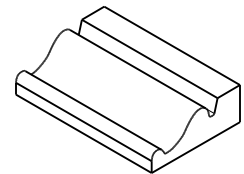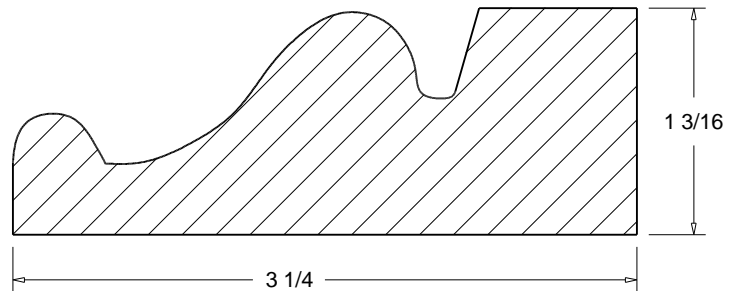



 Press code to view full Scale





HOMESTEAD
WOODWORKS

Window Sill



SILL-01

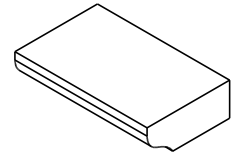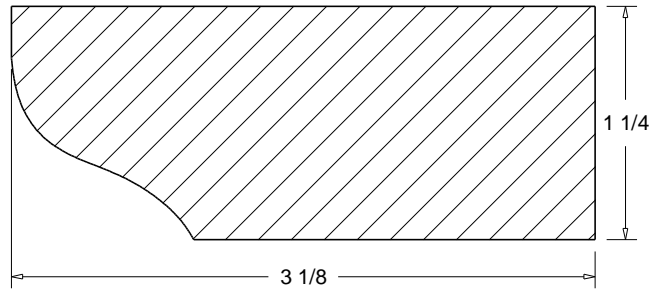



SILL-02

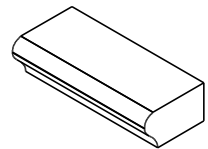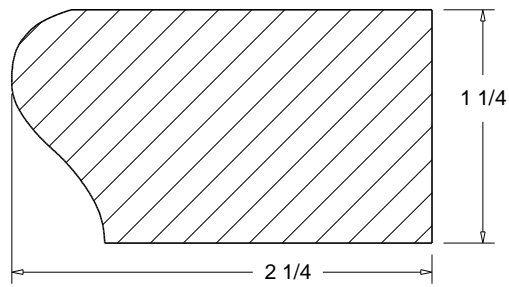

SILL-03

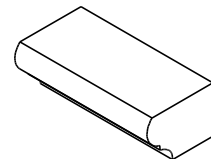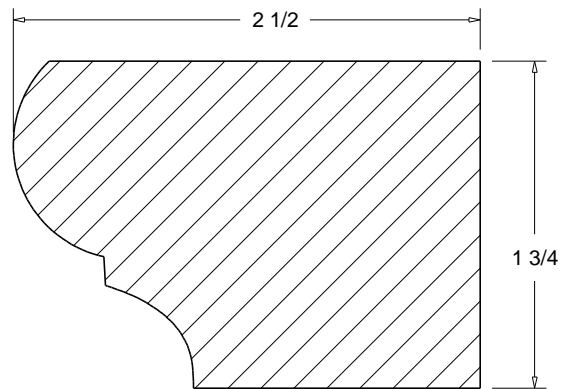



SILL-03

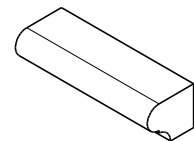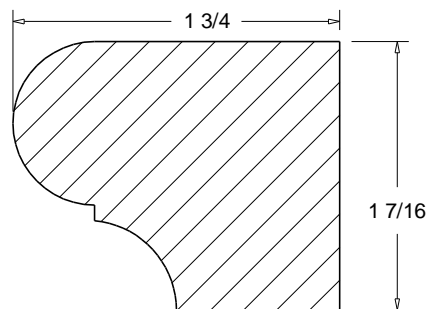



Press code to view full scale

T & G



TG-01

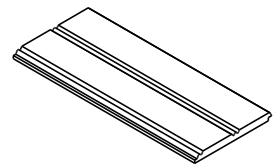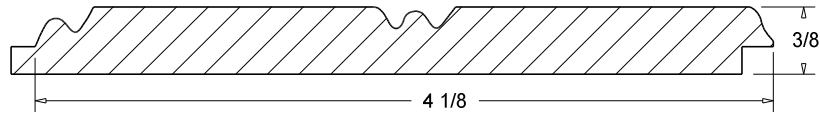



TG-02

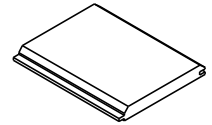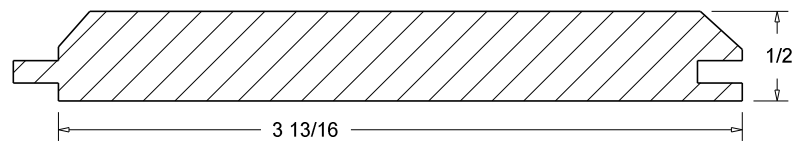



TG-03

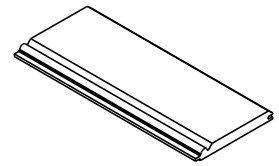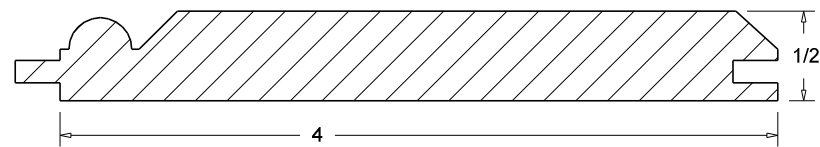



TG-04

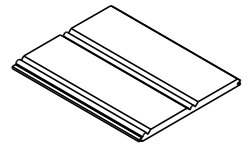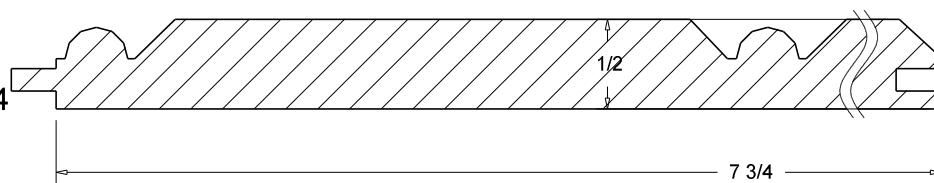

TG-05

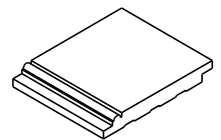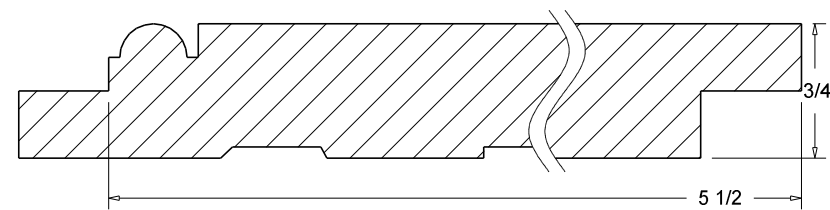

TG-06

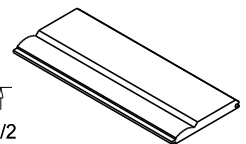
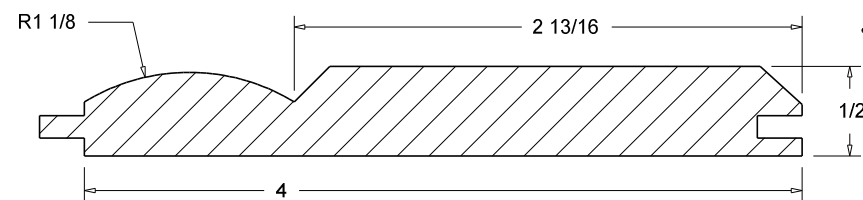



Press code to view full Scale



T & G

TG-07


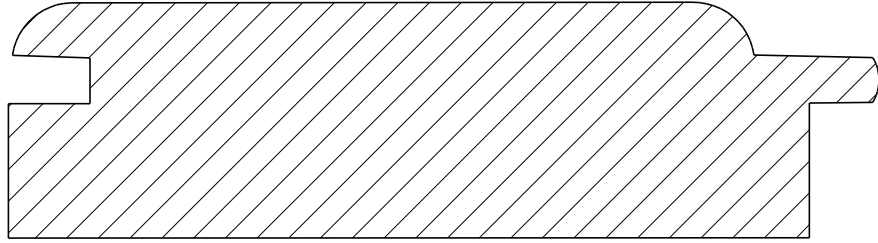


 Press code to view full Scale





Hand Rail



HR-01
1/2=1" Scale

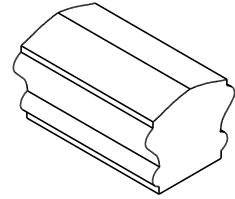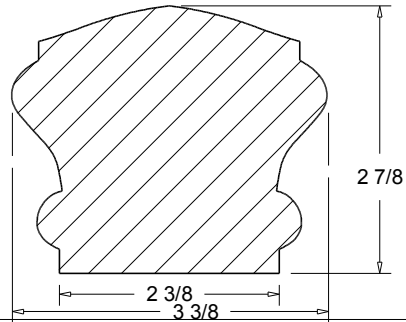



HR-02
1/2=1" Scale

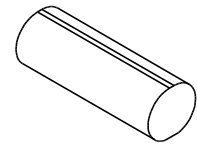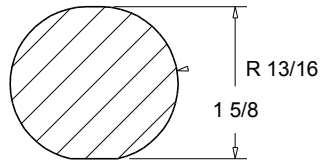



HR-03
1/2=1" Scale

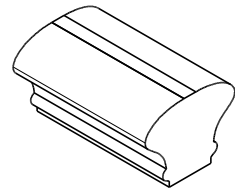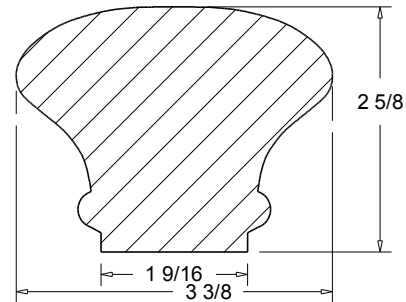


HR-04
1/2=1 scale

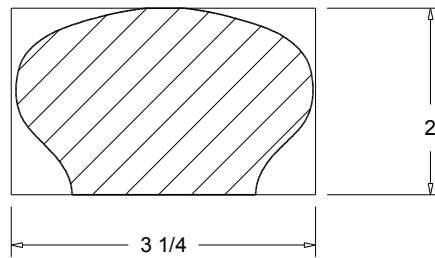

HR-05
1/2=1" Scale

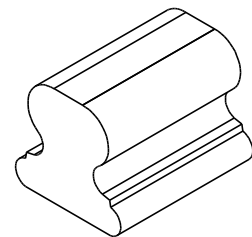
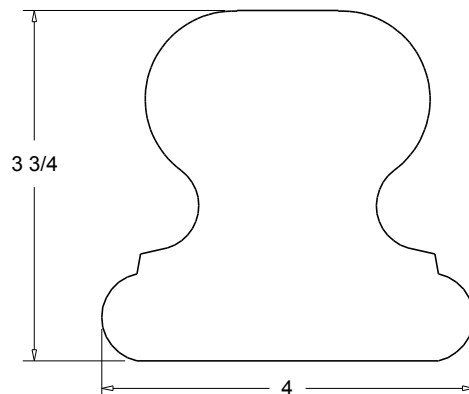


 Press code to view full Scale





Hand Rail

HR-06

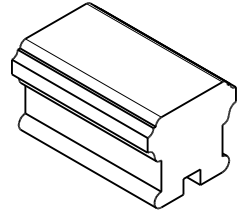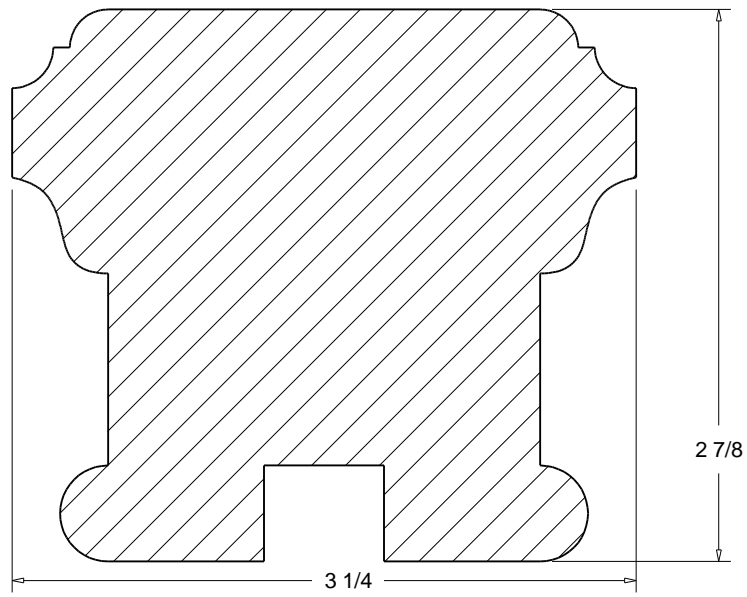

HR-07

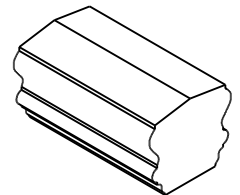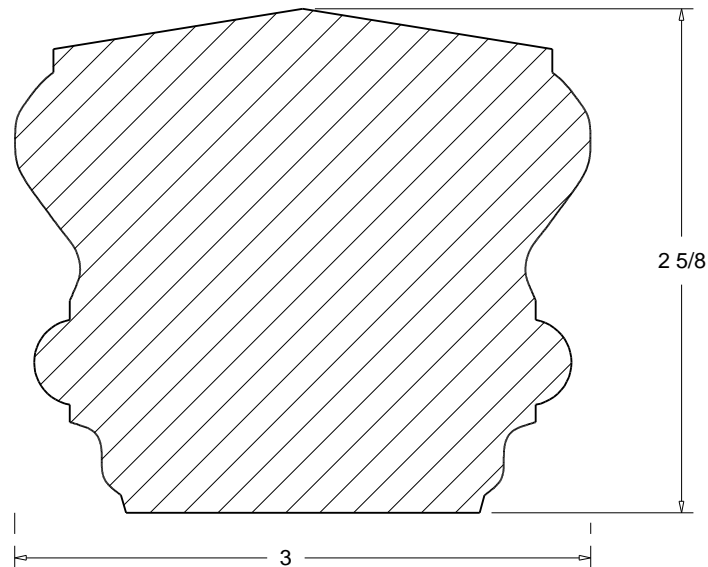



Press code to view full Scale





HOMESTEAD
WOODWORKS


Hand Rail

HR-08

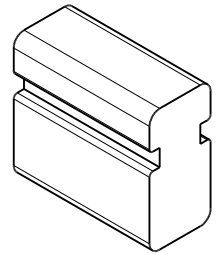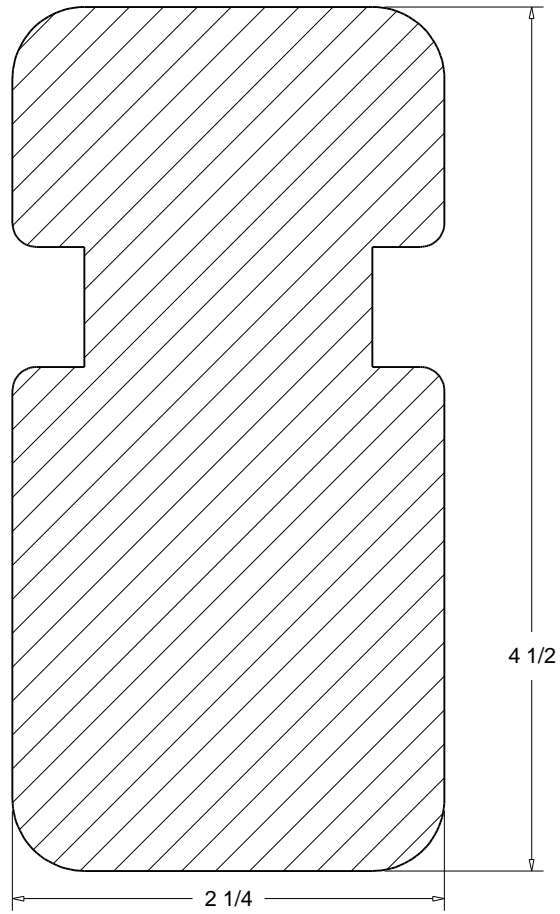

HR-09

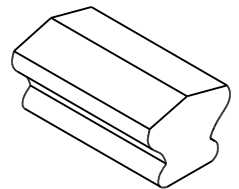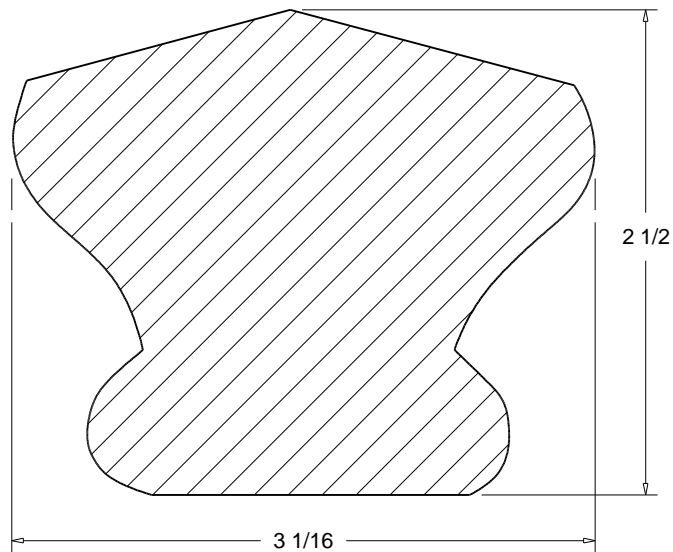


 Press code to view full Scale




HOMESTEAD
WOODWORKS

Hand Rail


HR-10

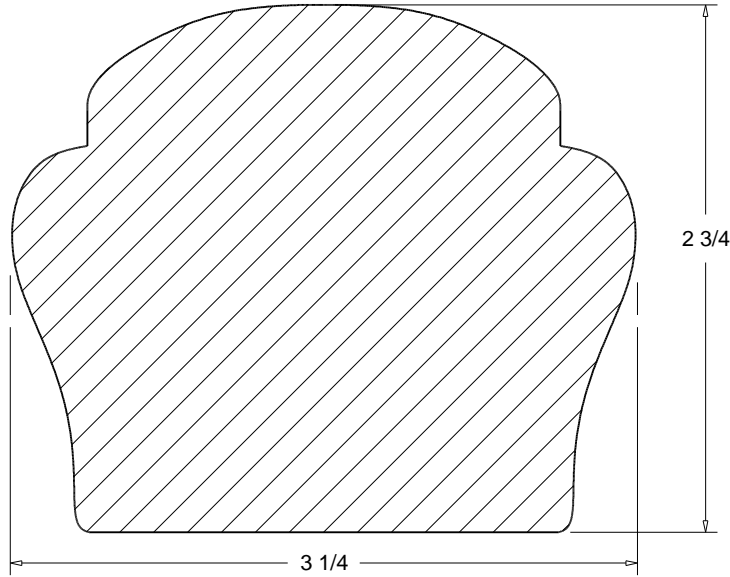

HR-11

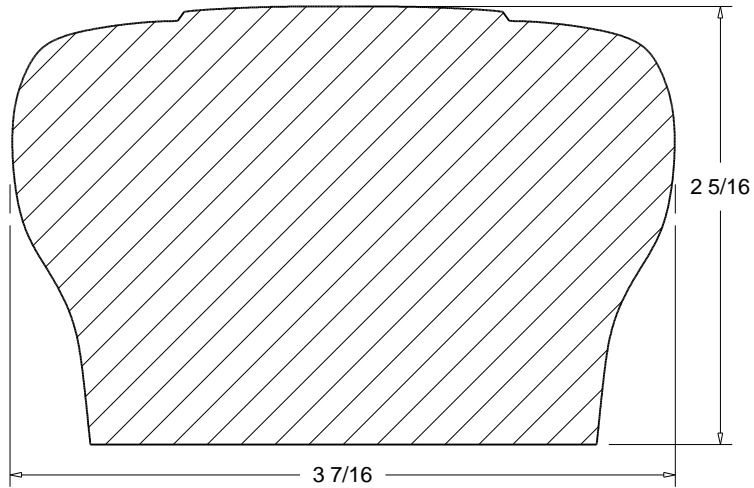

HR-12

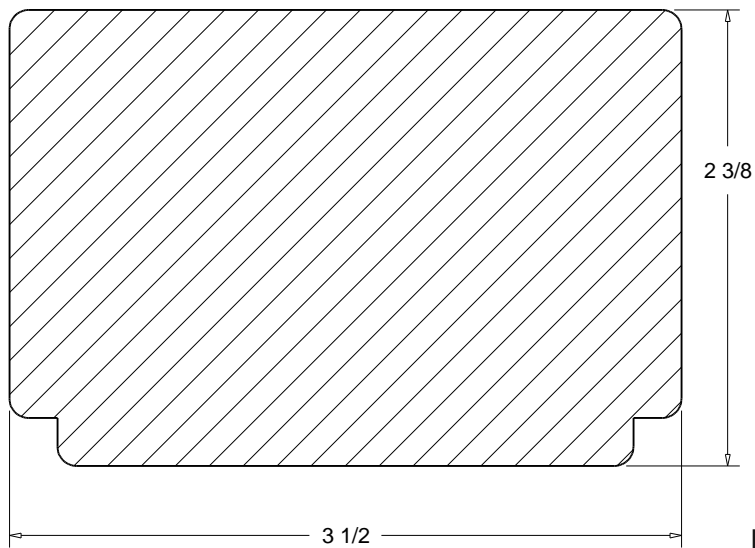


Press code to view full Scale




HOMESTEAD
WOODWORKS


Hand Rail

HR-13

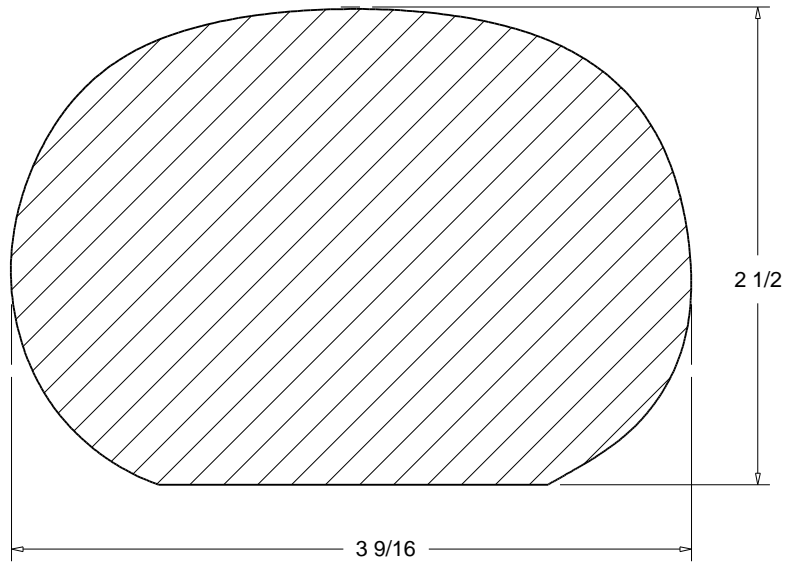

HR-14

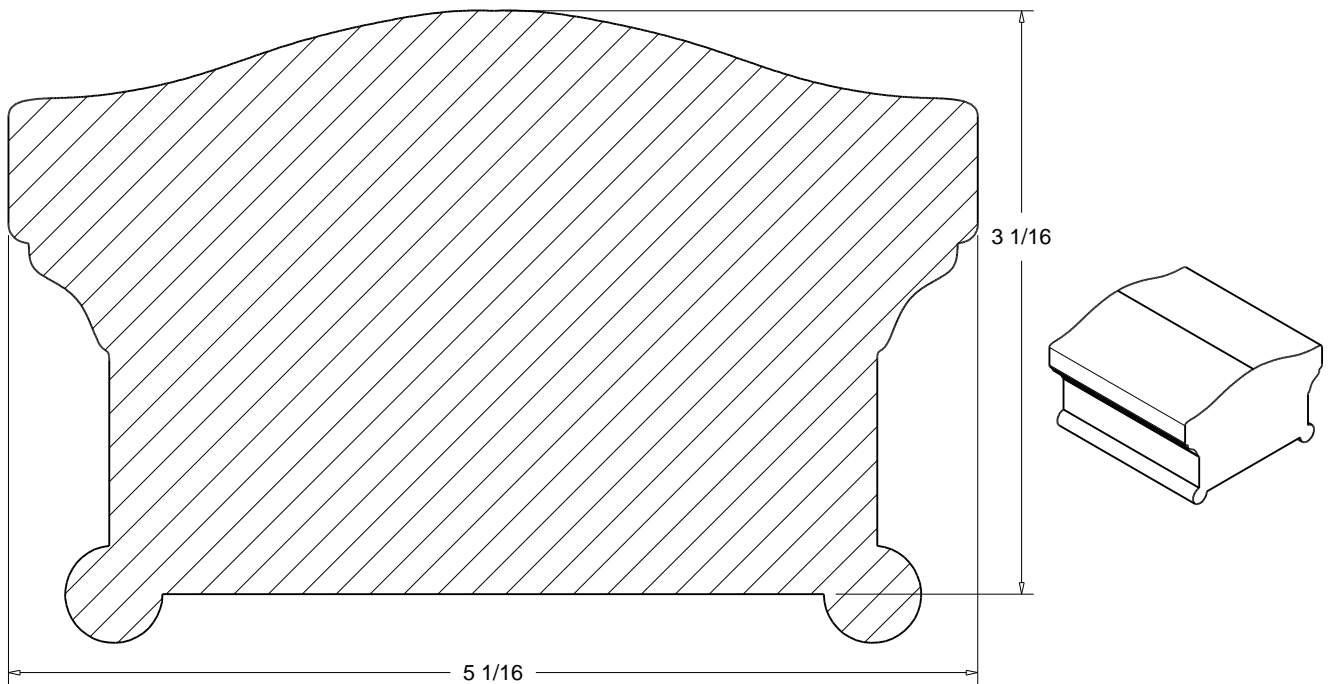


 Press code to view full Scale




HOMESTEAD
WOODWORKS


Base Board

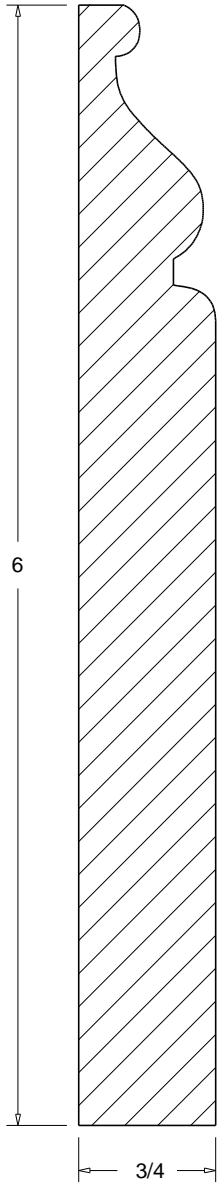


BASE-01

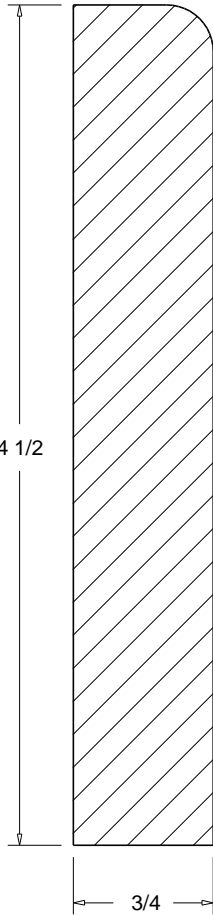

BASE-02

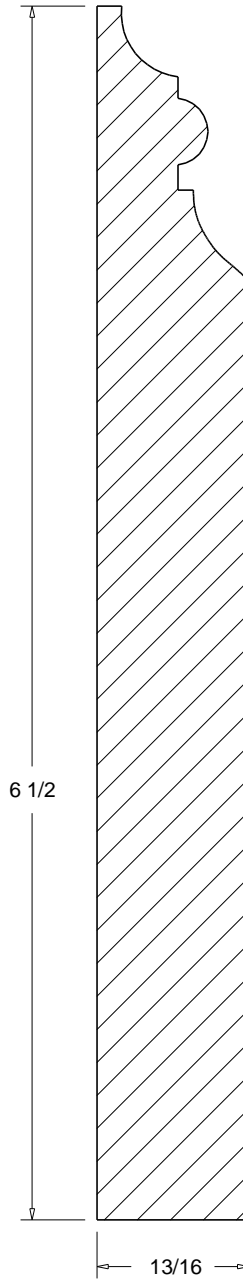

BASE-03

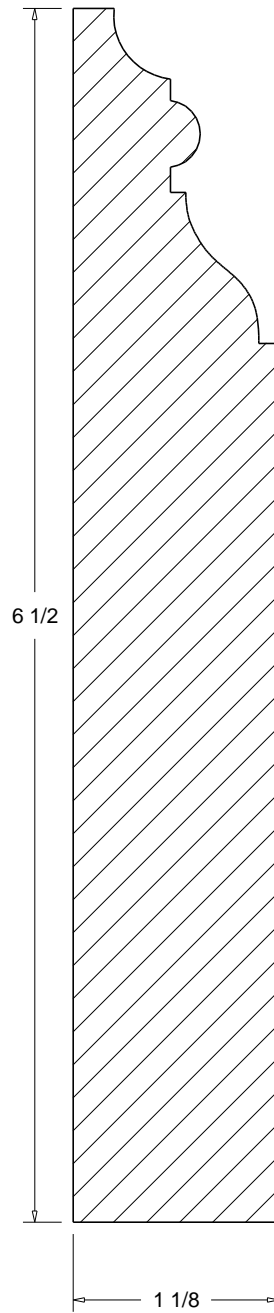


BASE-04



Press code to view full scale




Base Board

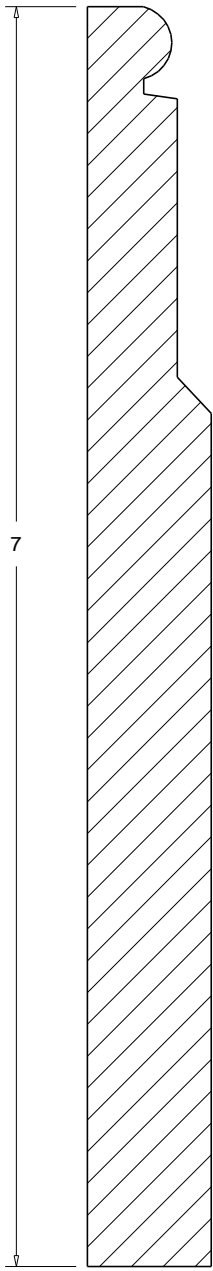

11/16


BASE-05

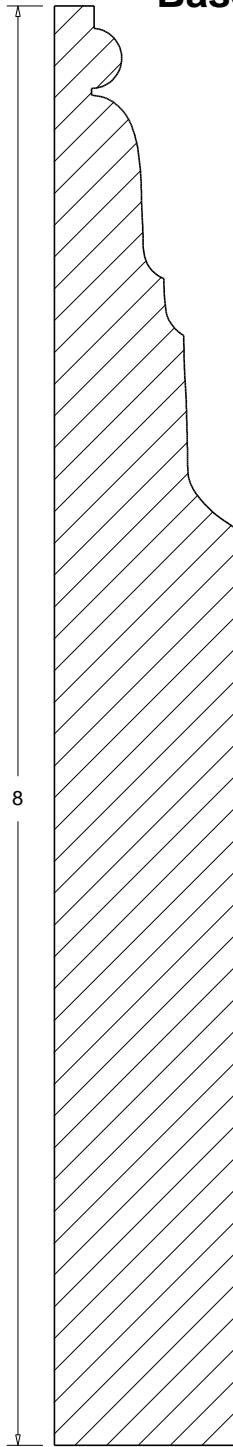

8

1


BASE-06

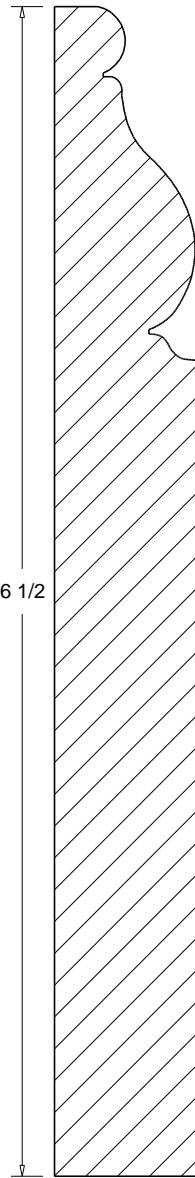

6 1/2

13/16

BASE-07

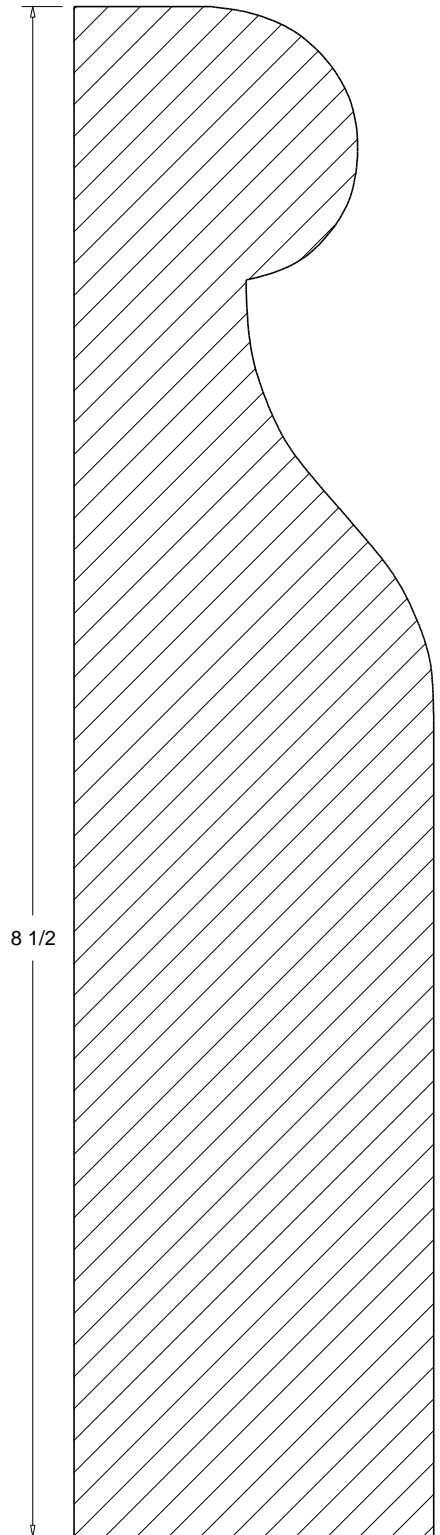

8 1/2

2

BASE-08





Press code to view full scale



HOMESTEAD
WOODWORKS

Base Board

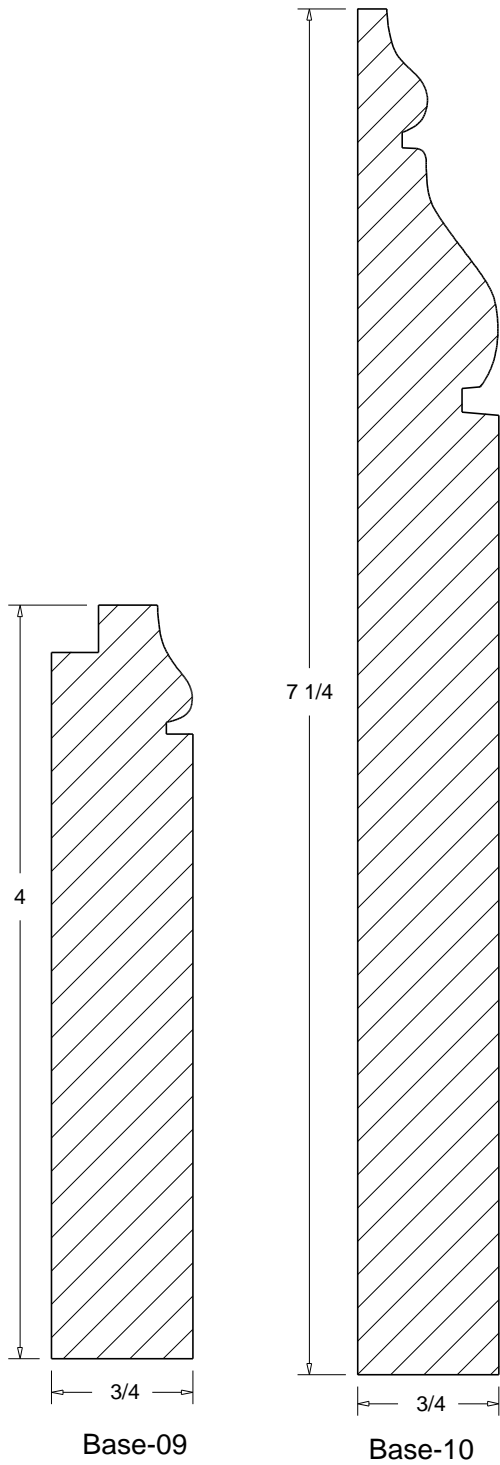



 Press code to view full scale





HOMESTEAD
WOODWORKS

Door Stop



DS-01





DS-02

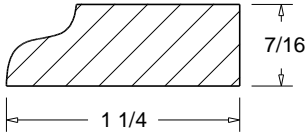

DS-03

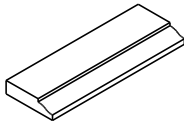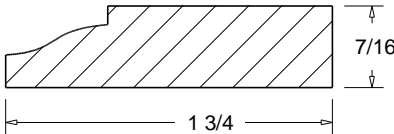

DS-04


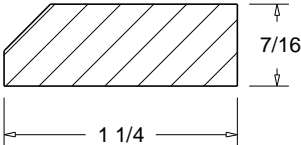


 Press code to view full scale






Kitchen Door Rail

KD-01

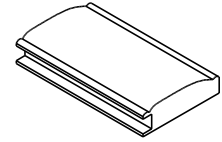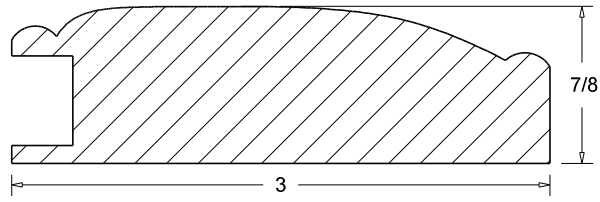

KD-02


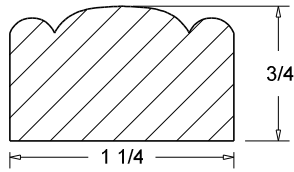


 Press code to view full Scale





Plinth Blocks



PLINTH-01

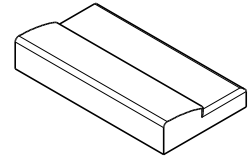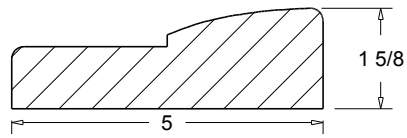



PLINTH-02

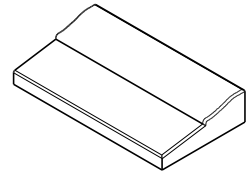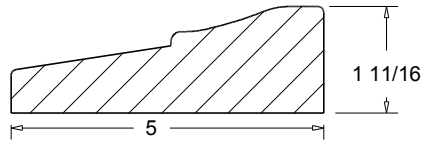

PLINTH-03

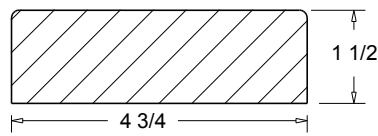

PLINTH-04

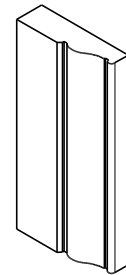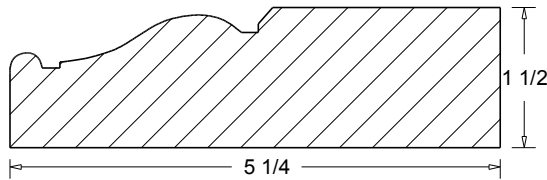


Press code to view full Scale




Shiplap

SHL-01

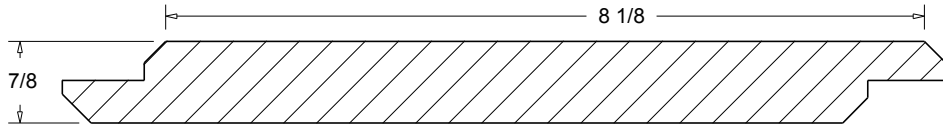

SHL-02


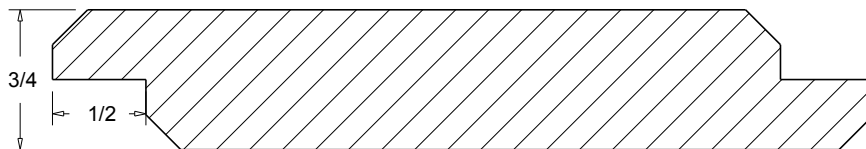


Press code to view full Scale





Raised Panel



RP-01

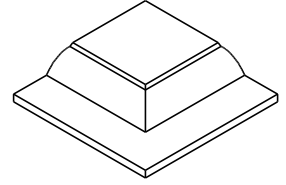



RP-02

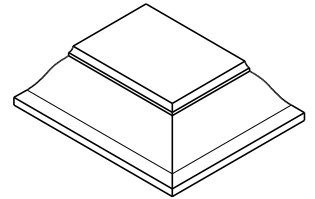



RP-03

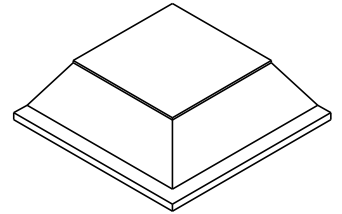

RP-04

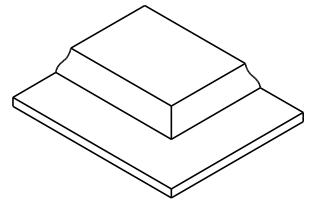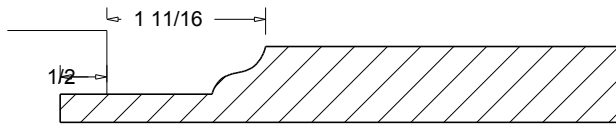



RP-05

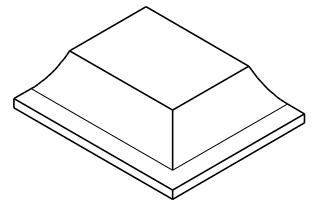



Press code to view full Scale


Brick Mould

BM-01

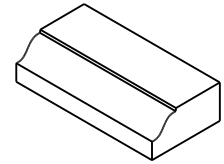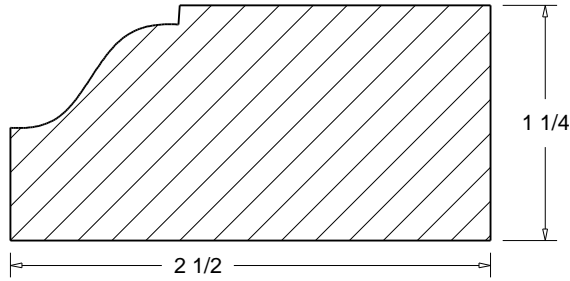


MB-02

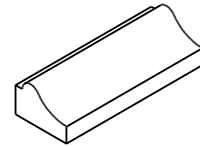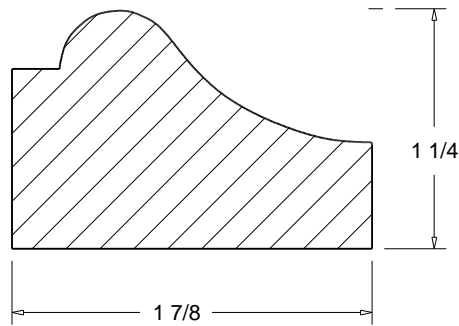


 Press code to view full Scale


Door Profile

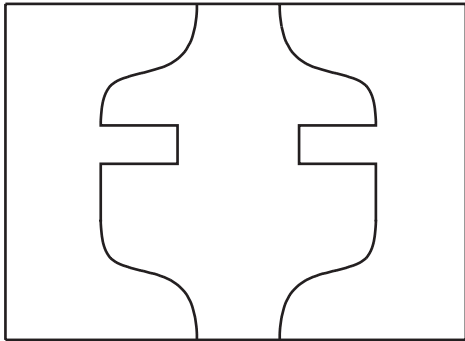


FR-01

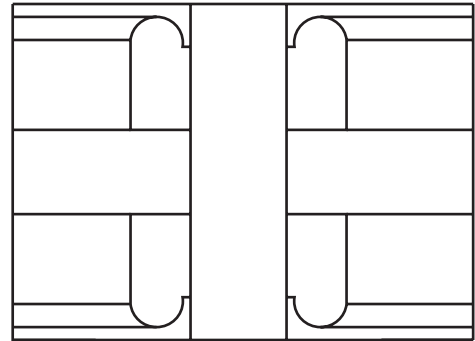


FR-02

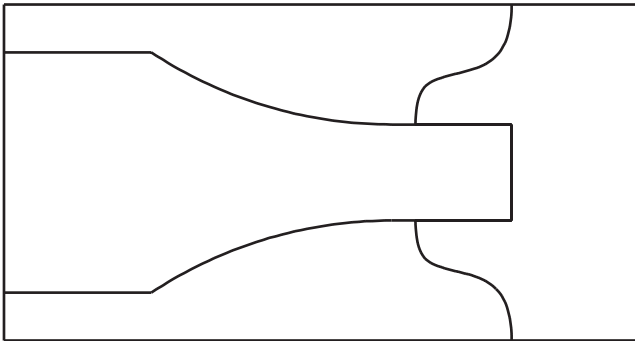


SR-01

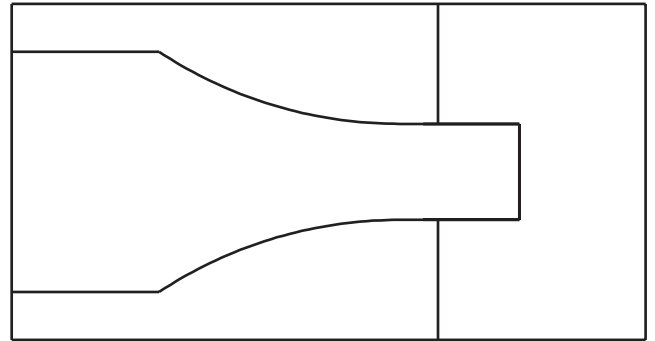

SR-02

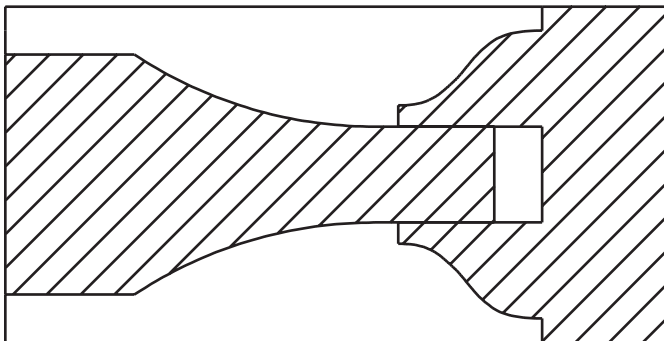

SR-03


 Press code to view full Scale




HOMESTEAD
WOODWORKS




HOMESTEAD WOODWORKS




HW-1001-RP

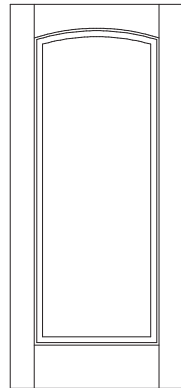


HW-1101-RP

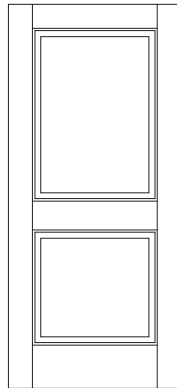


HW-2001-RP

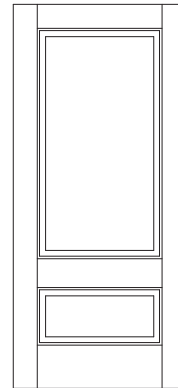


HW-2002-RP

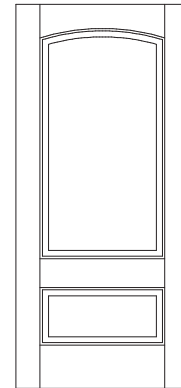


HW-2102-RP

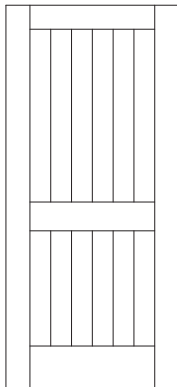


HW-2001-TG

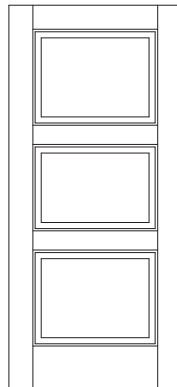


HW-3001-RP

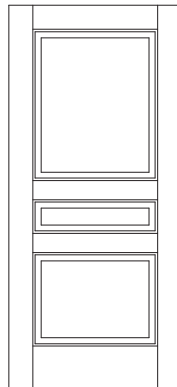


HW-3004-RP

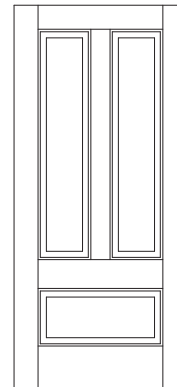



HW-3005-RP

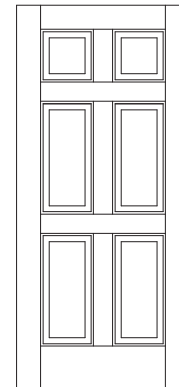

HE-6001-RP

 Press code to view full Scale



Door Sample

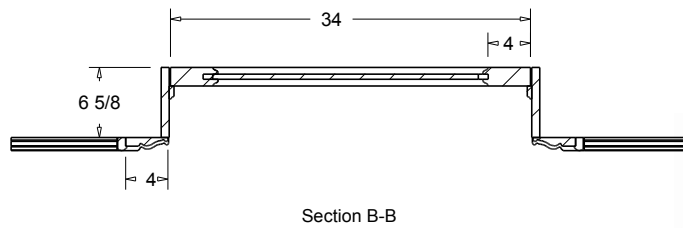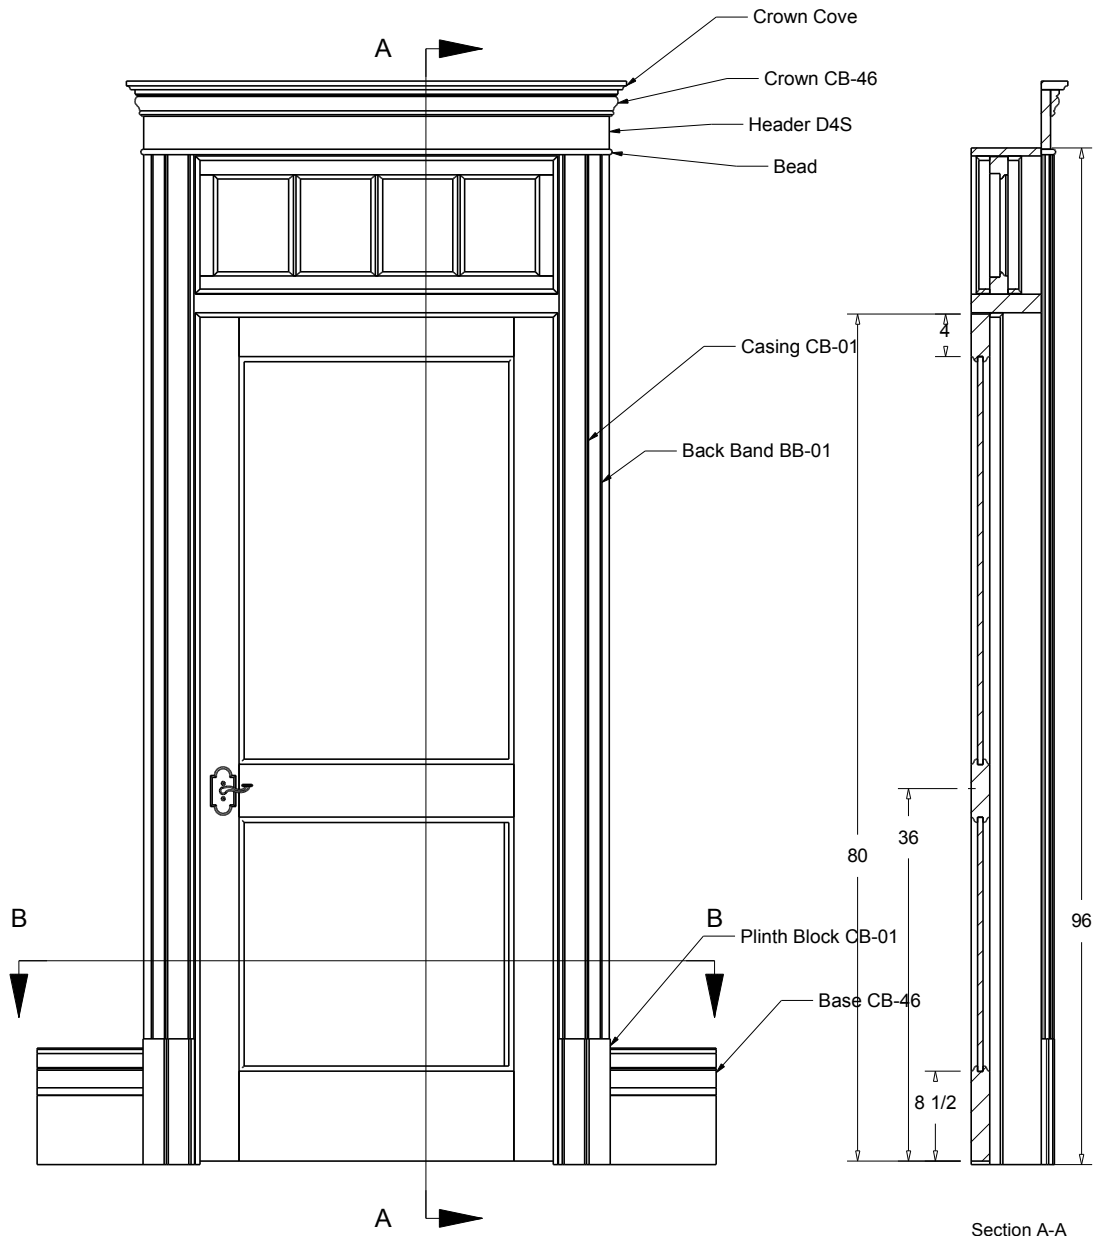

HOMESTEAD
WOODWORKS

Press code to view full Scale

Casing

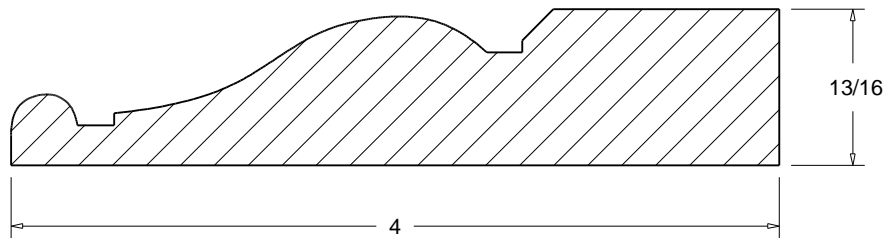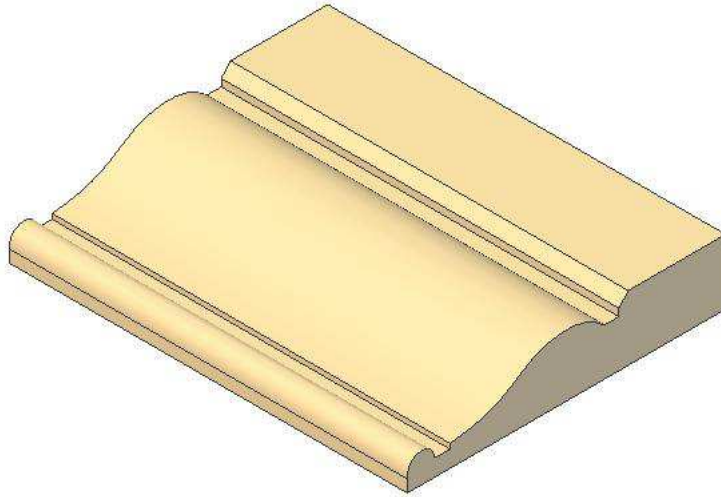

CB-01



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

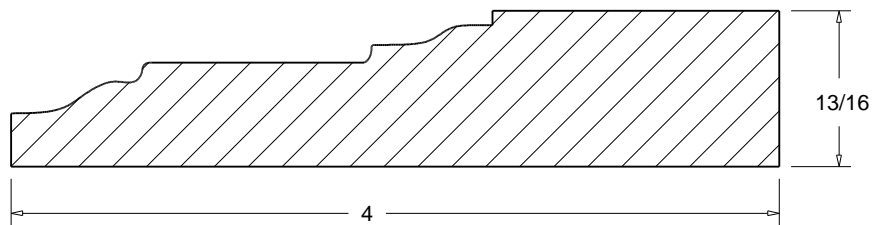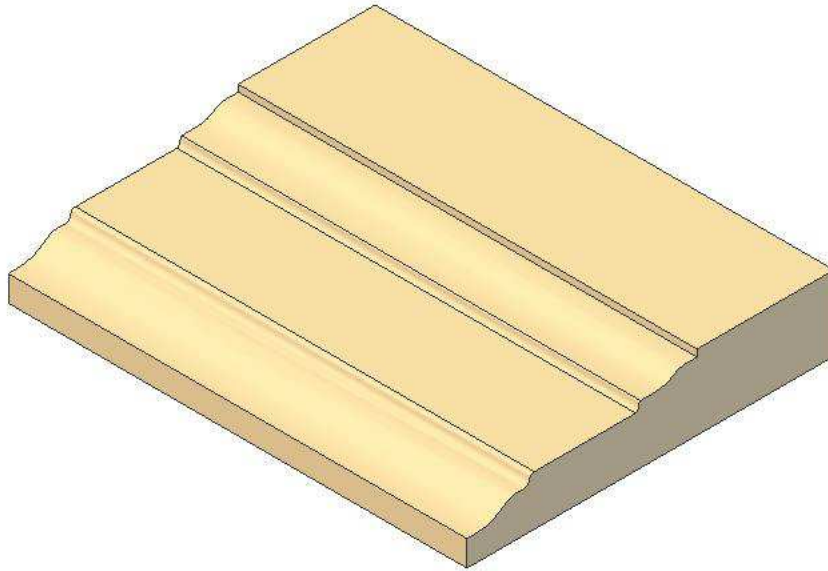

CB-02



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

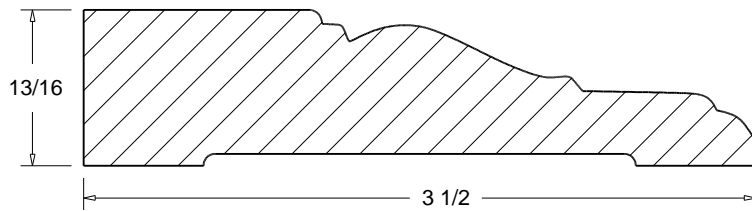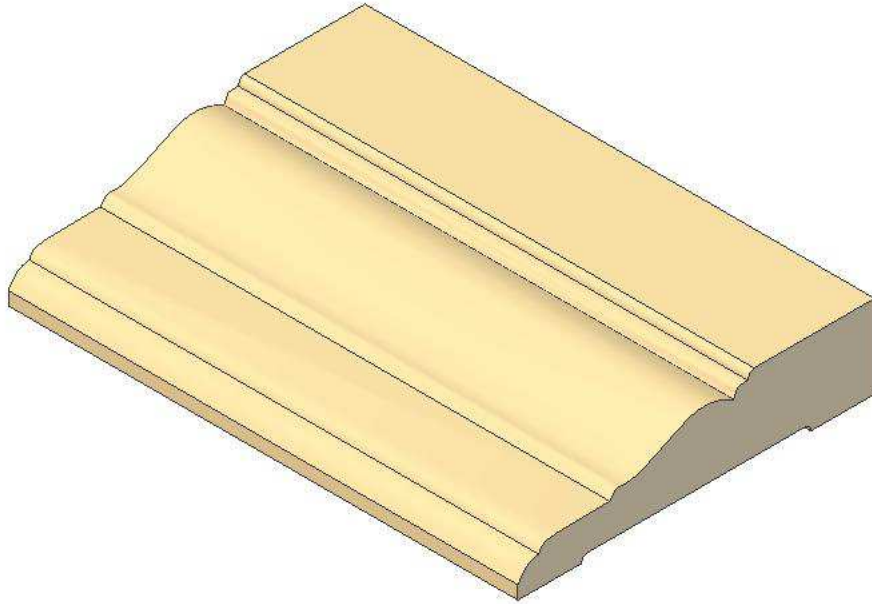

CB-03



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

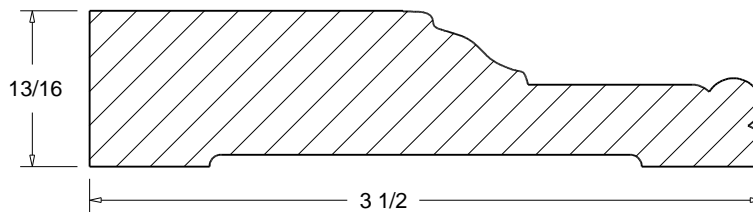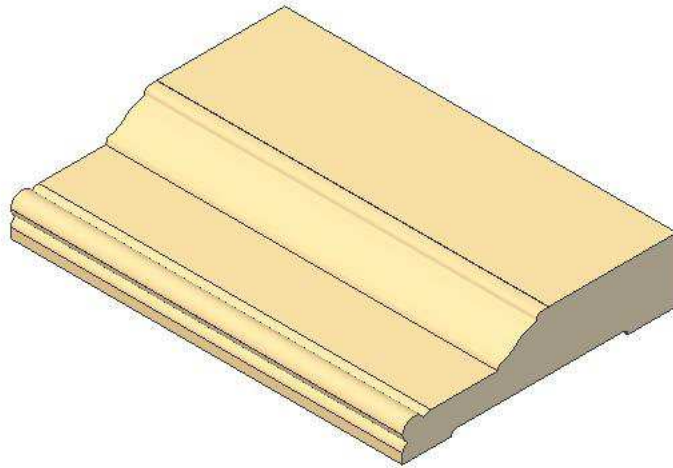

CB-04



Full Scale



HOMESTEAD
WOODWORKS

Click code to go back

Casing

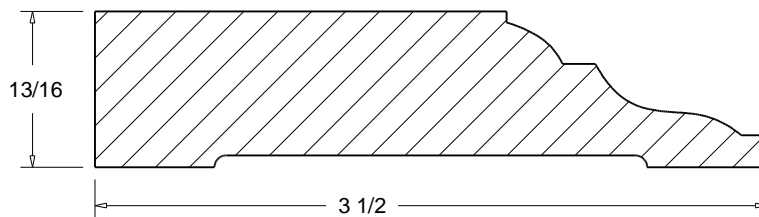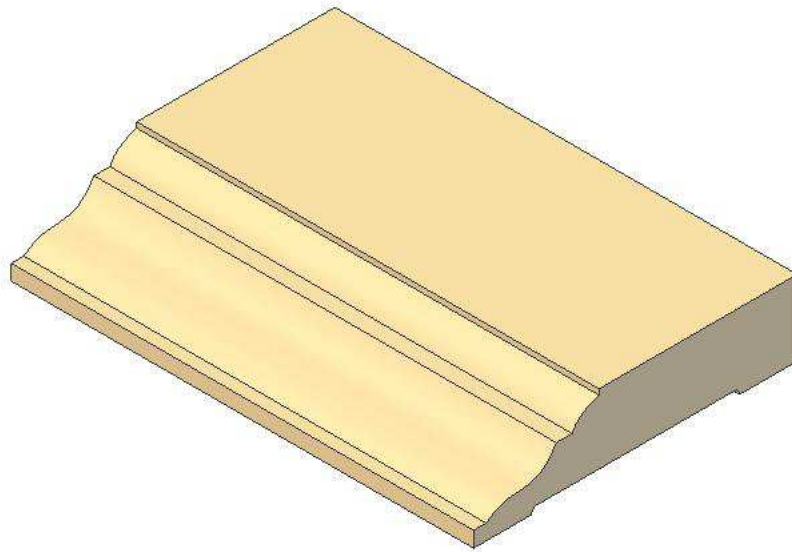

CB-05



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

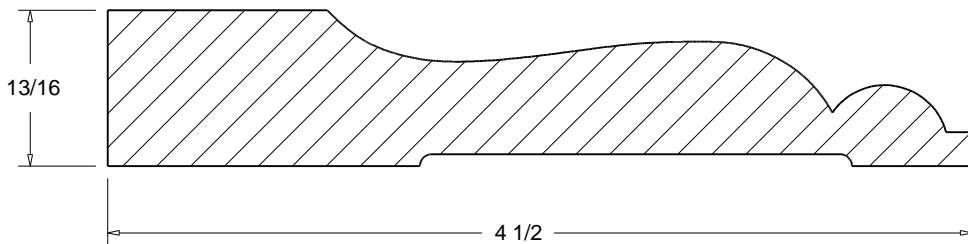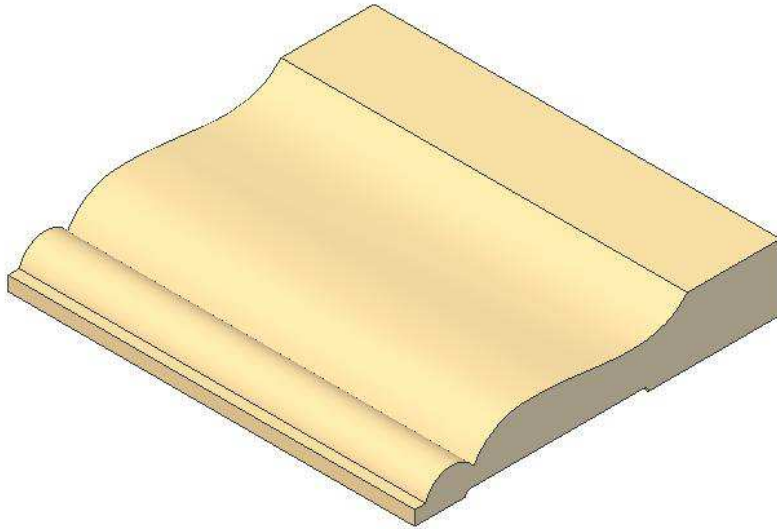

CB-06



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

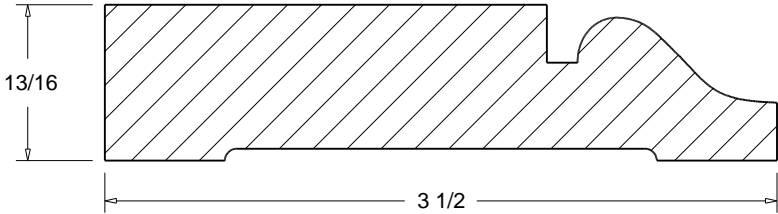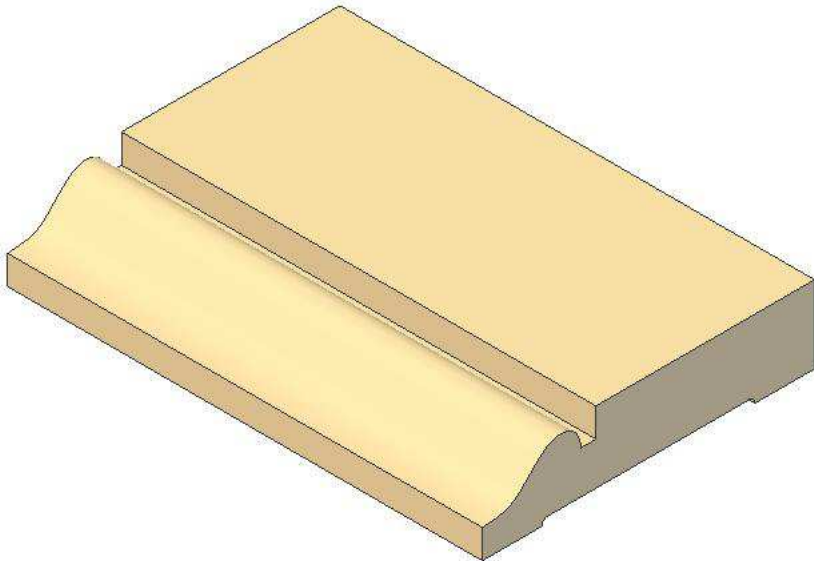

CB-07



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

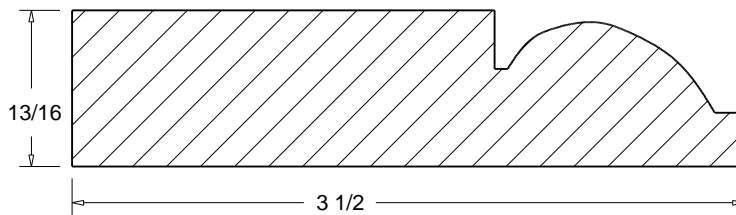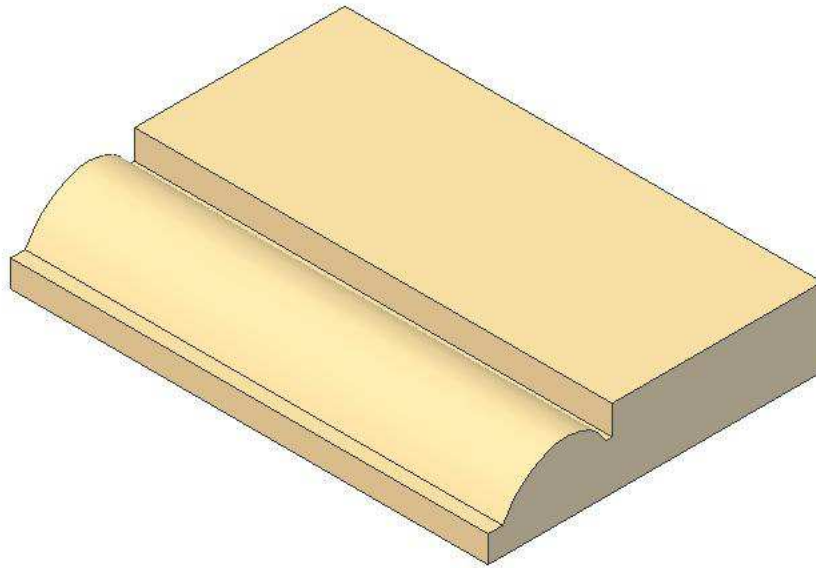

CB-08



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

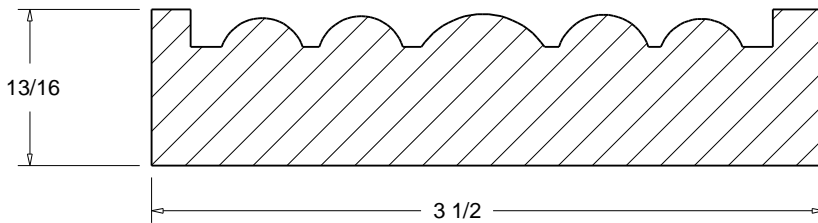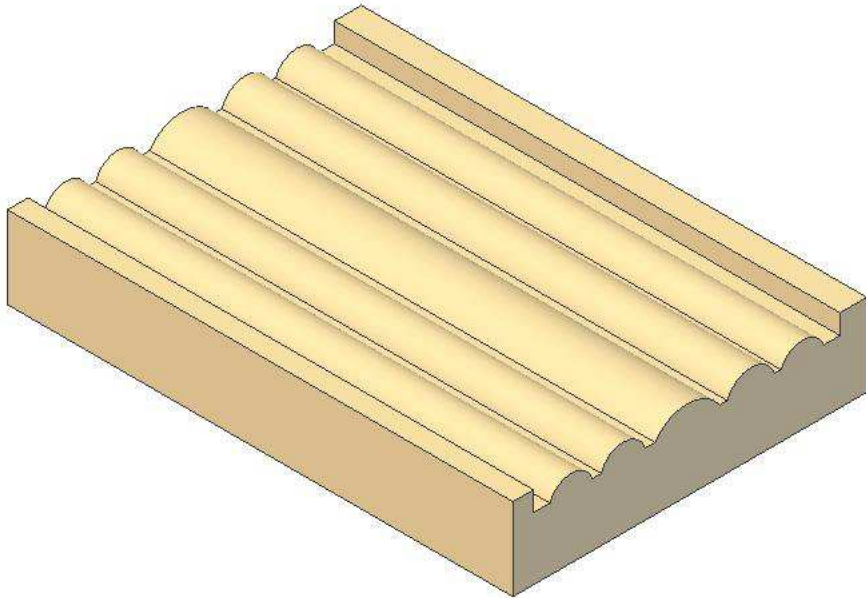

CB-09



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

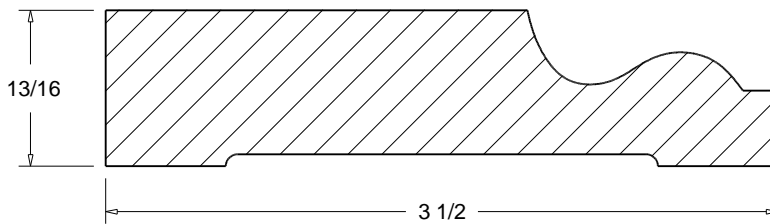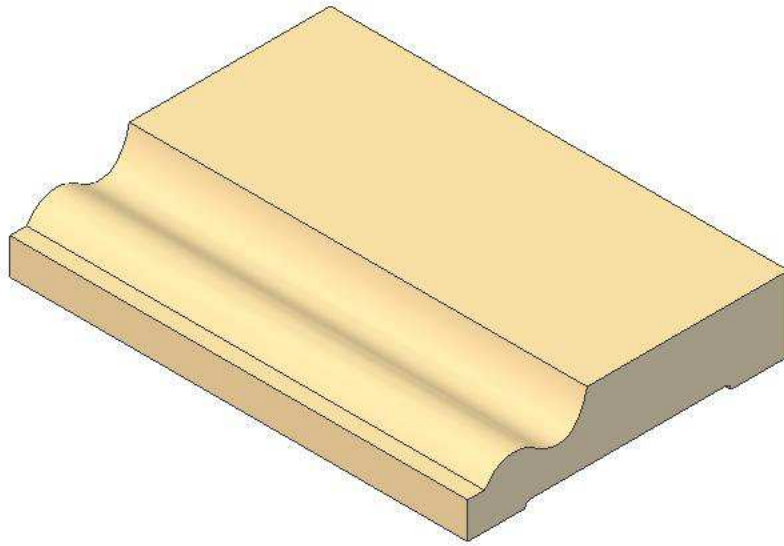

CB-10



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

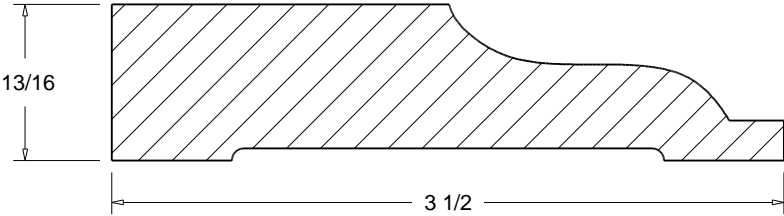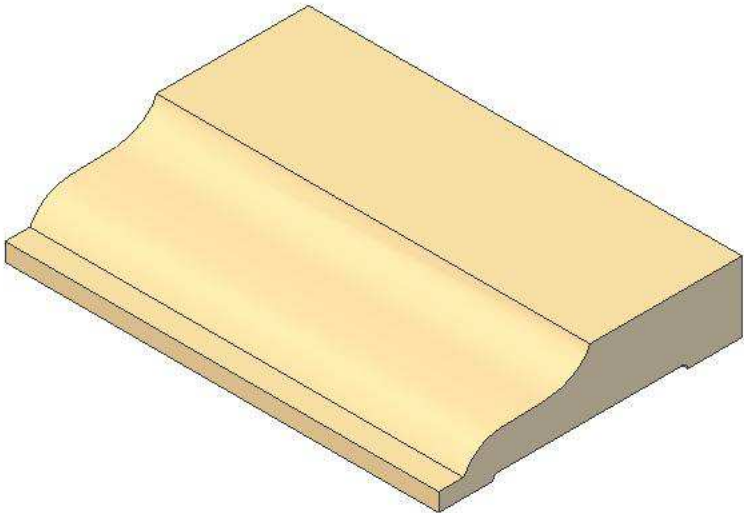

CB-11



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

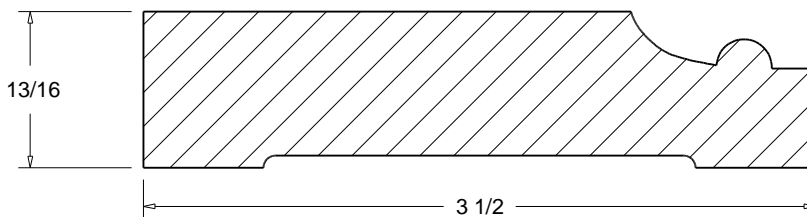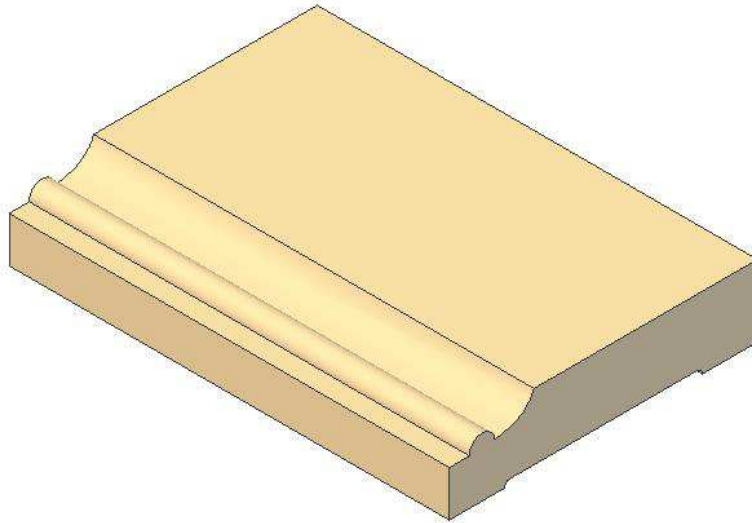

CB-12



Full scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

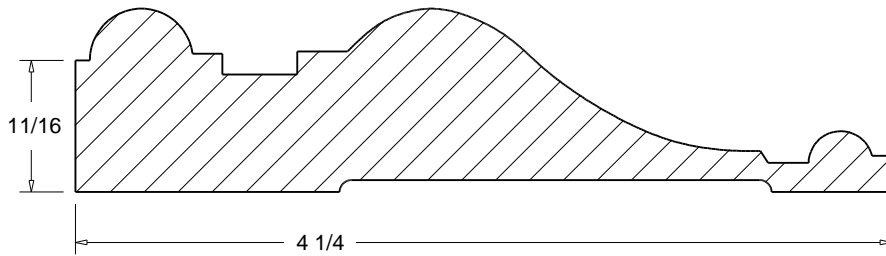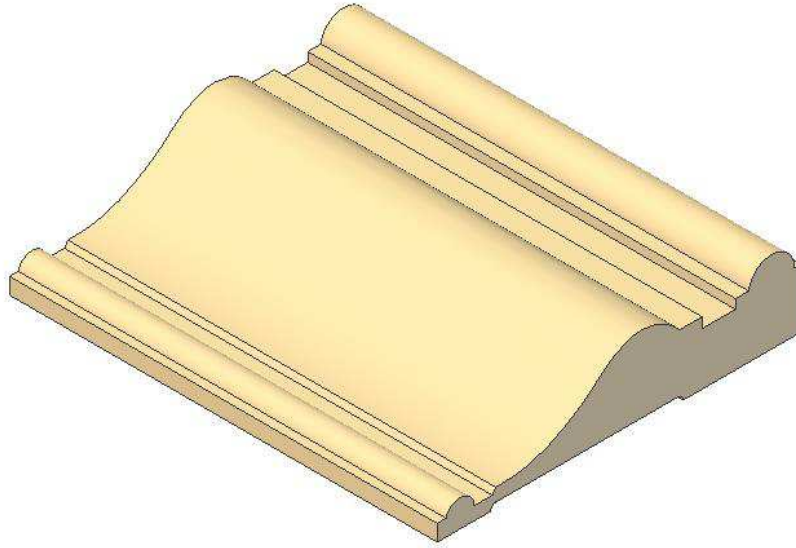

CB-13



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

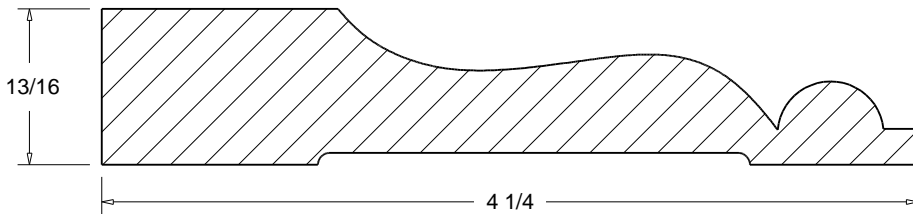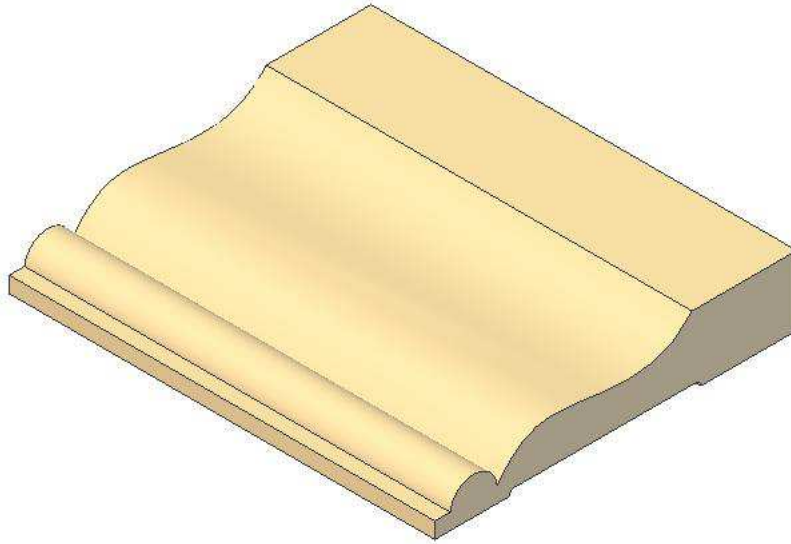

CB-14



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

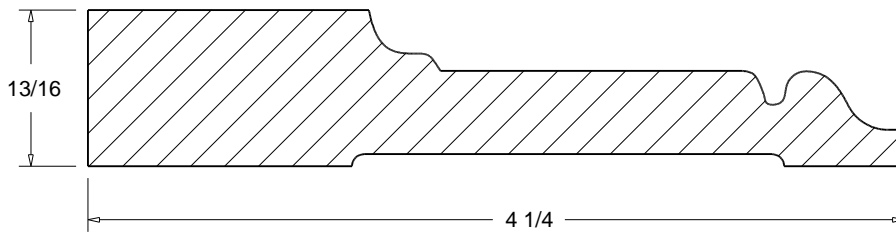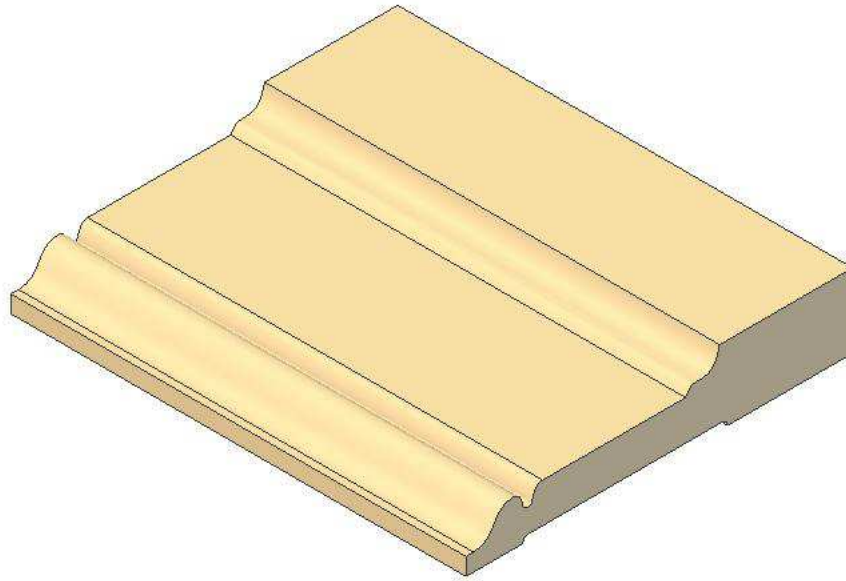

CB-15



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

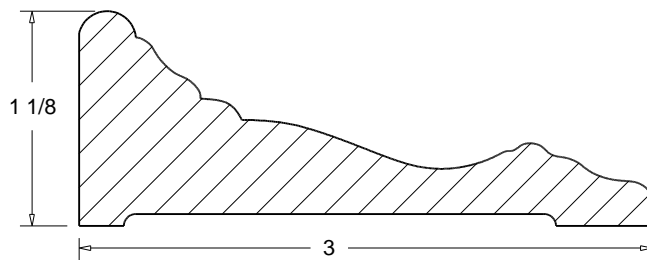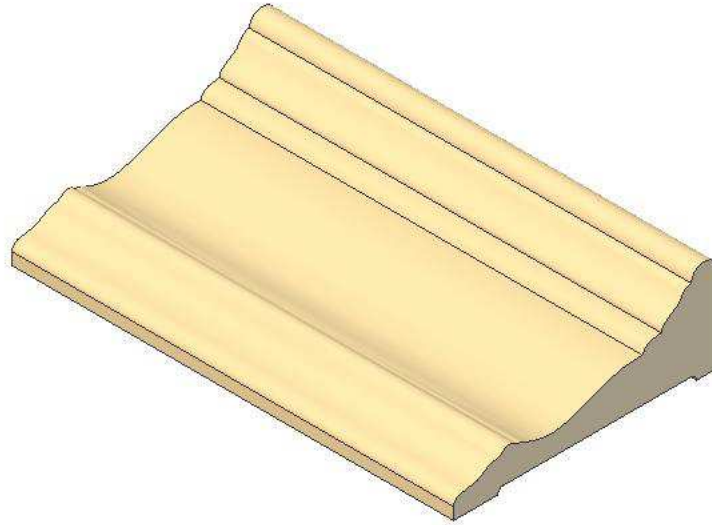

CB-16



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

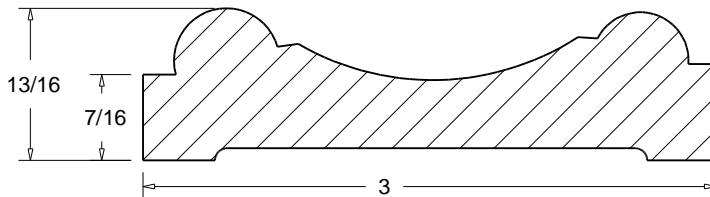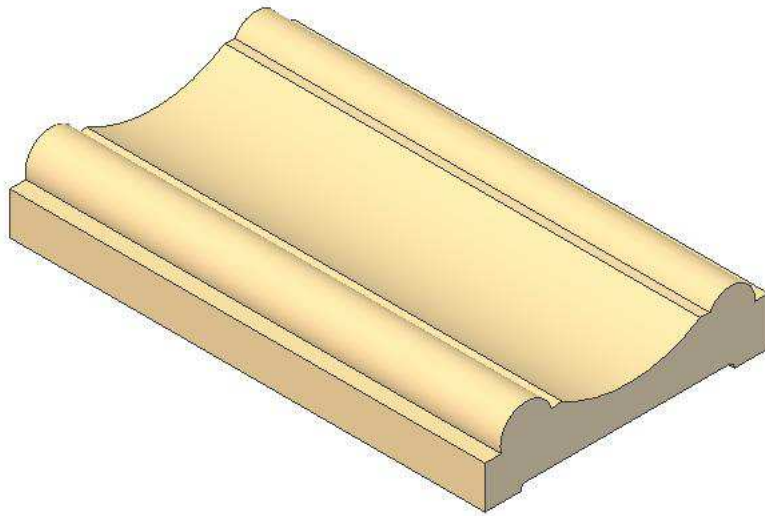

CB-17



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

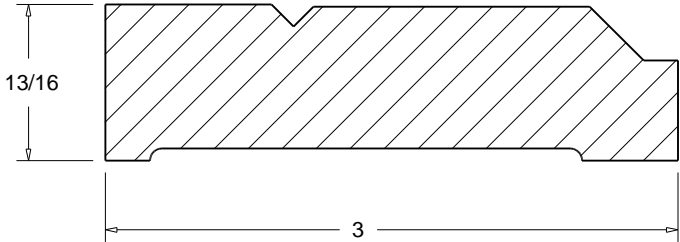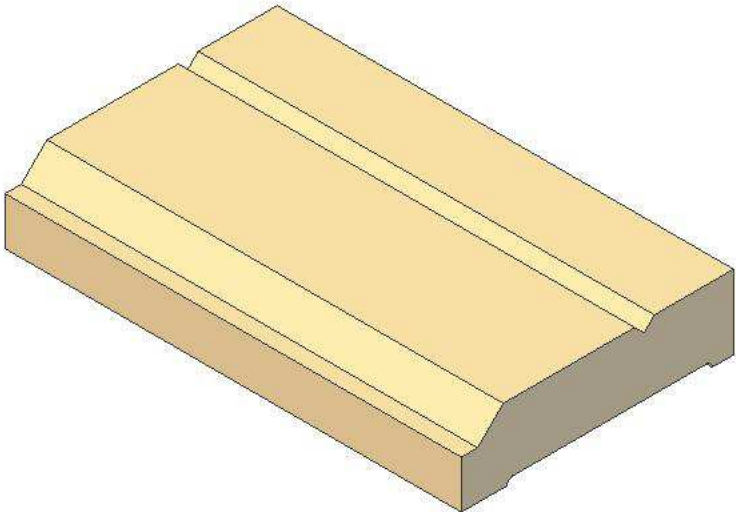

CB-18



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

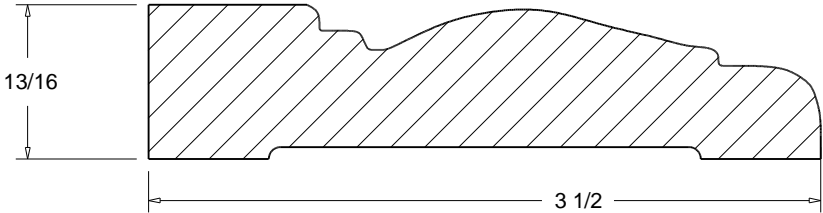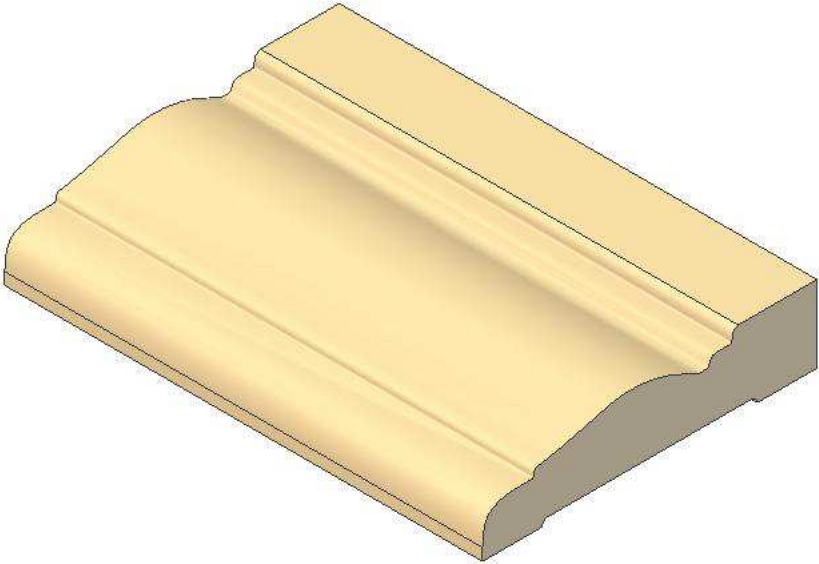

CB-19



Full Sacle



HOMESTEAD
WOODWORKS

Click code to go back

Casing

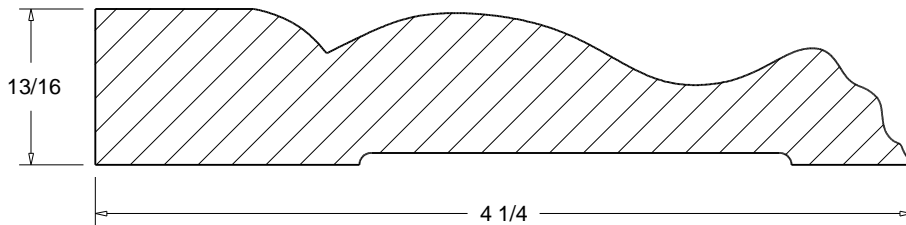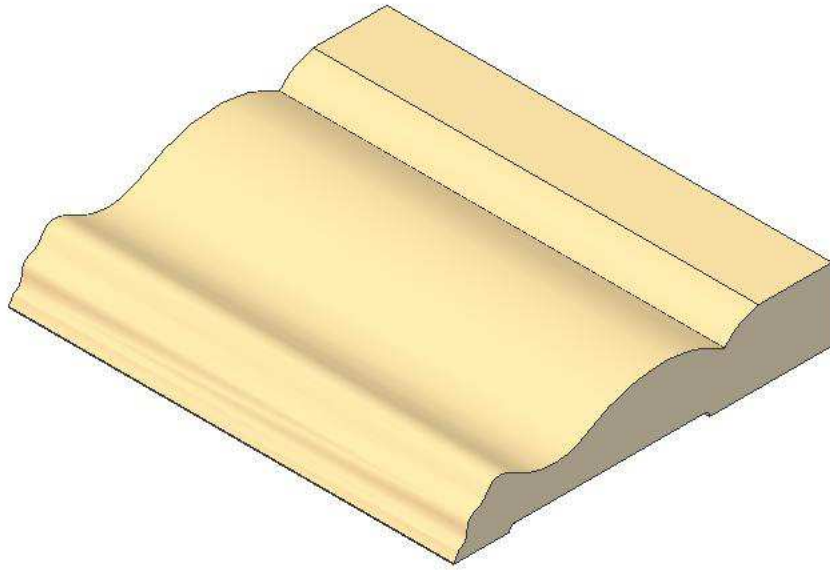

CB-20



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

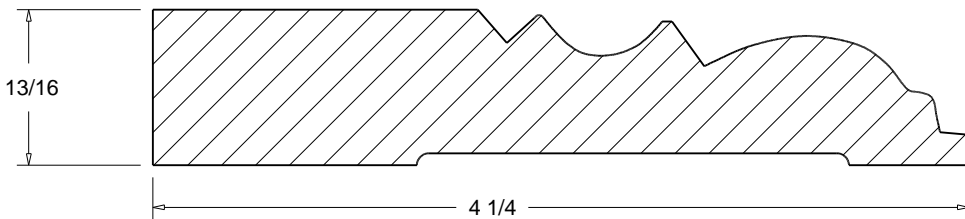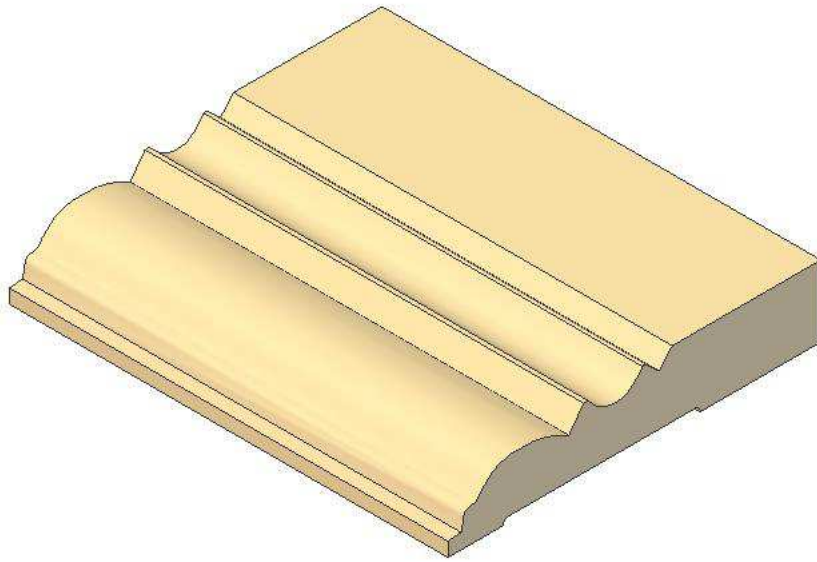

CB-21



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

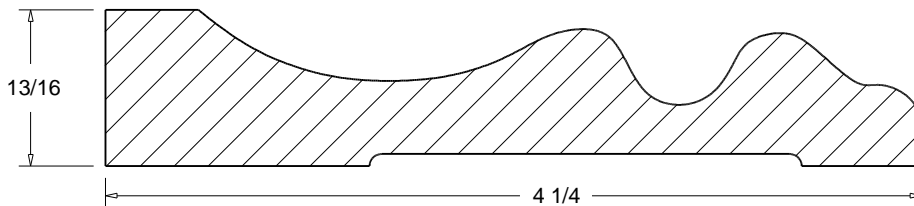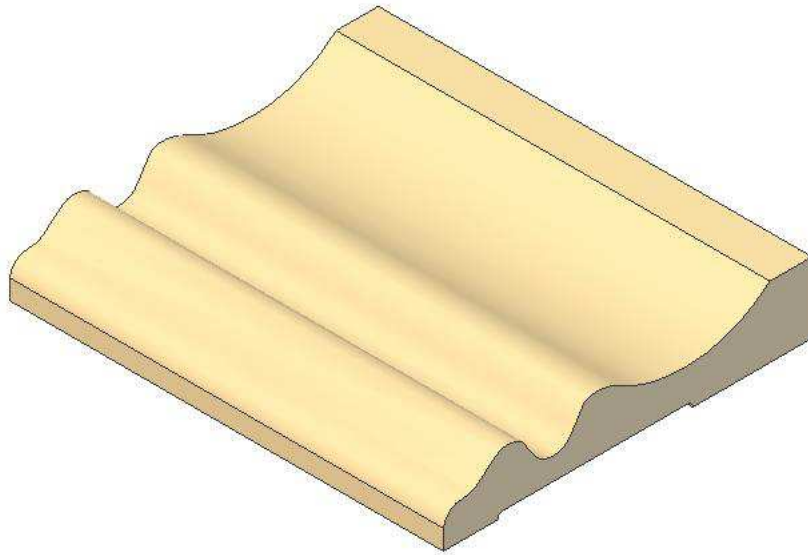

CB-22



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

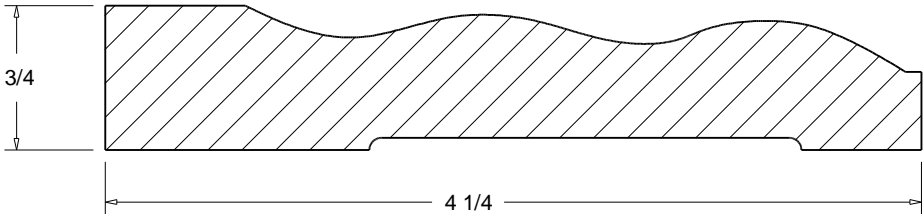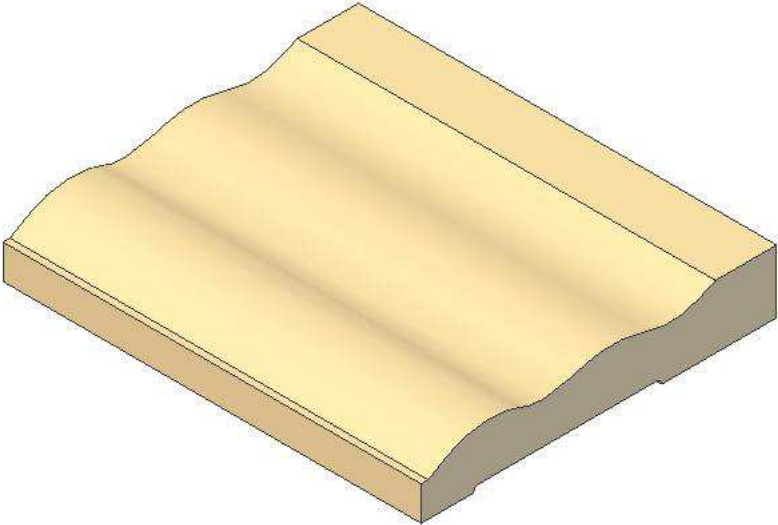

CB-23



Full Scale



HOMESTEAD
WOODWORKS

Click code to go back

Casing

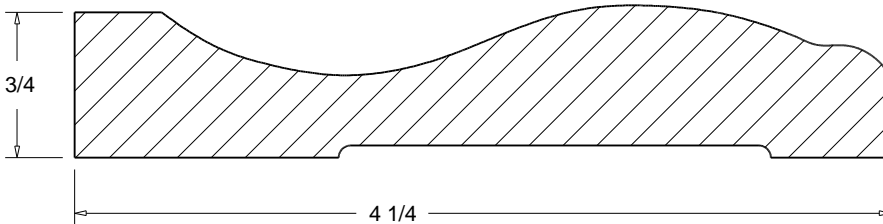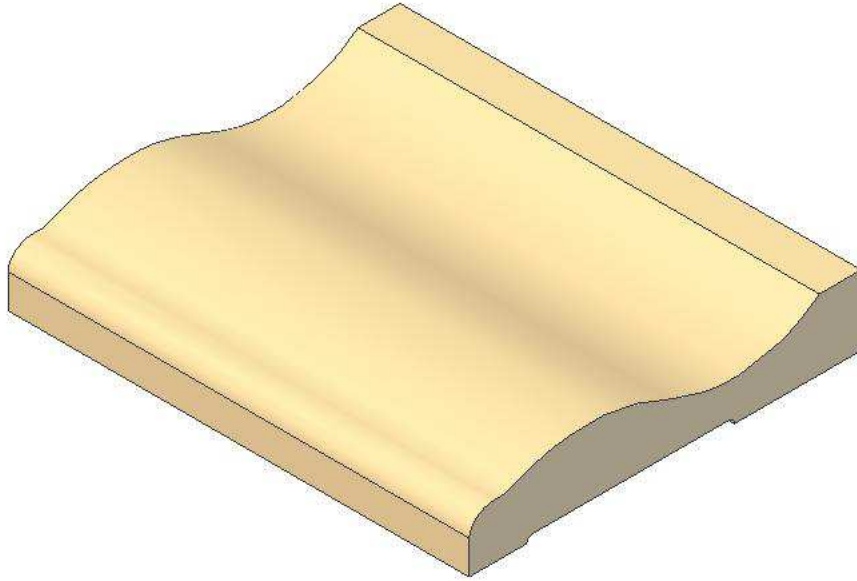

CB-24



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

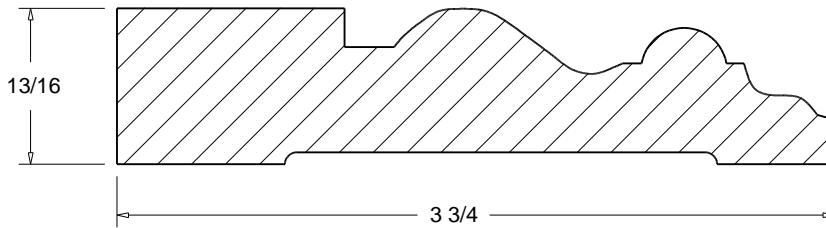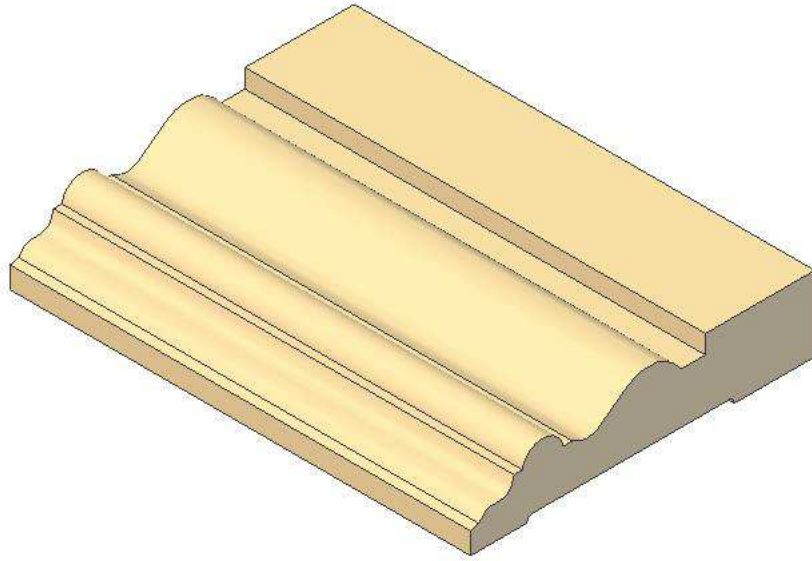

CB-25



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

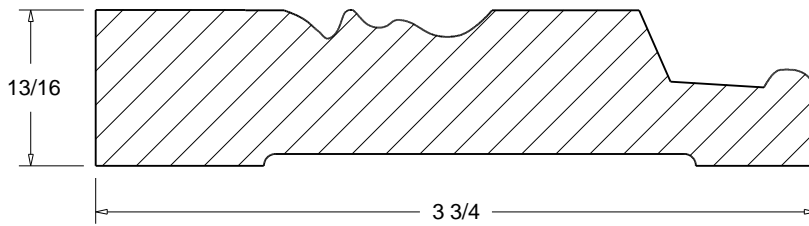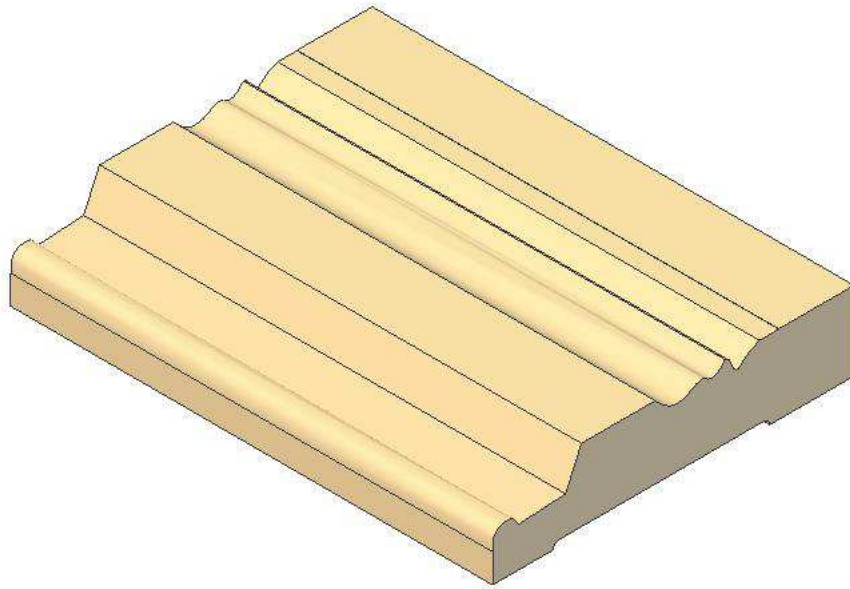

CB-26



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

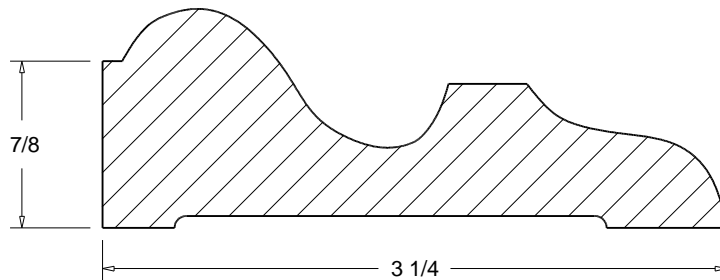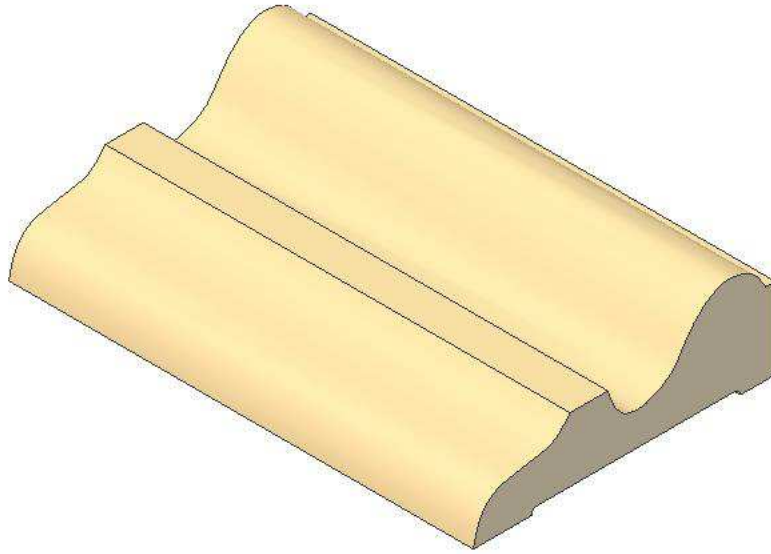

CB-27



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

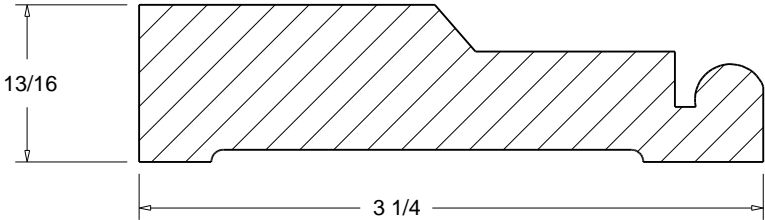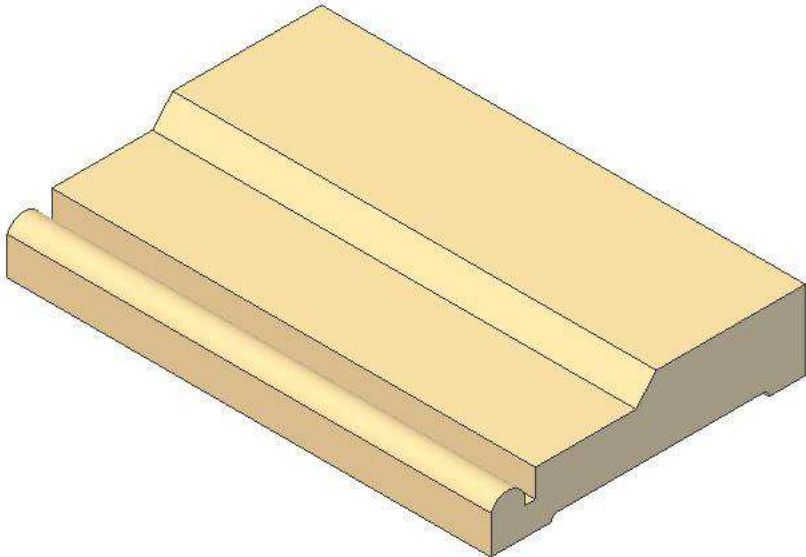

CB-28



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

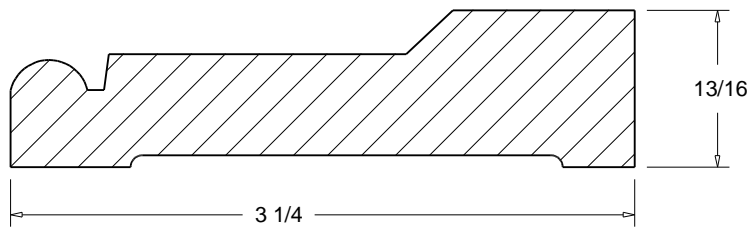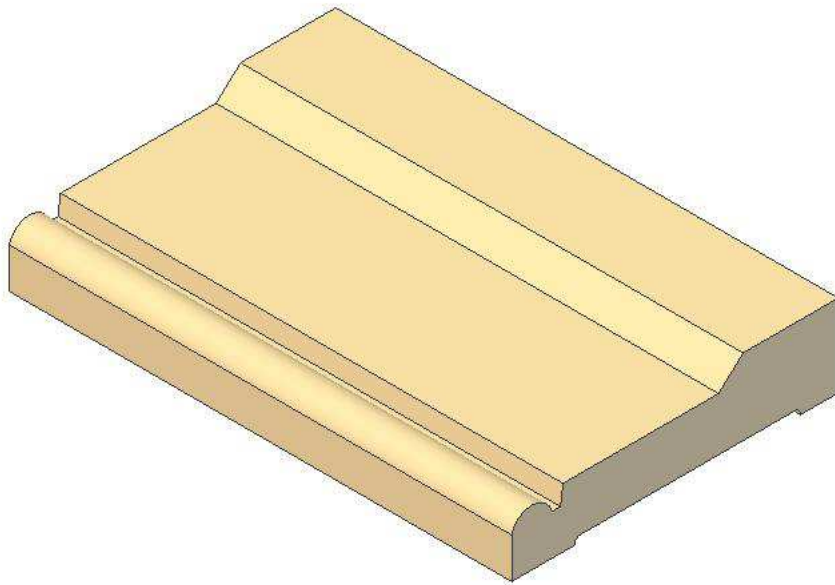

CB-29



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

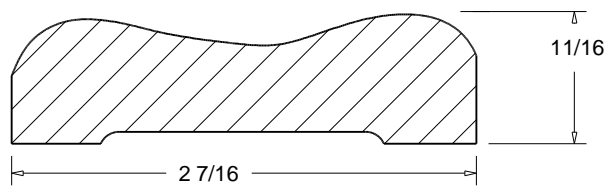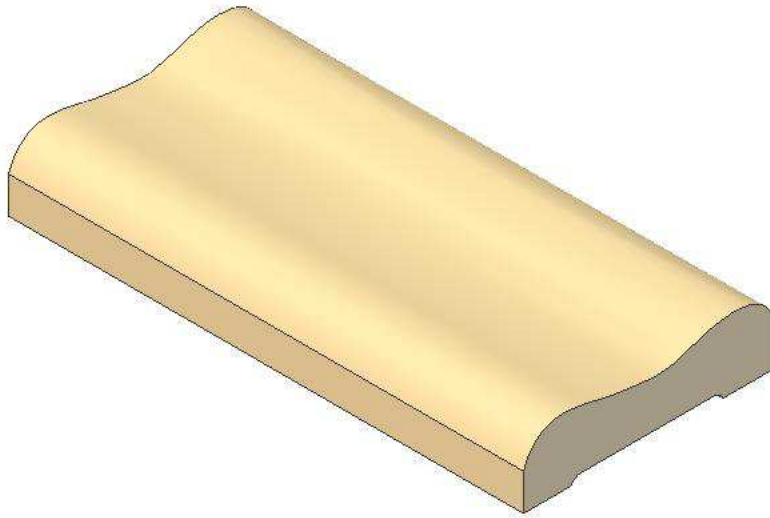

CB-30



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

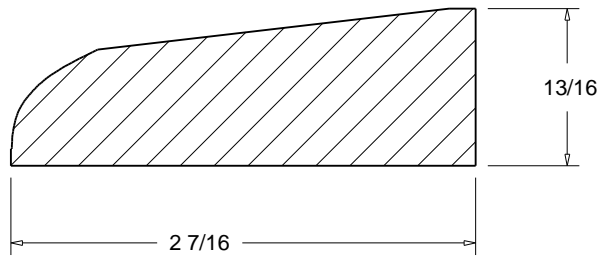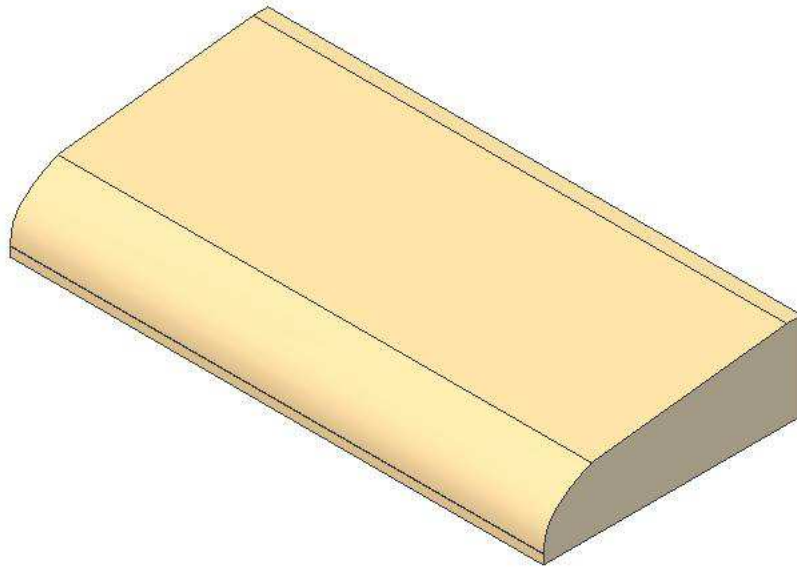

CB-31



Full Scale



HOMESTEAD
WOODWORKS

[Click code to go back](#)

Casing

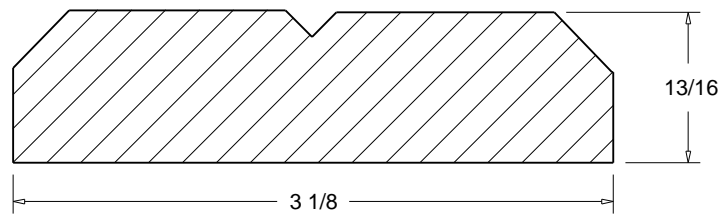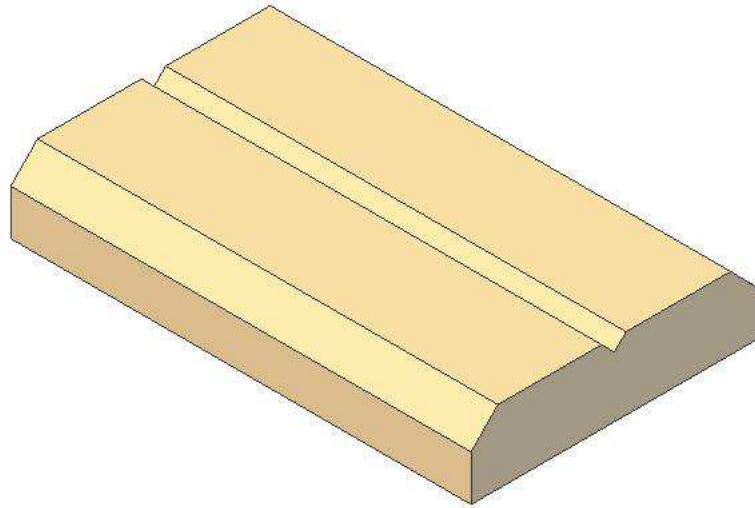

CB-32



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

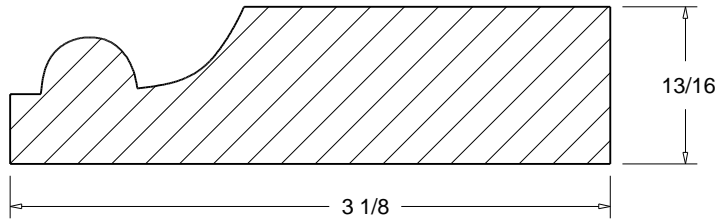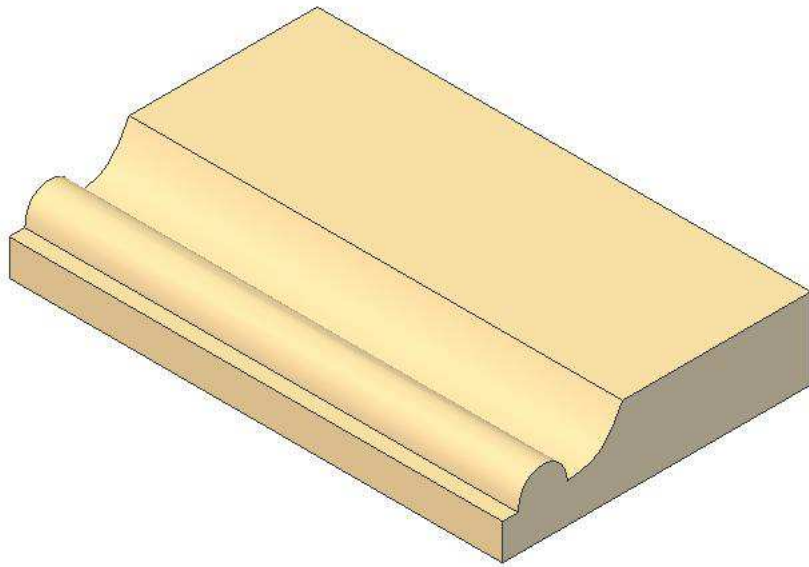

CB-33



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

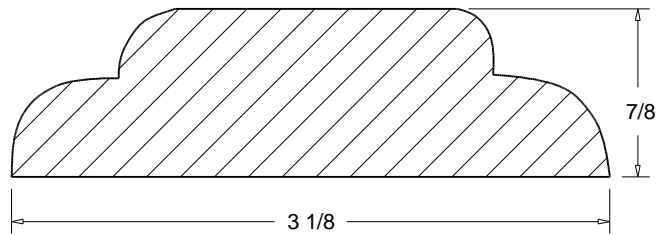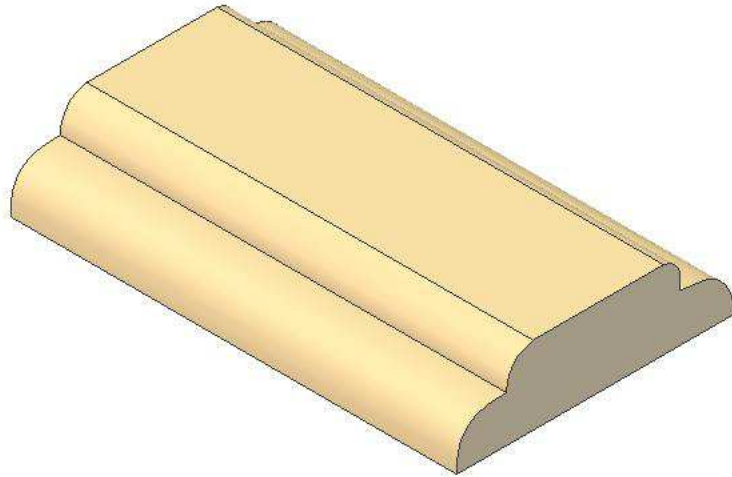

CB-34



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

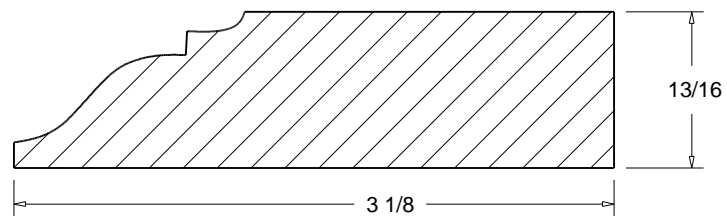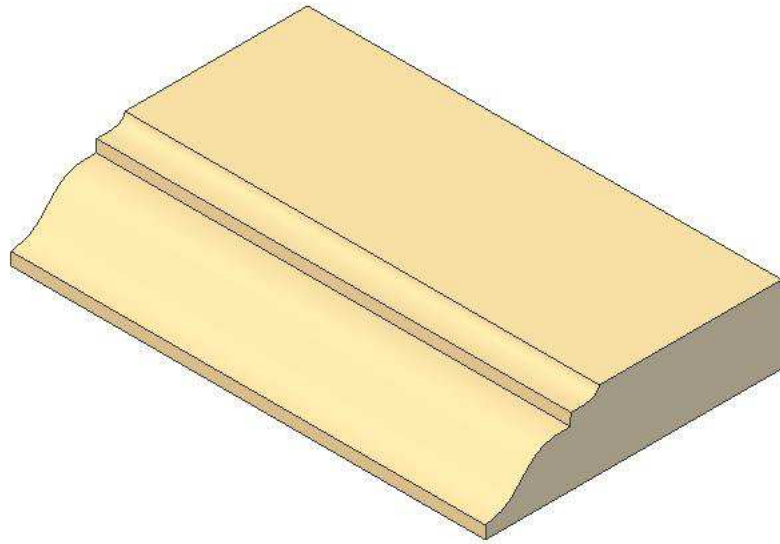

CB-35



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

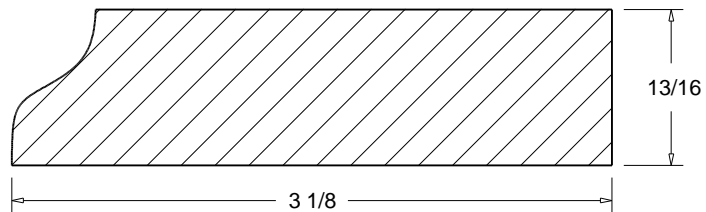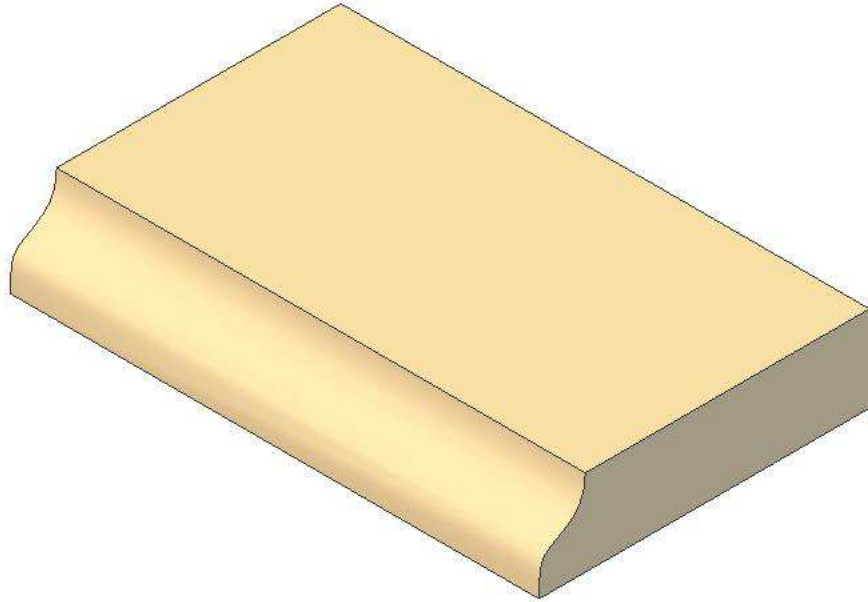

CB-36



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

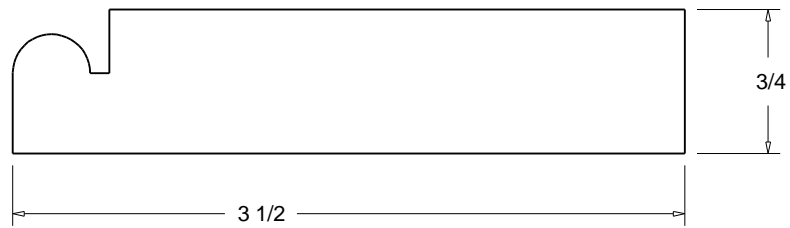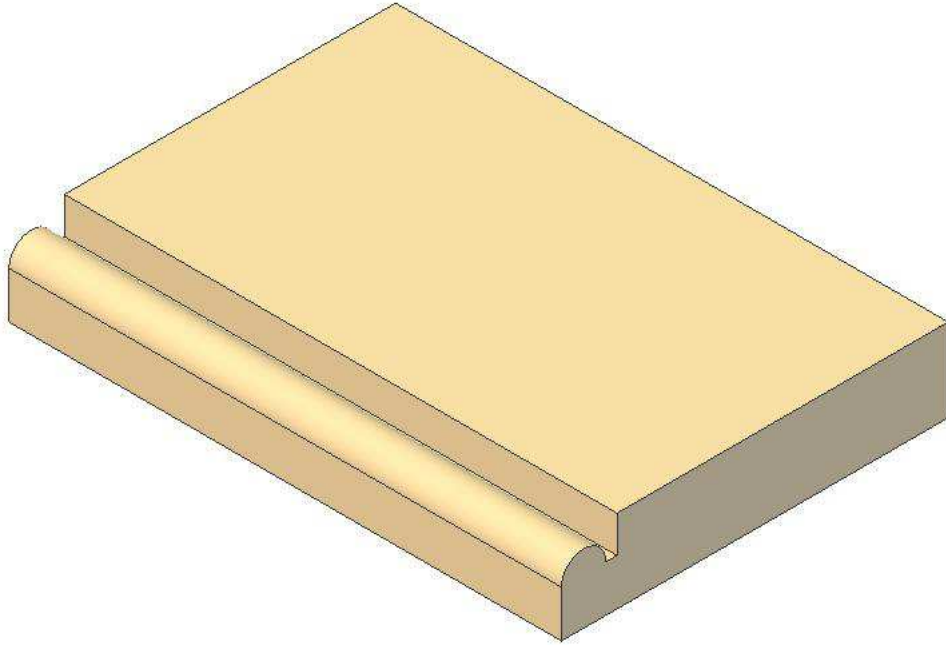

CB-37



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

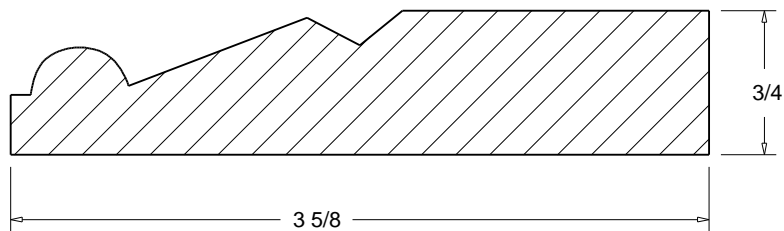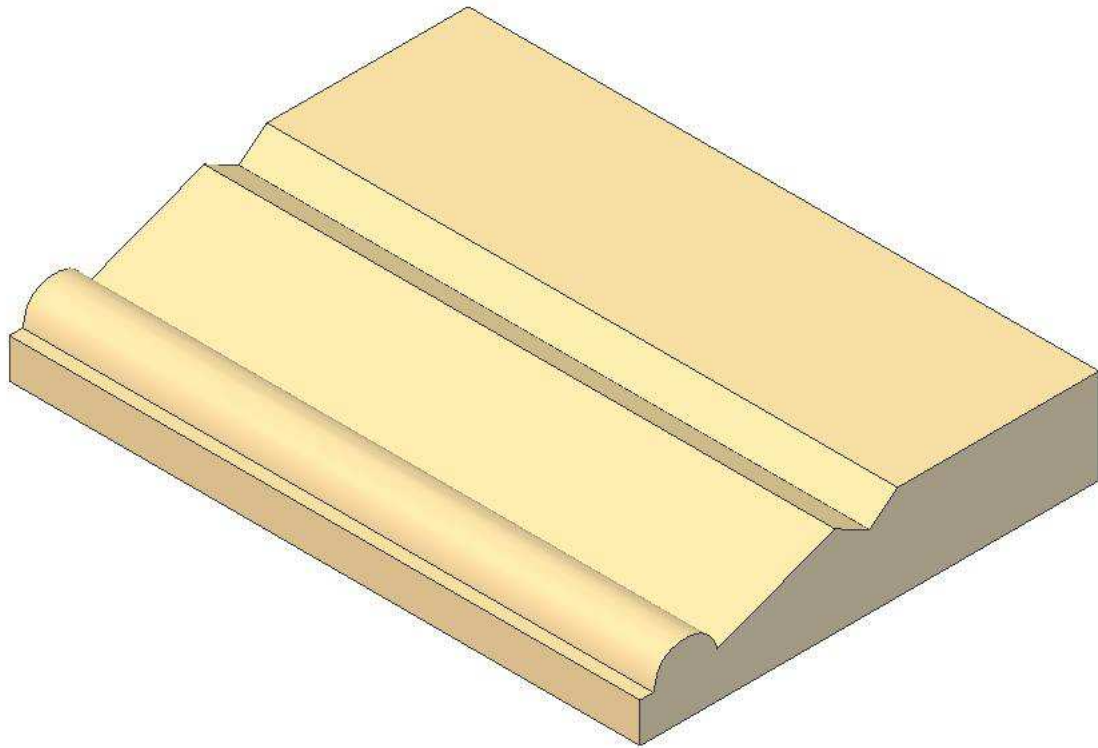

CB-38

Full Scale

Click code to go back



HOMESTEAD
WOODWORKS





| | |
|--|--|
| | |
| | |



HOMESTEAD
WOODWORKS

Casing

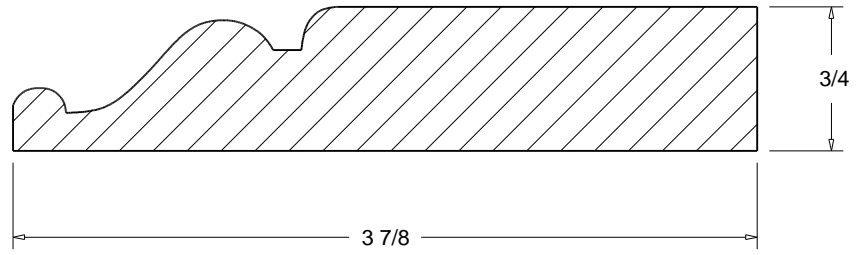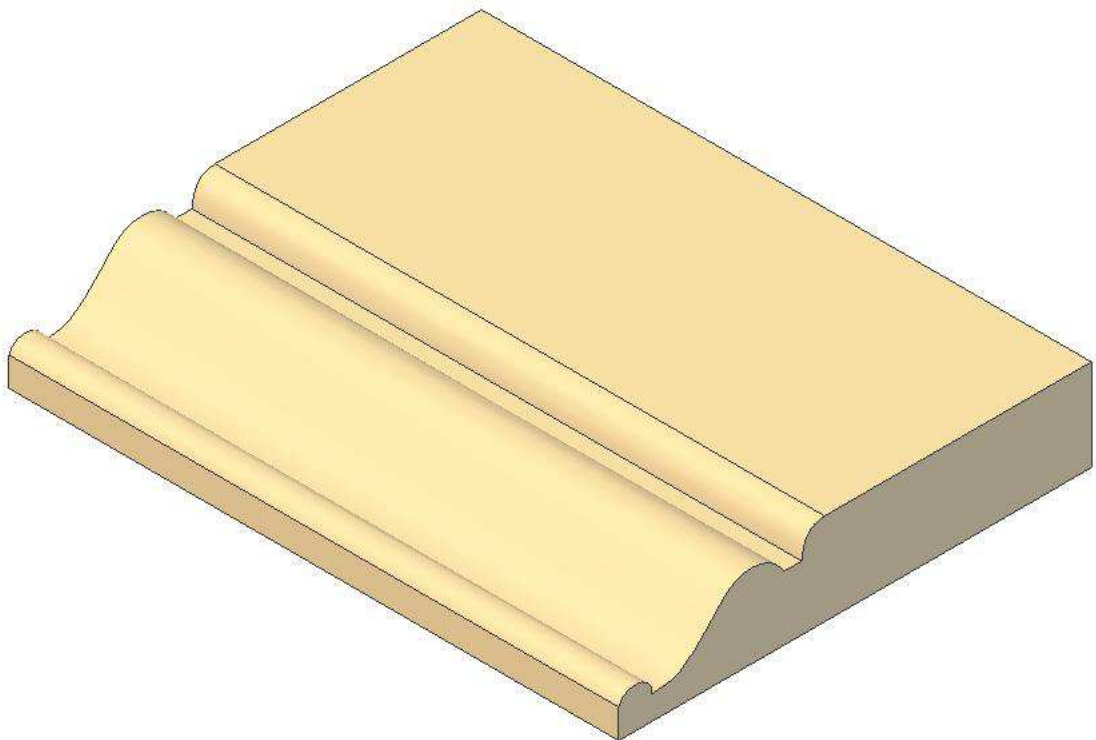

CB-40



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

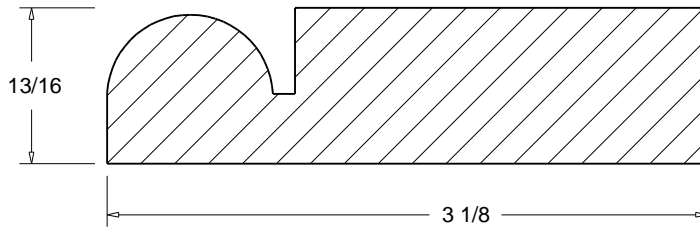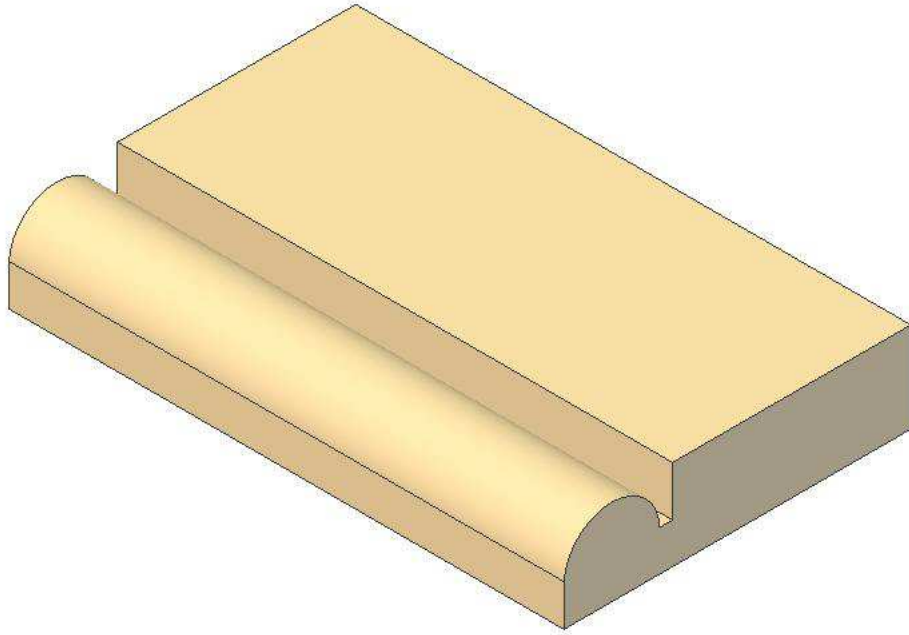

CB-41



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

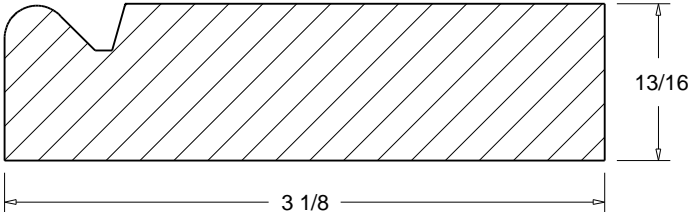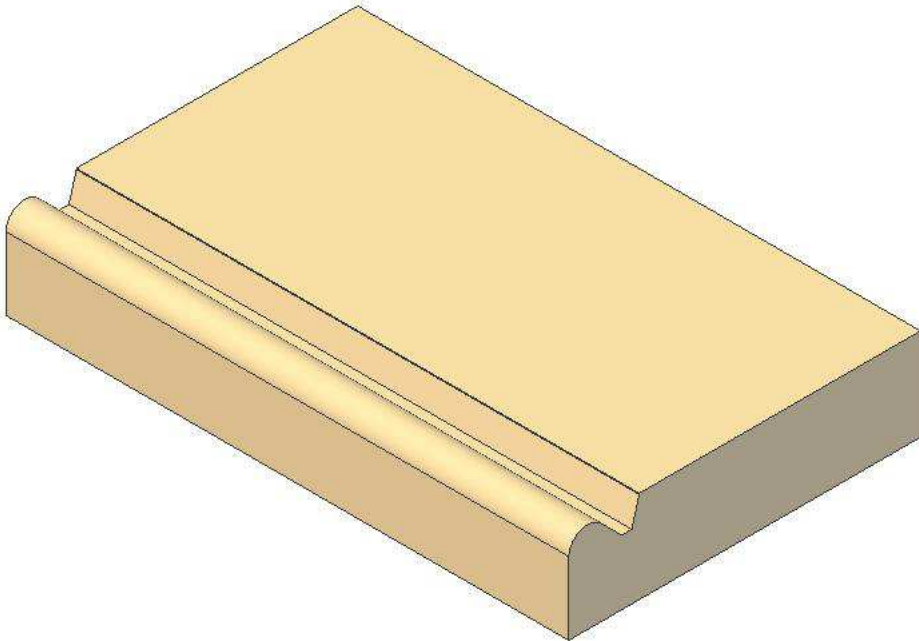

CB-42



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

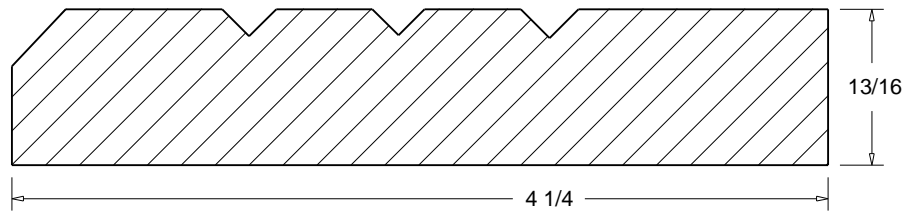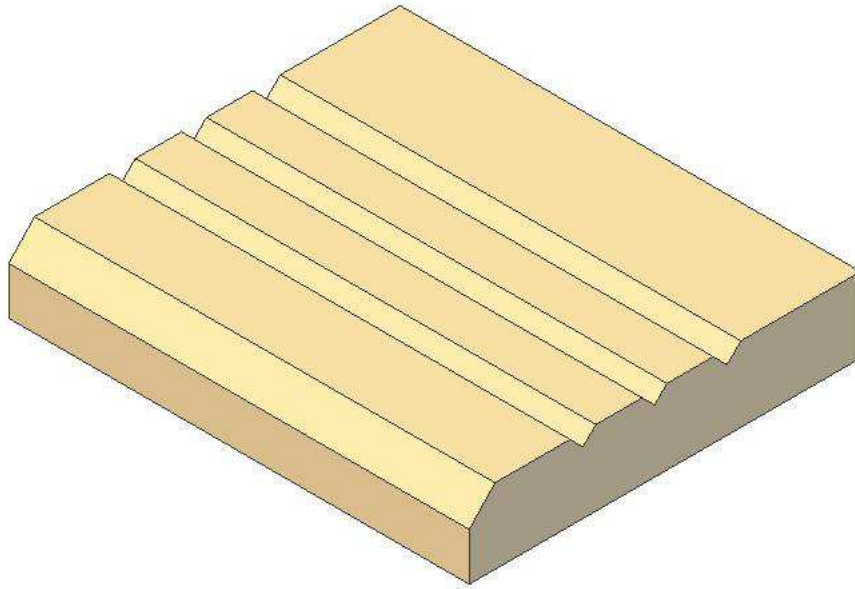

CB-43



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

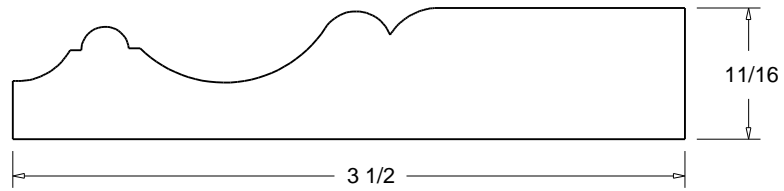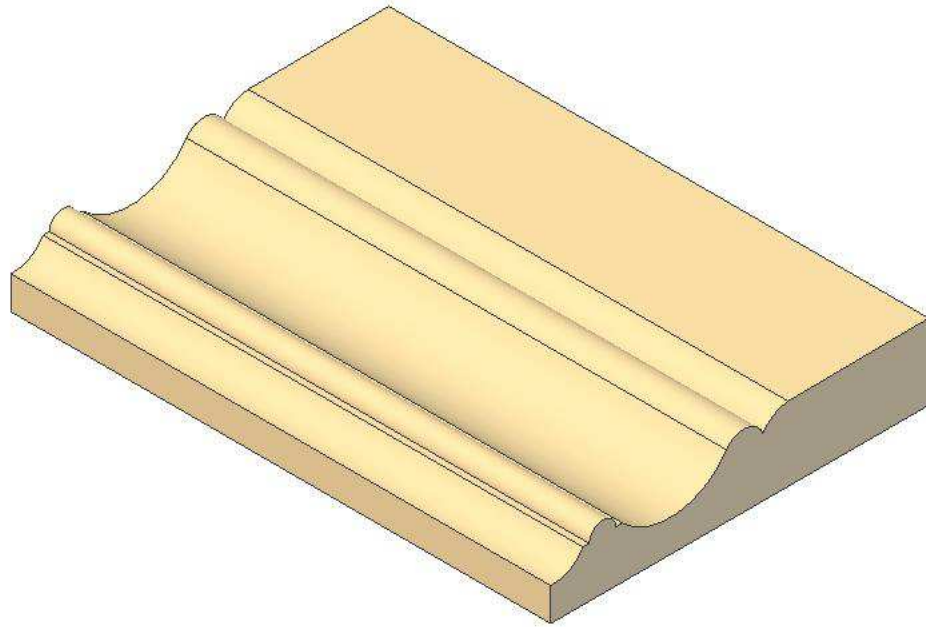

CB-44



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

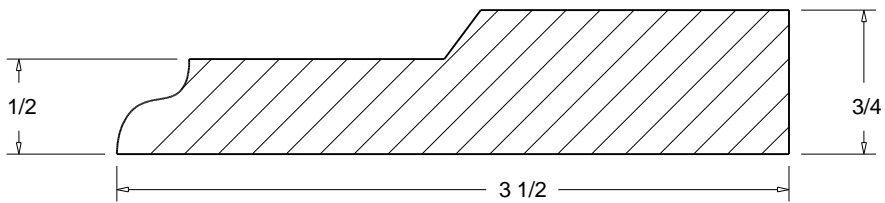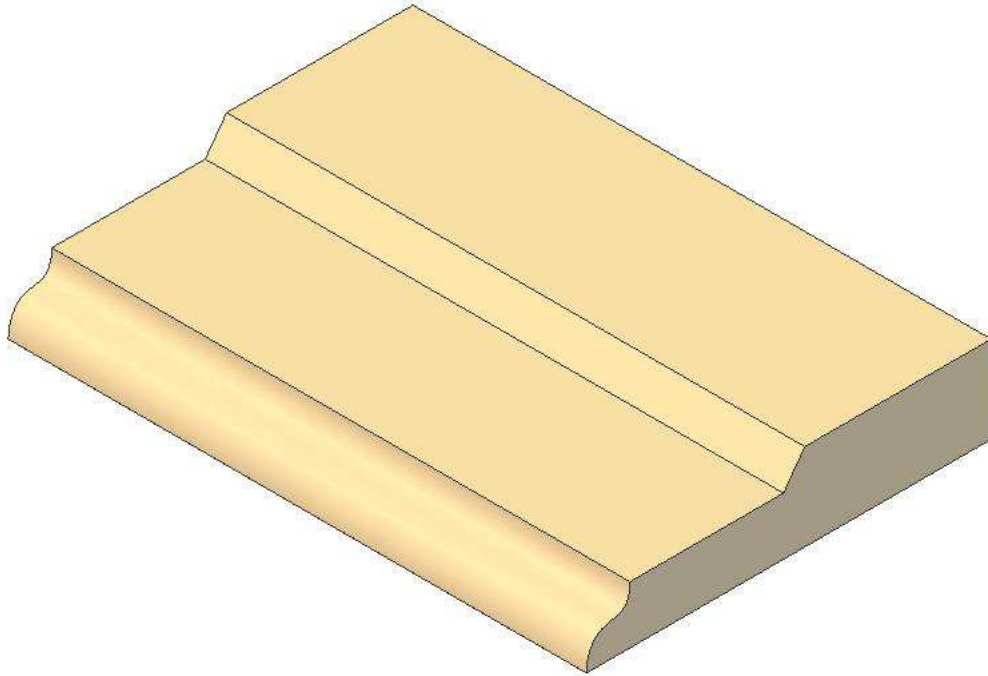

CB-45



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

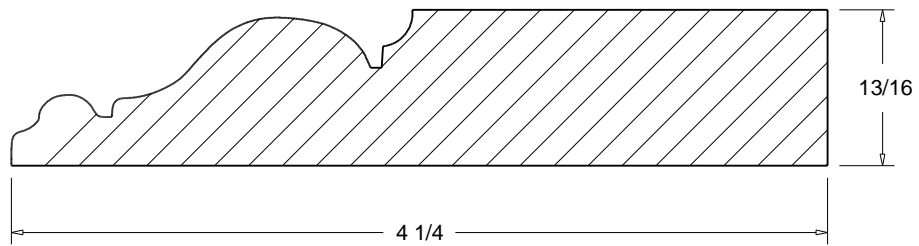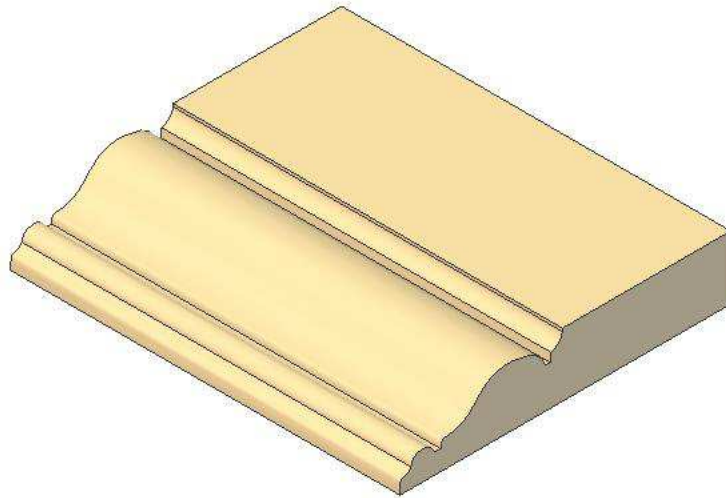

CB-46



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

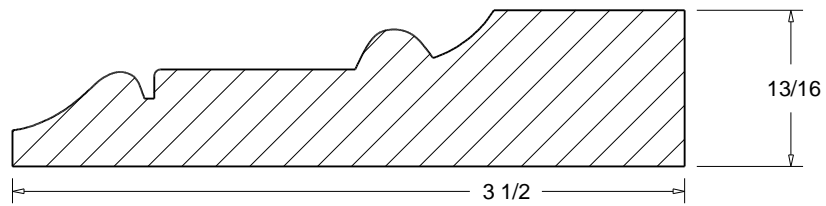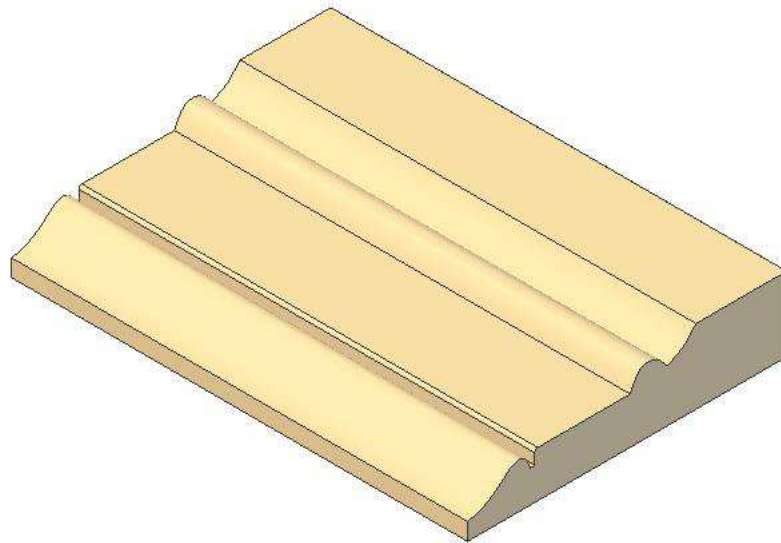

CB-47



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

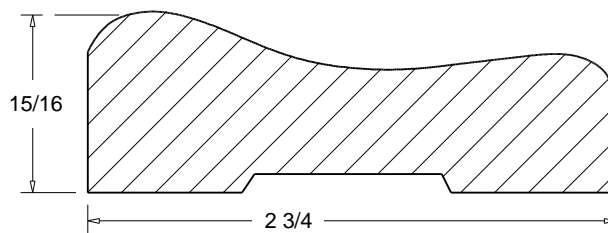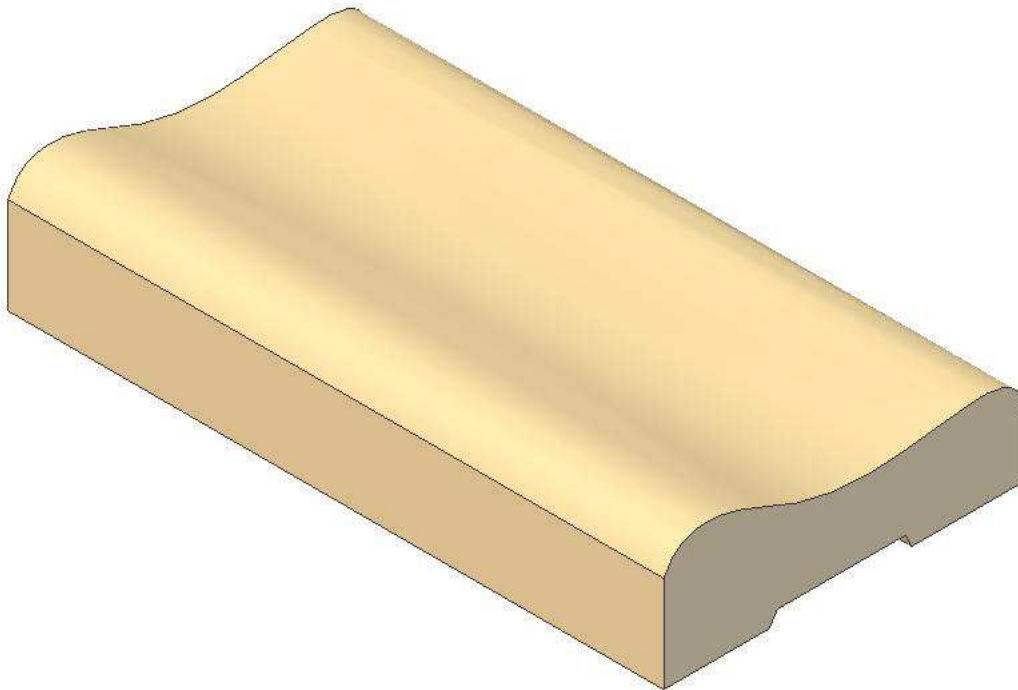

CB-48



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

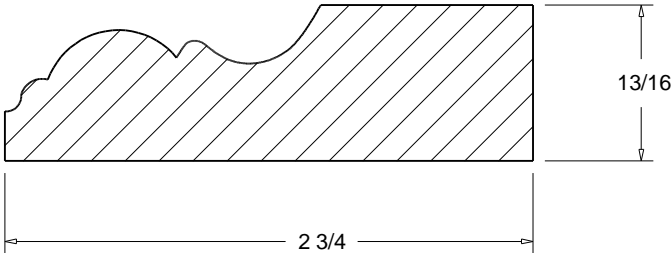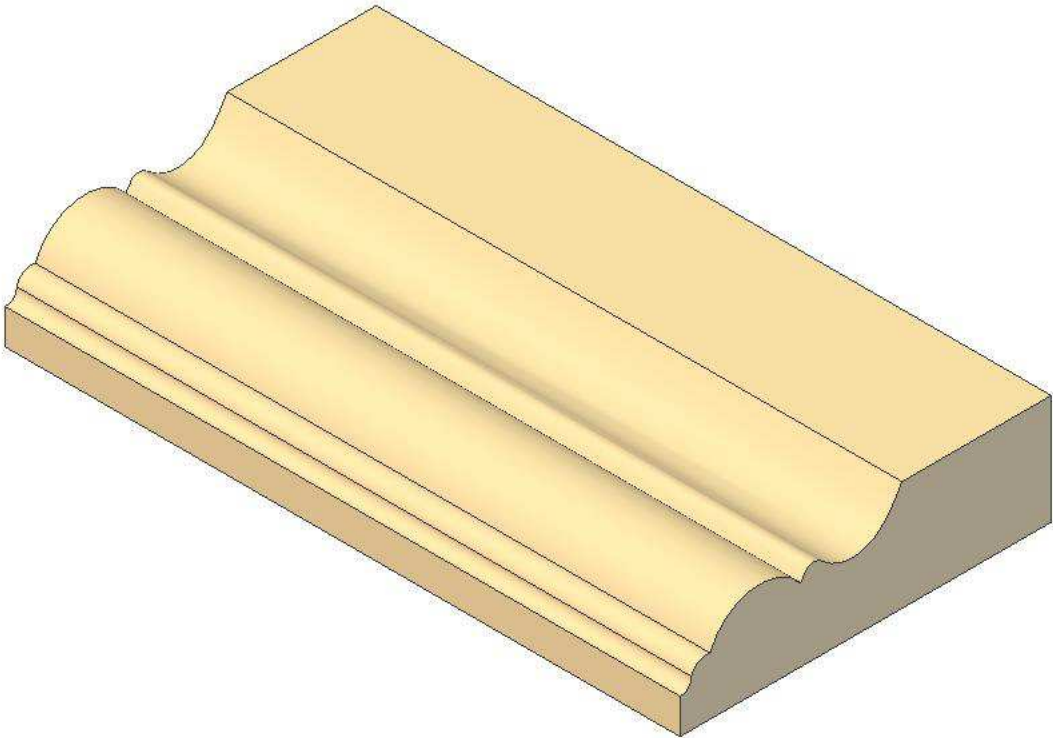

CB-49



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

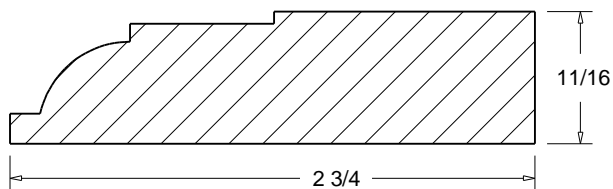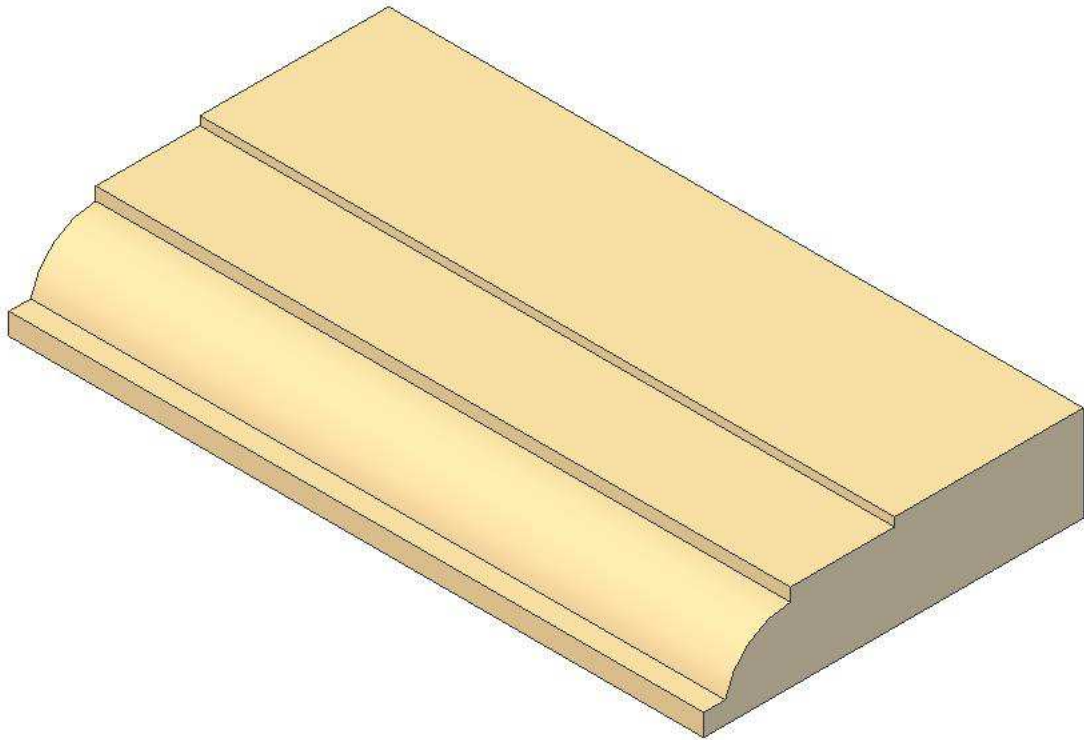

CB-50



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

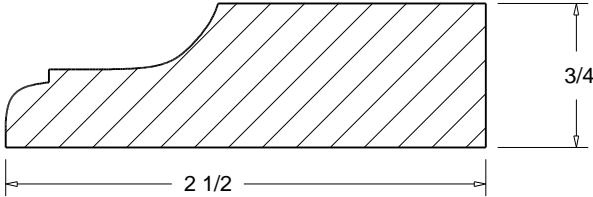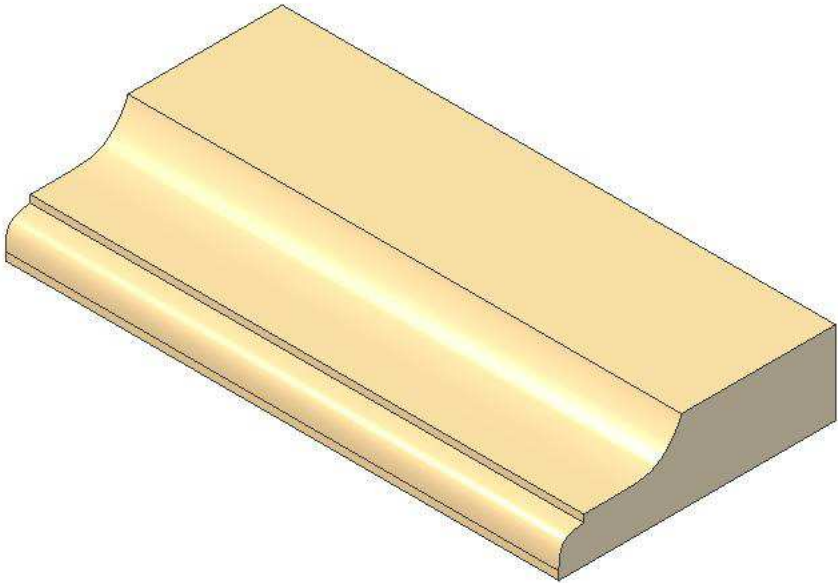

CB-51



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

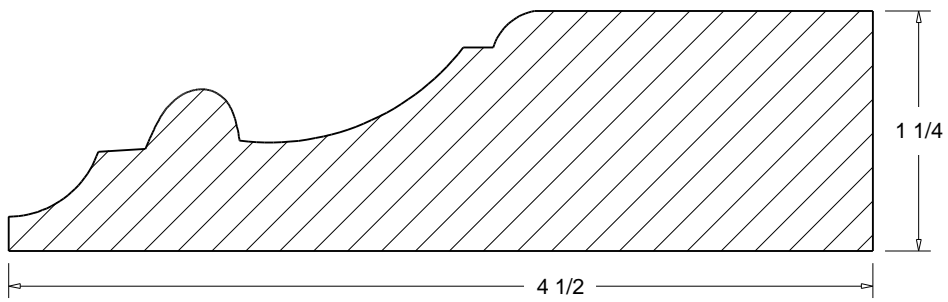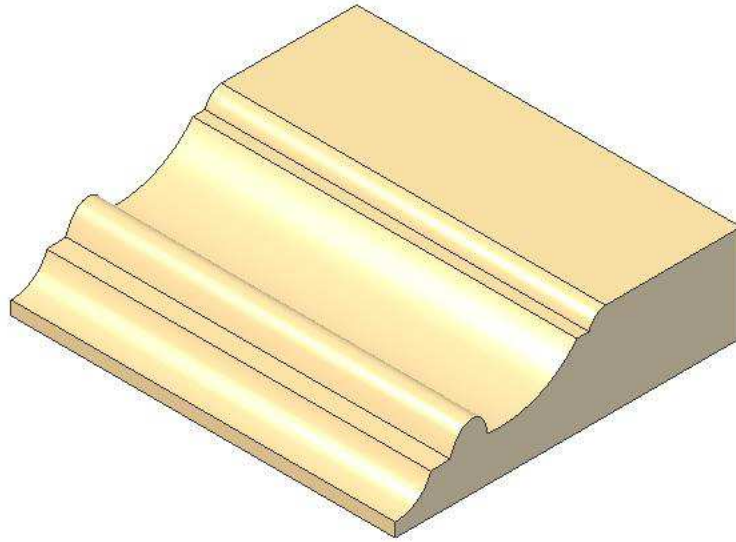

CB-52



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

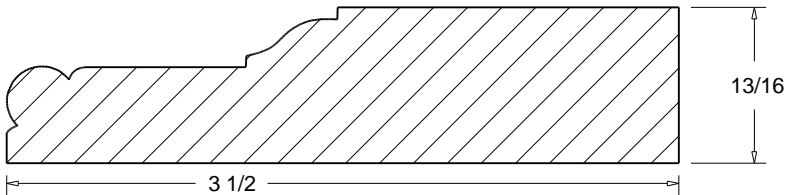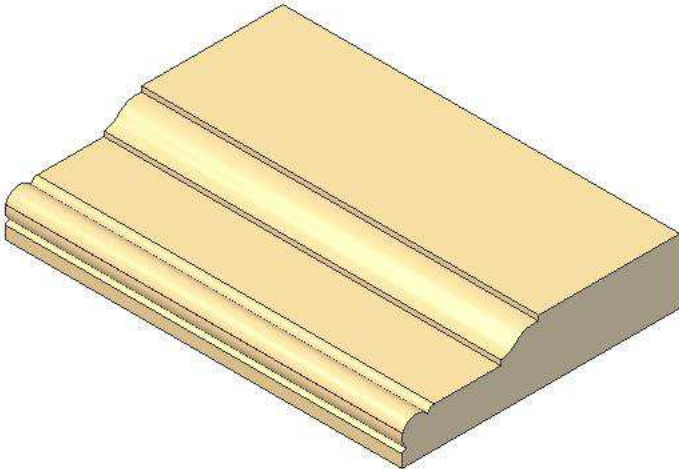

CB-53



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

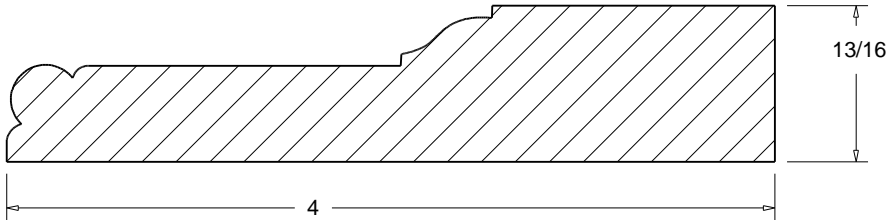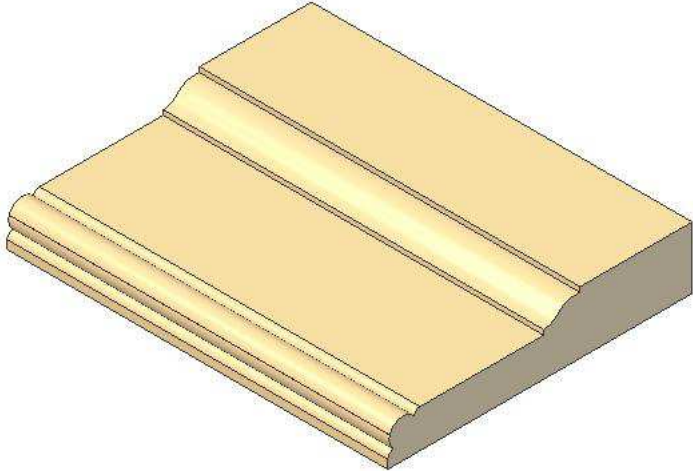

CB-54



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Casing

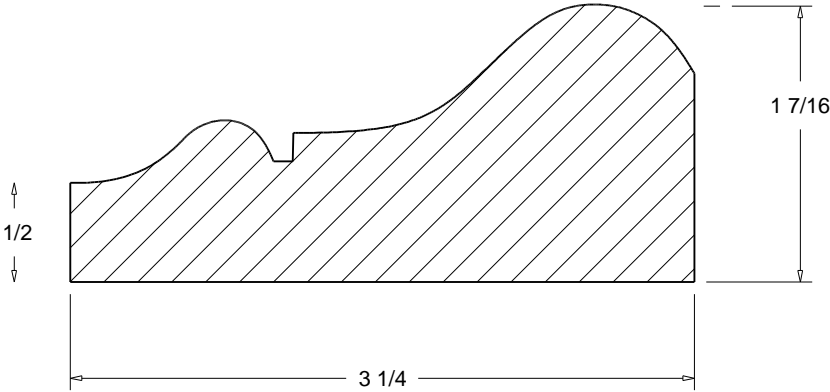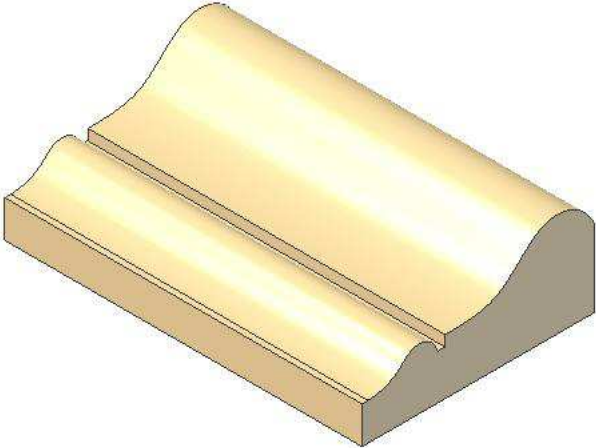

CB-55



Full Scale



HOMESTEAD
WOODWORKS

Click code to go back

Casing

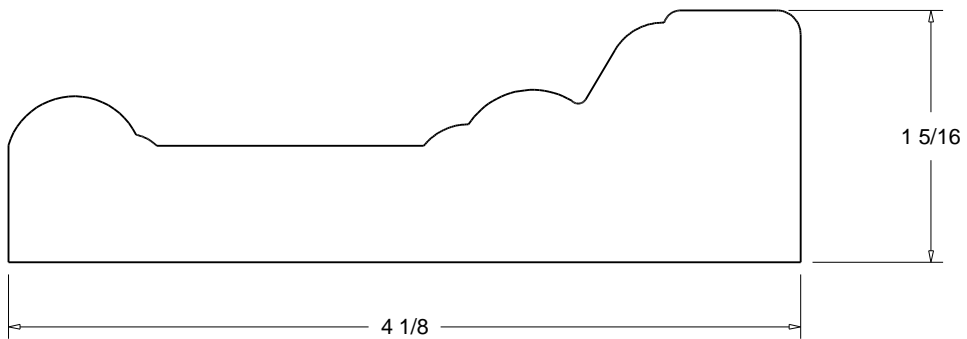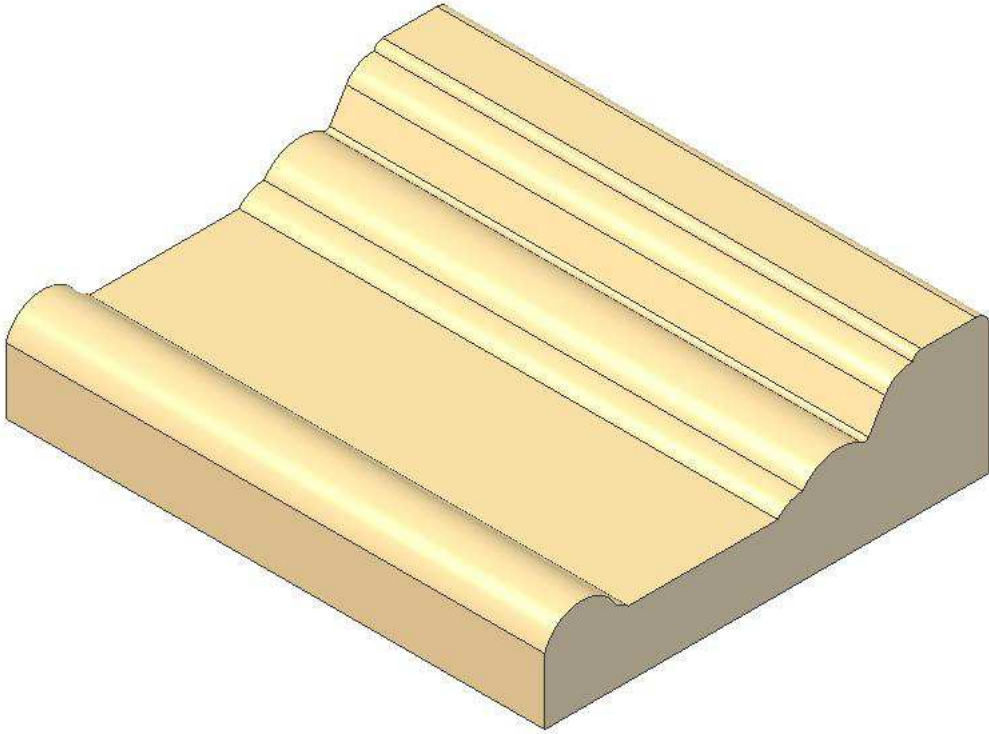

CB-56



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

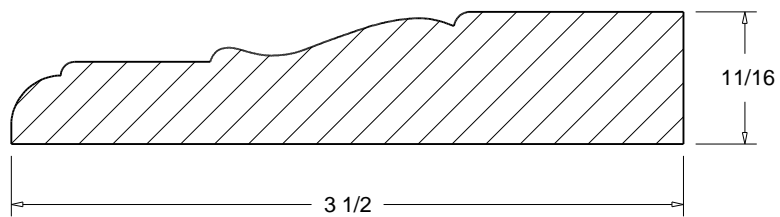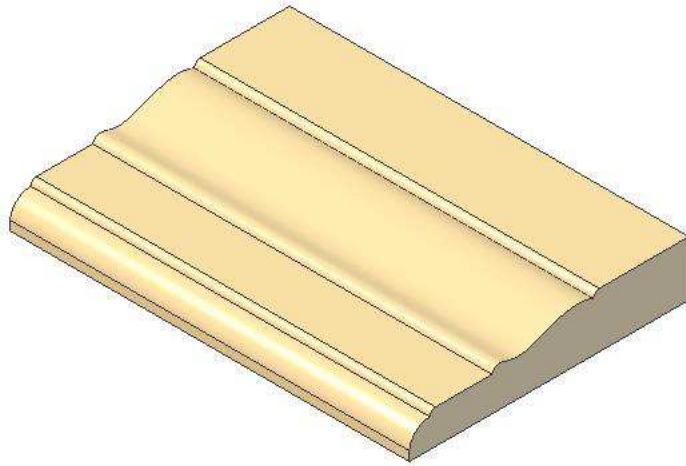

CB-57



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

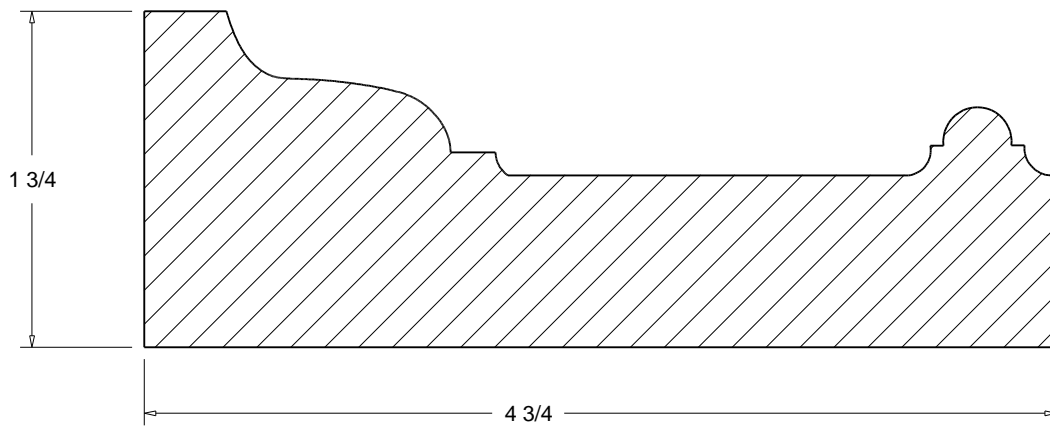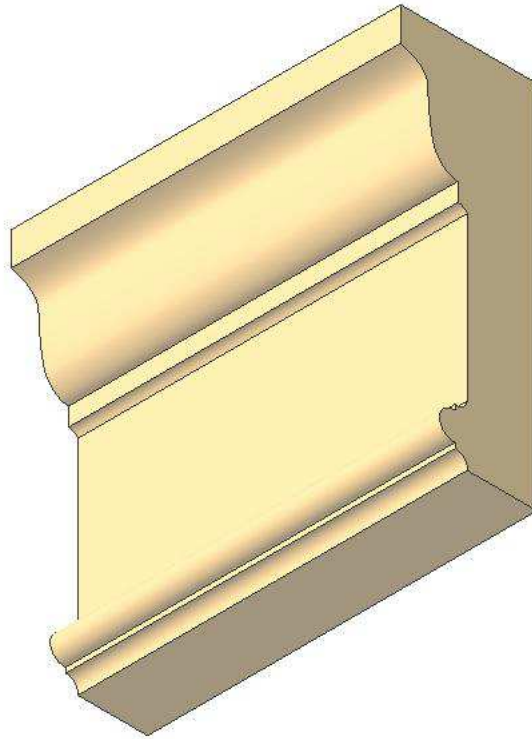

CB-58



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

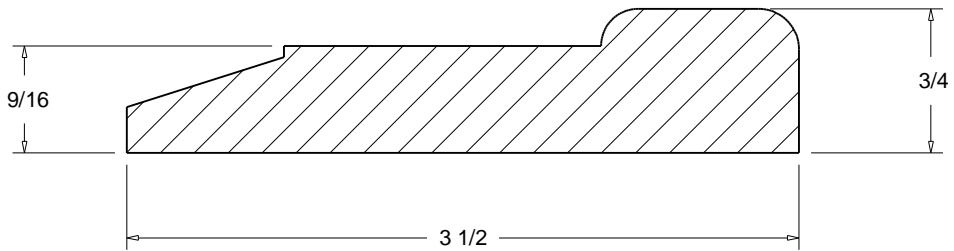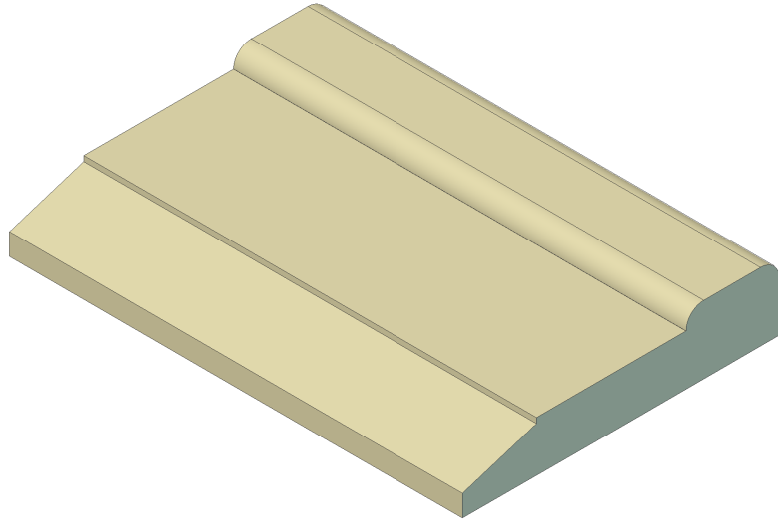

CB-59



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

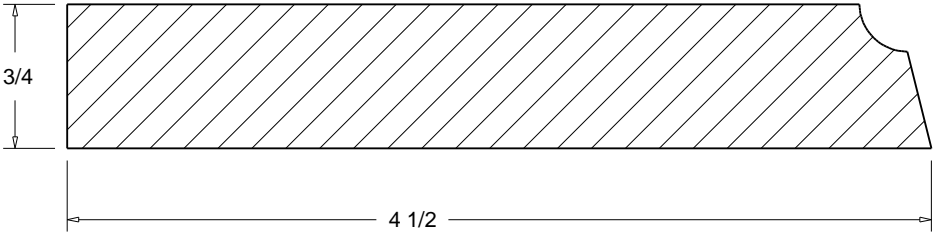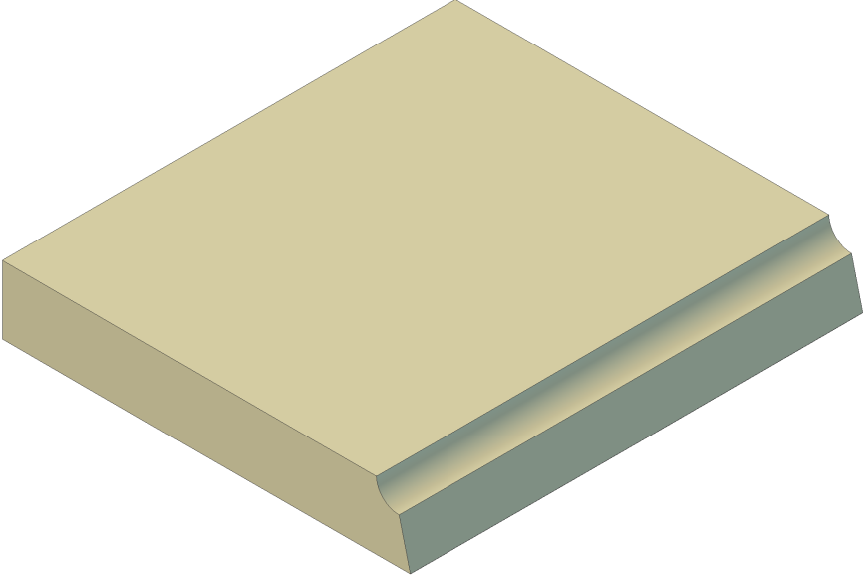

CB-60



Full Scale



HOMESTEAD
WOODWORKS

[Click code to go back](#)

Casing

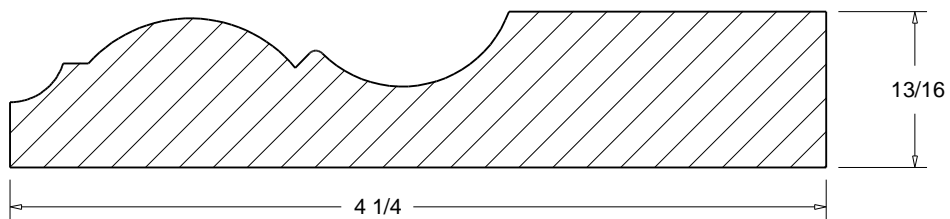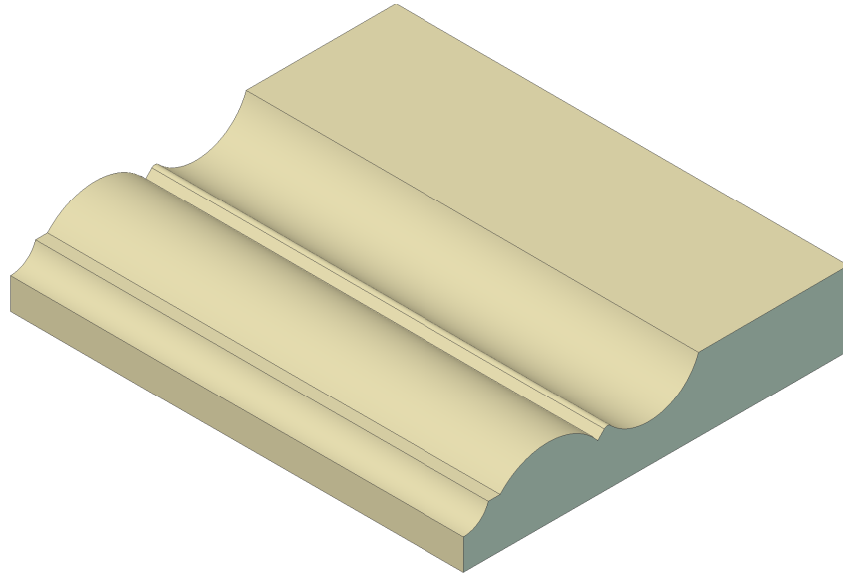

CB-61



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

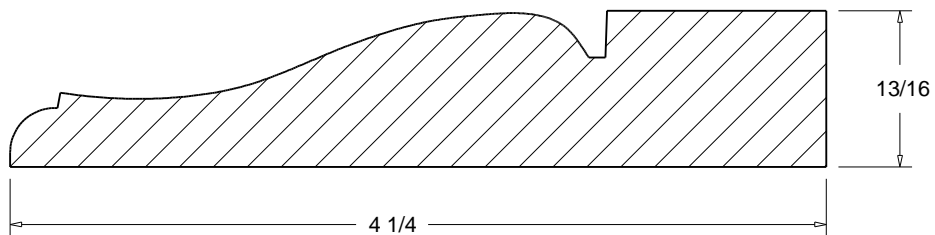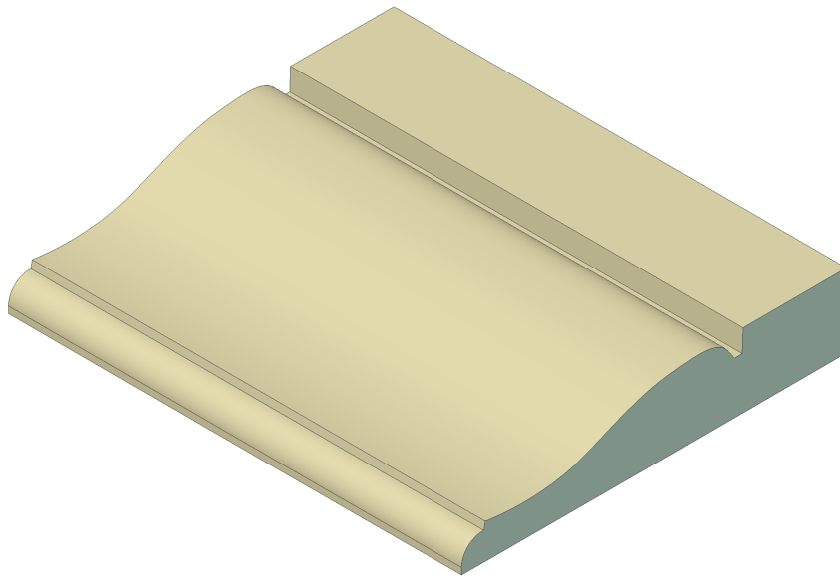

CB-62



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

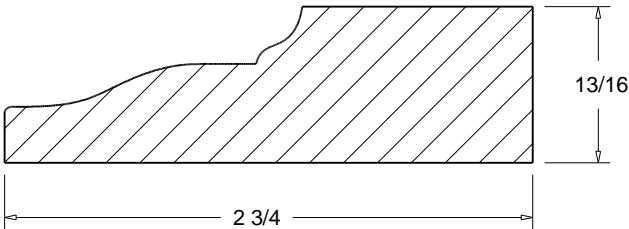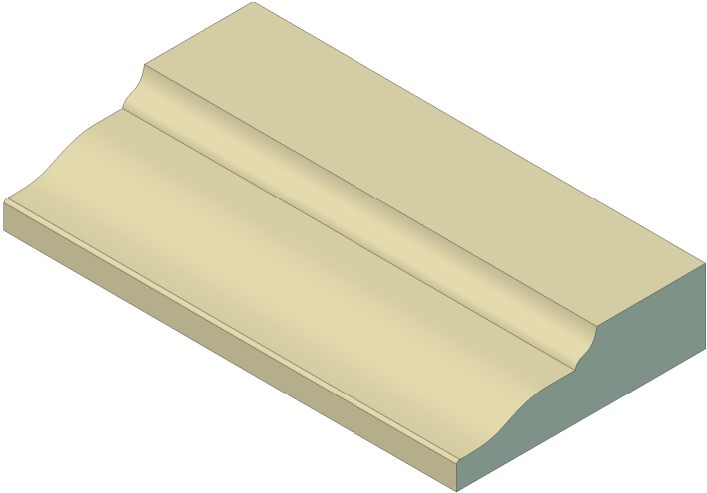

CB-63



Full Scale



HOMESTEAD
WOODWORKS

[Click code to go back](#)

Casing

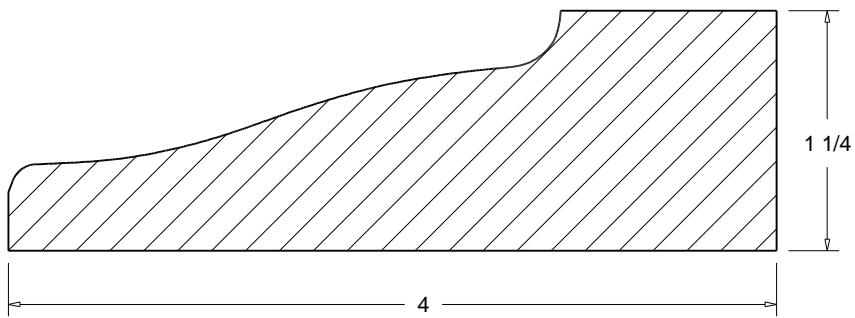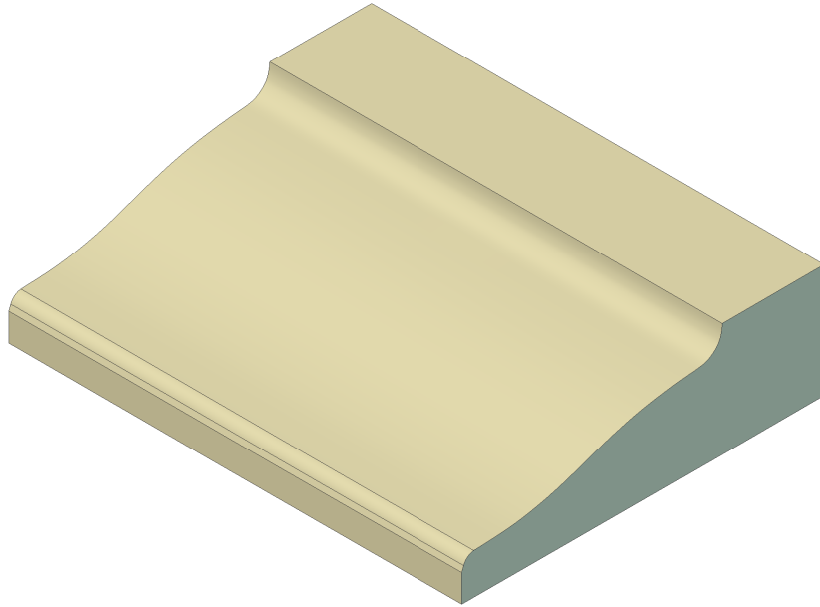

CB-64



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

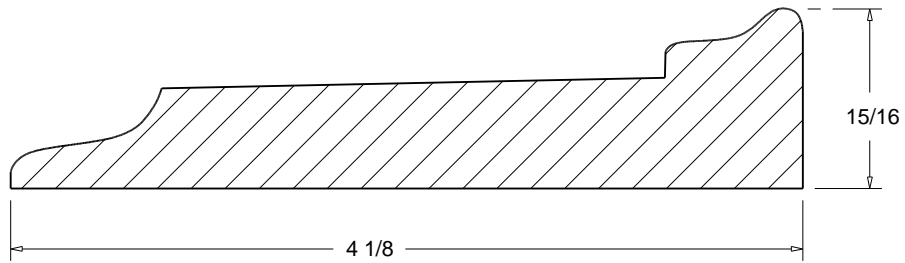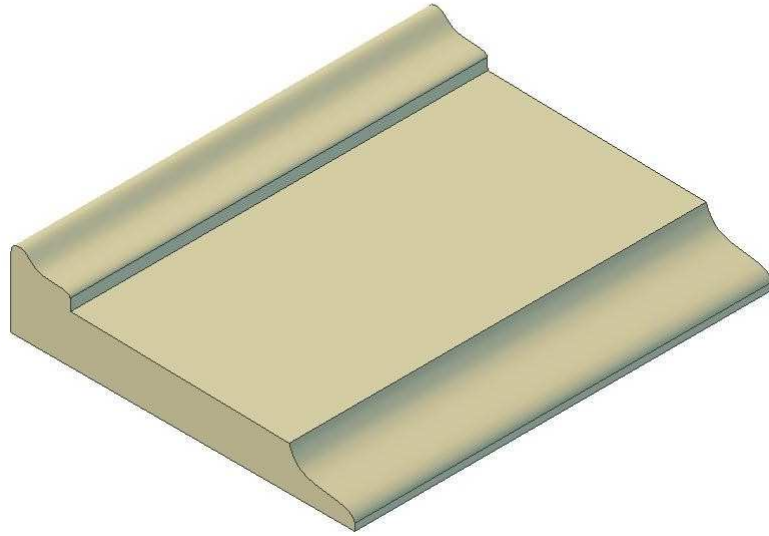

CB-65



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Casing

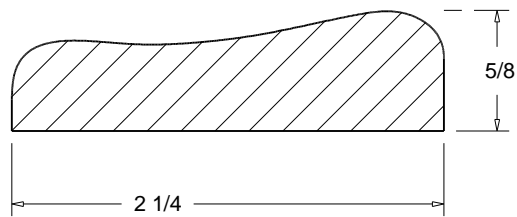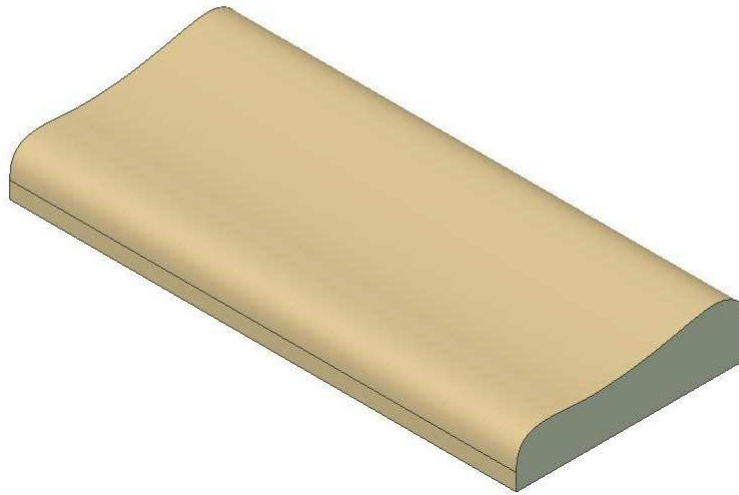

CB-66



Full Scale



[Click code to go back](#)

HOMESTEAD
WOODWORKS

Casing

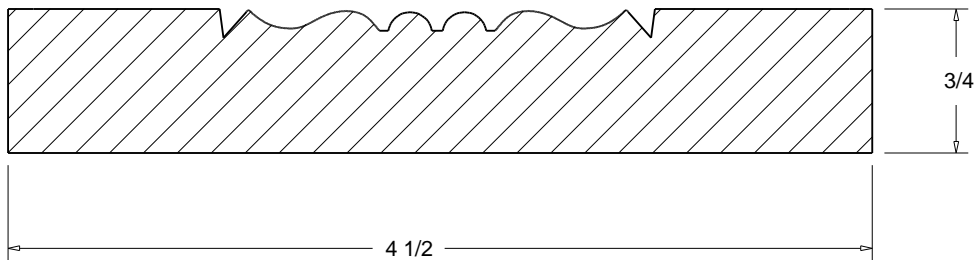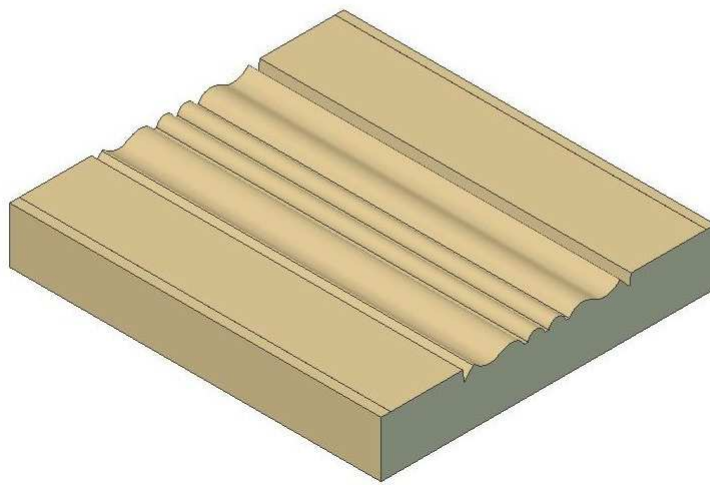

CB-67



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Back Band

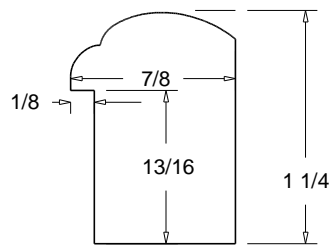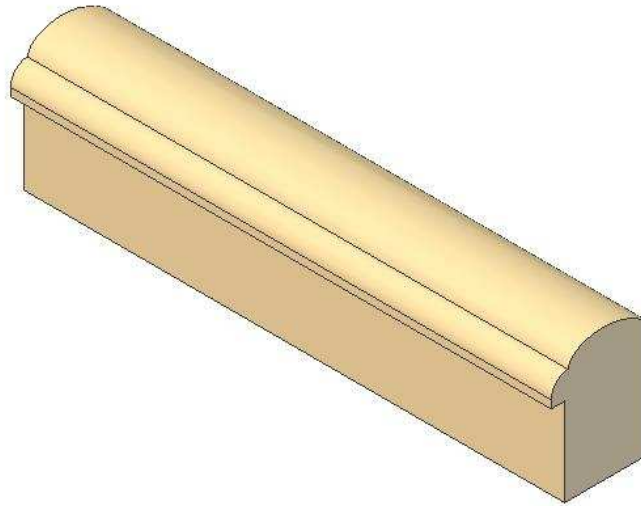

BB-01



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Back Band

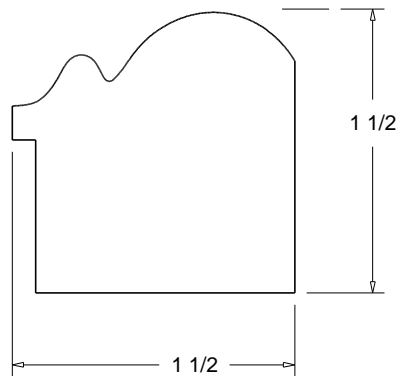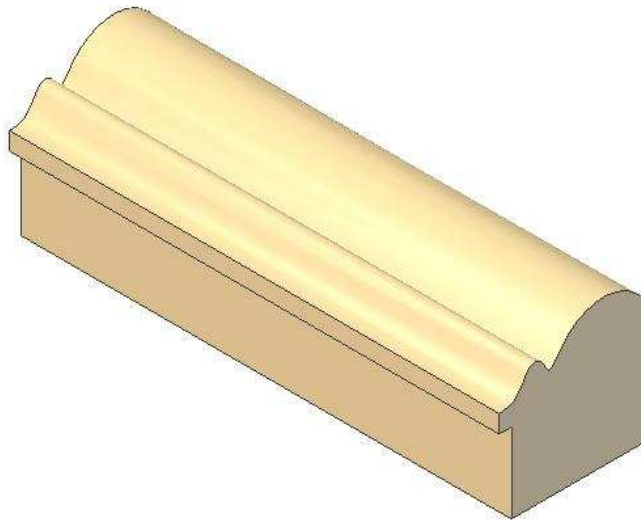

BB-02



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Back Band

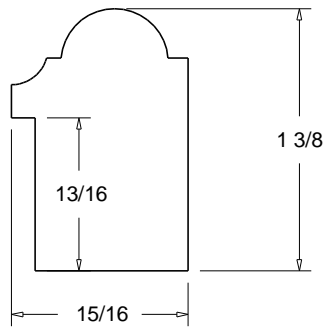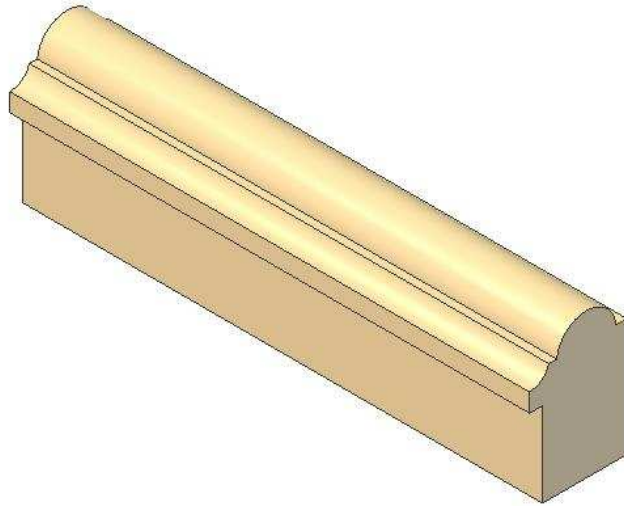

BB-03



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Back Band

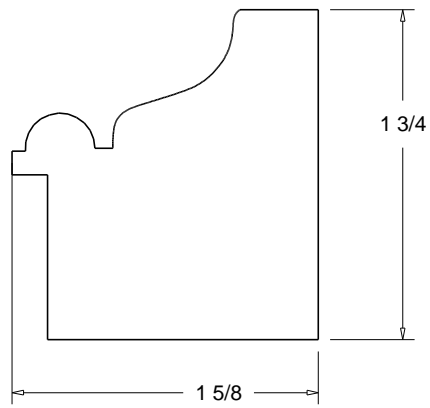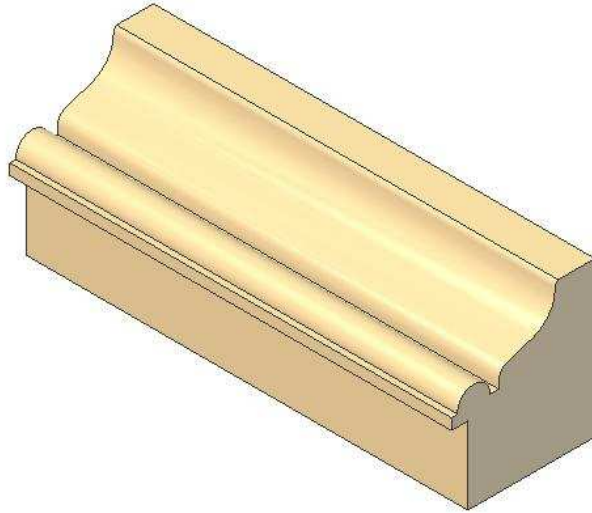

BB-04



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Back Band

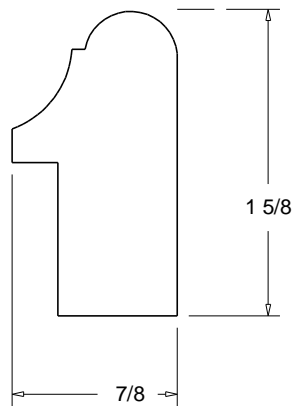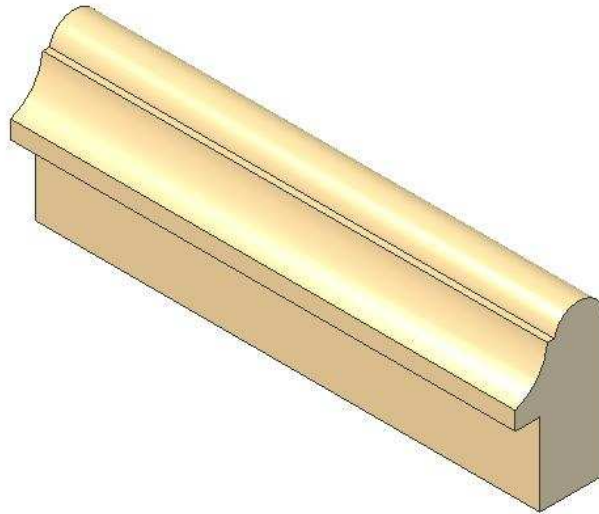

BB-05



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Back Band

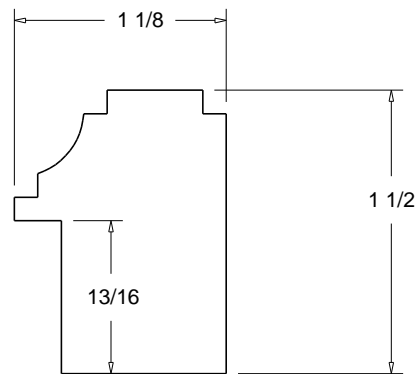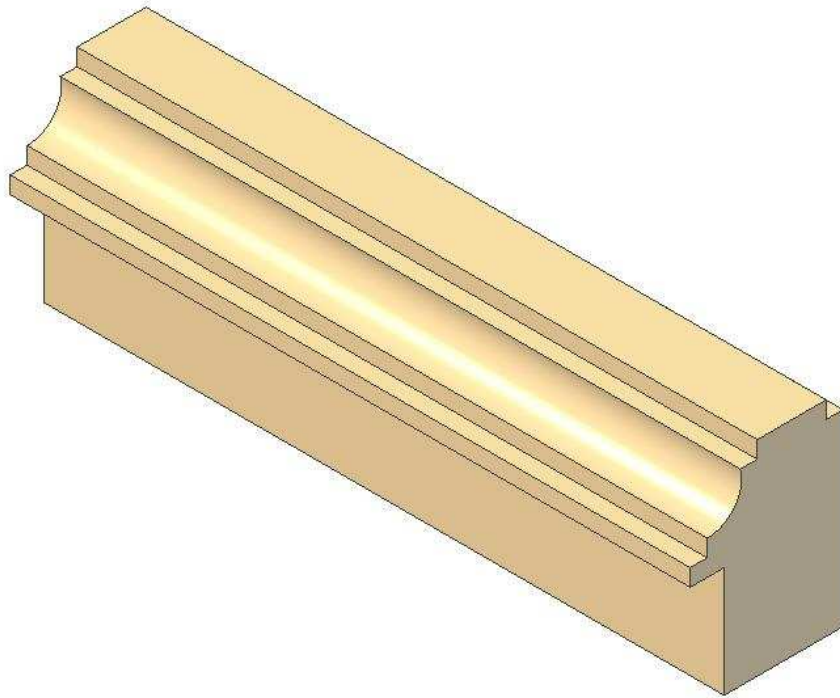

BB-06



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Back Band

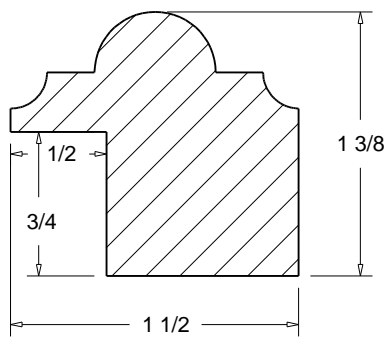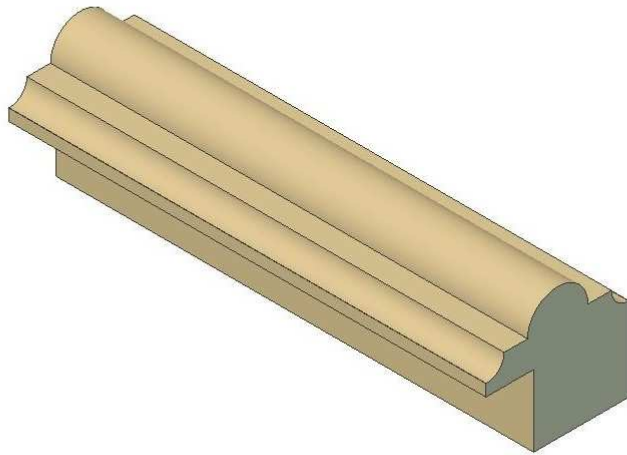

BB-07



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Back Band

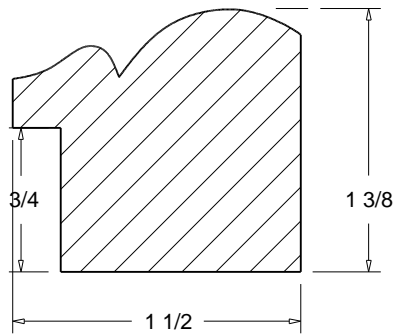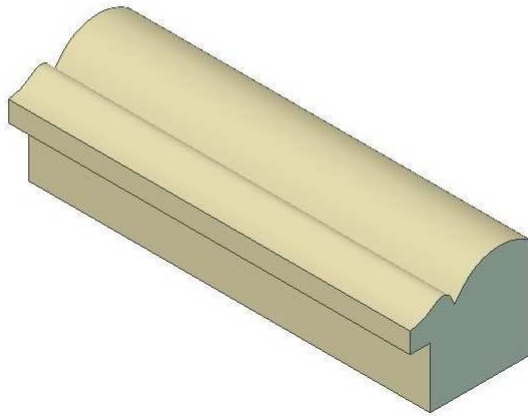

BB-06



Full Scale



HOMESTEAD
WOODWORKS

[Click code to go back](#)

Back Band

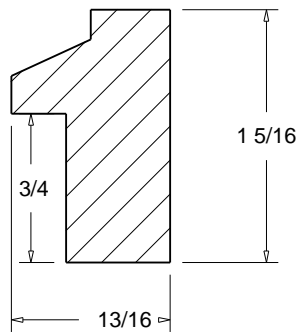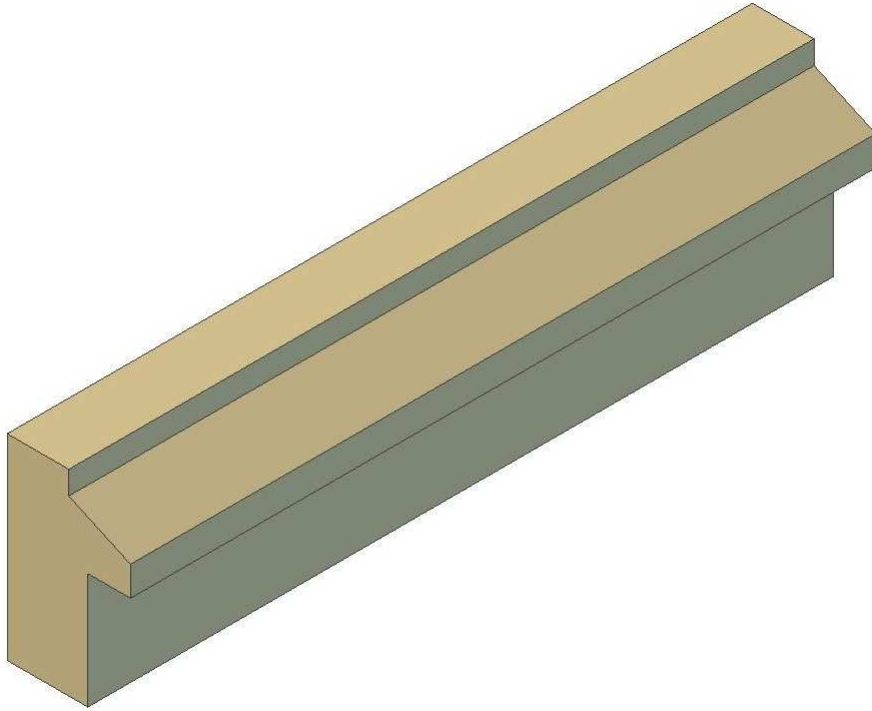

BB-09


Full Scale




HOMESTEAD
WOODWORKS

[Click code to go back](#)

Crown Mould

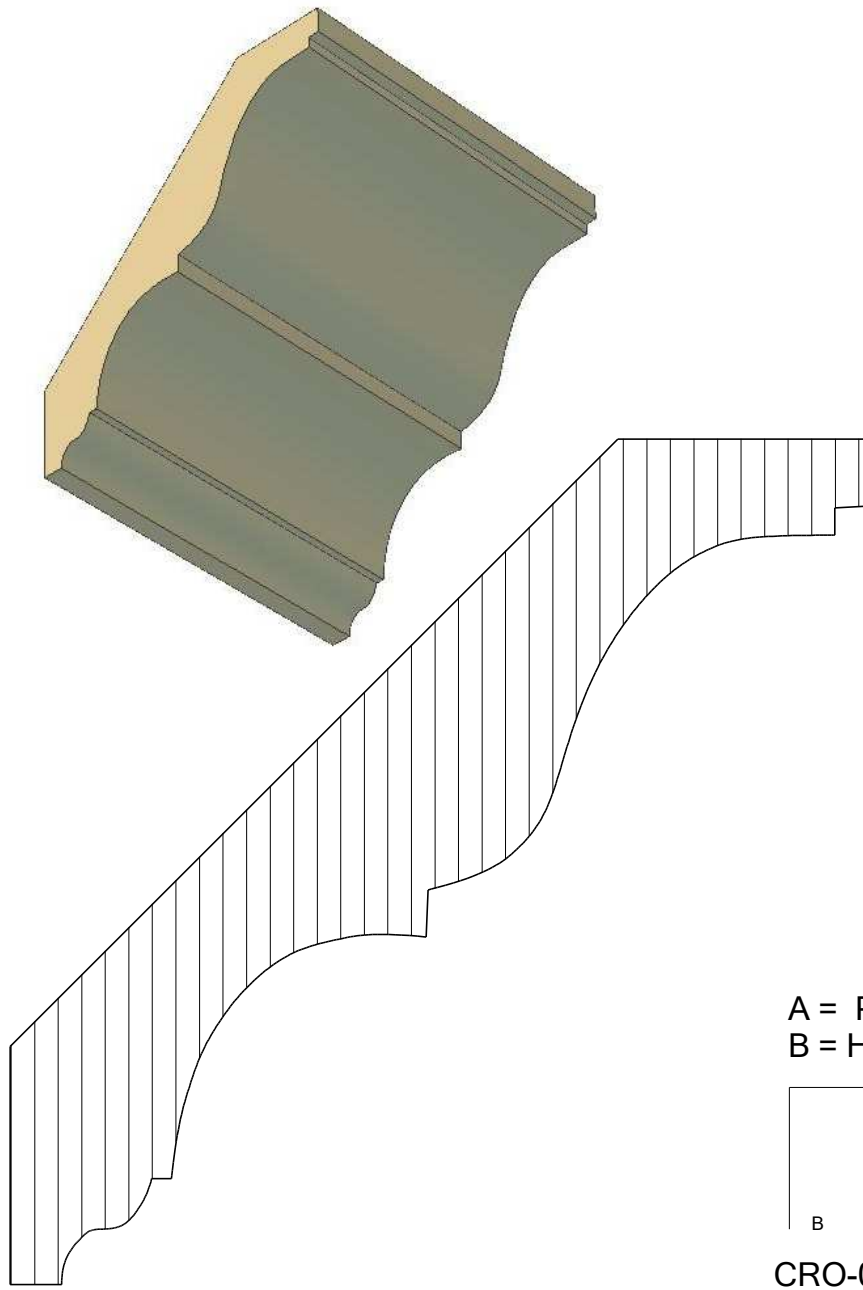

A = PROJECTION
B = HEIGHT

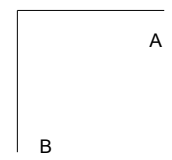

CRO-01 (A 4 1/2")
(B 4 1/2")


CRO-01 6 3/8

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Crown Mould

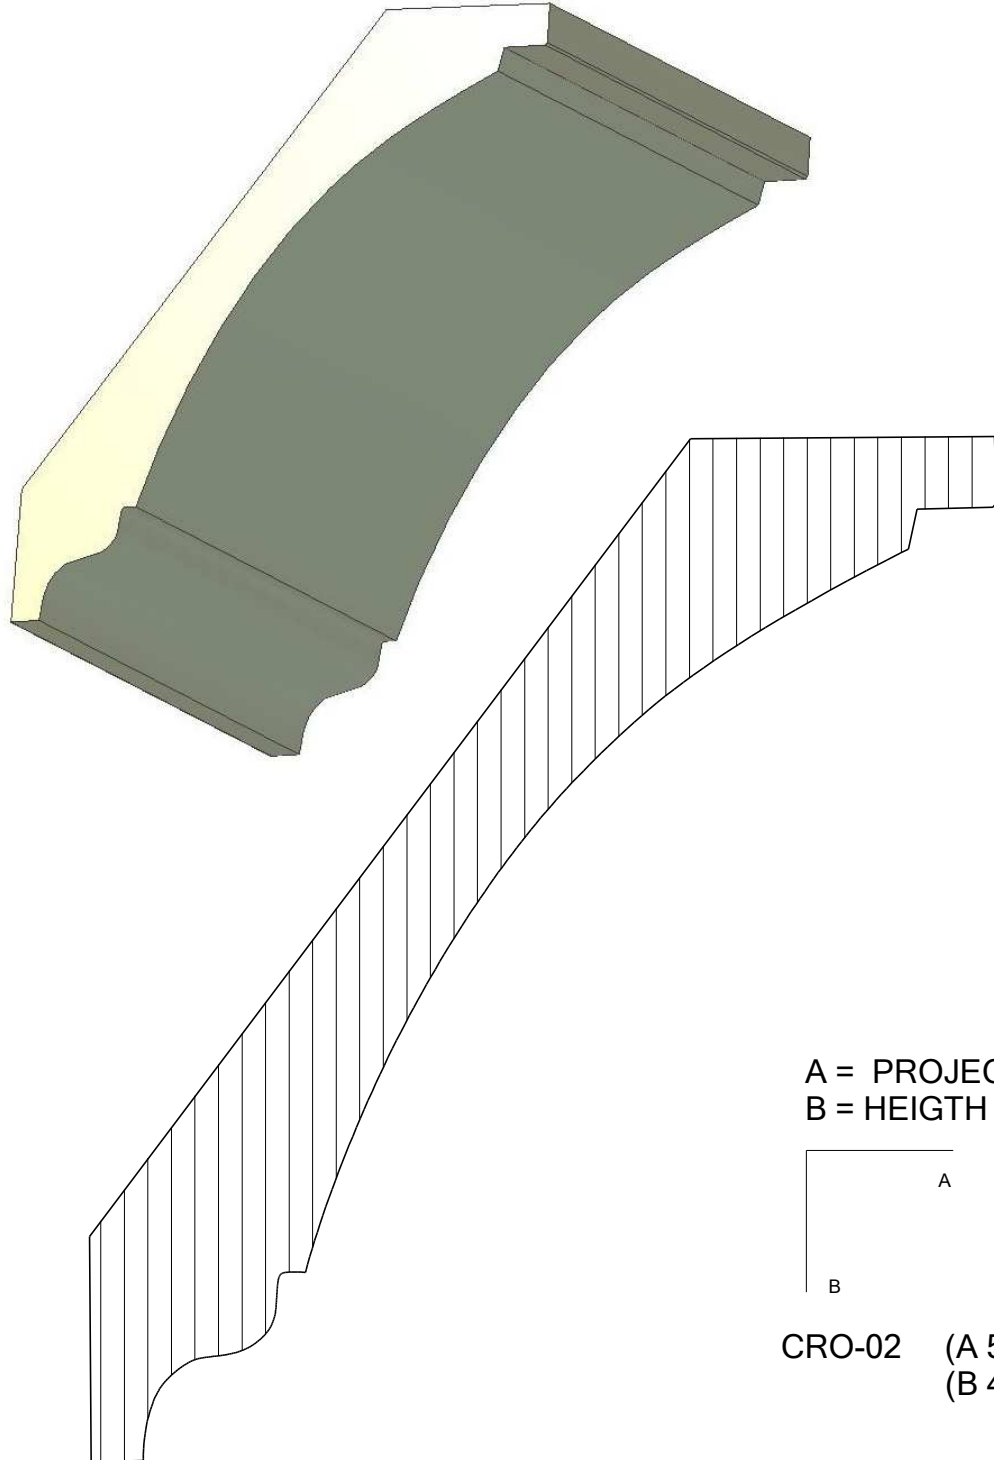



CRO-02 7 1/4

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

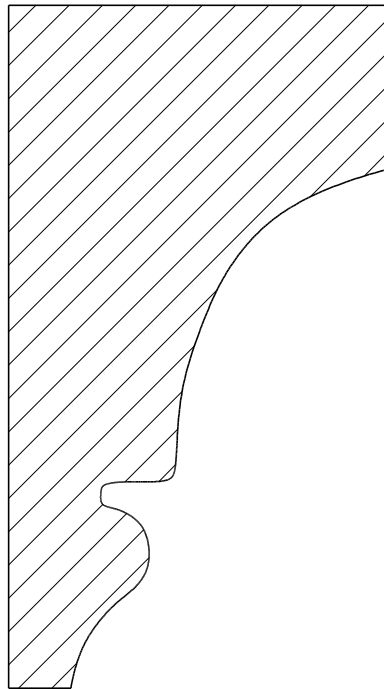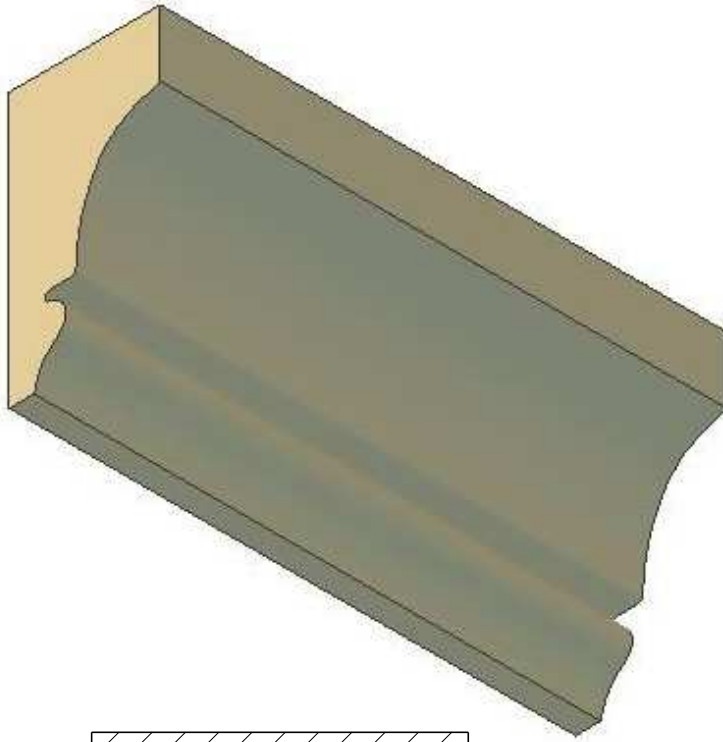

A = PROJECTION
B = HEIGHT

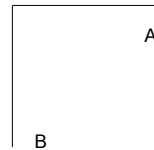

CRO-03 (A 4 1/2")
(B 4 1/2")



CRO-03 4 1/8

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Corwn Mould

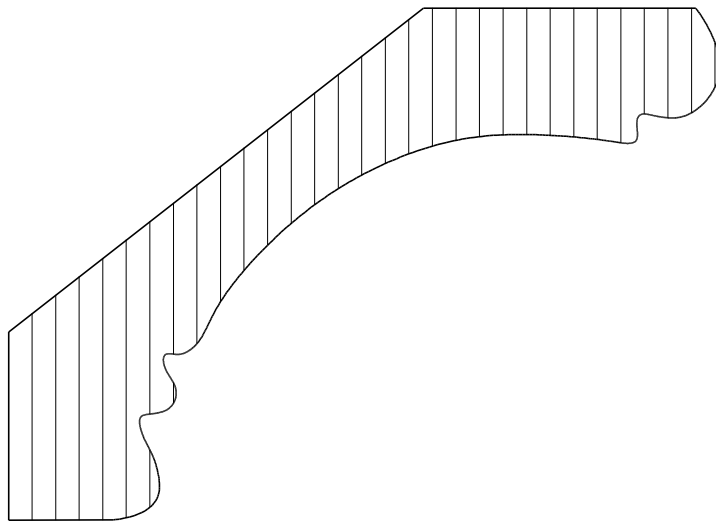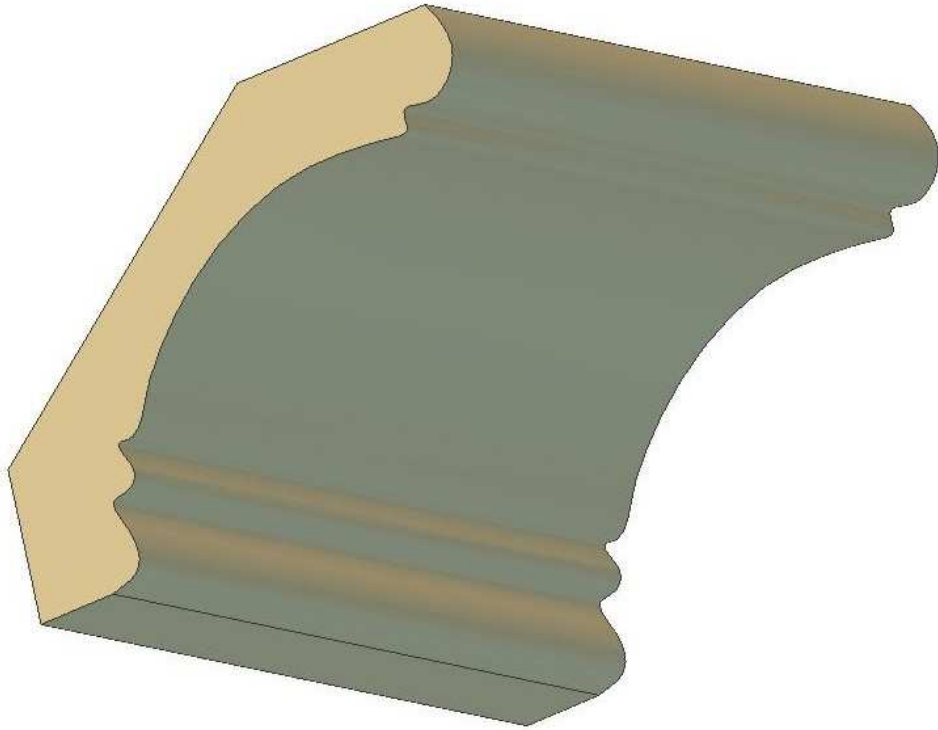

A = PROJECTION
B = HEIGHT

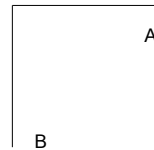

CRO-04 (A 3 5/8")
(B 2 3/4")



CRO-04 4 1/2

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

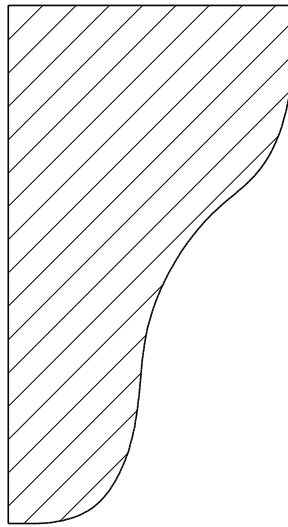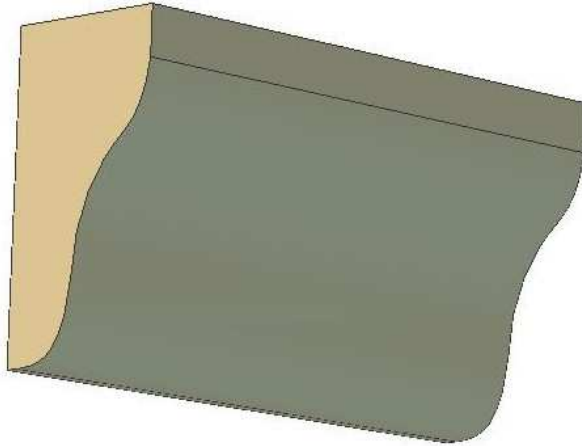

A = PROJECTION
B = HEIGHT

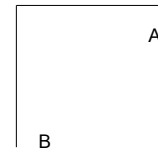

CRO-05 (A 1 1/2")
(B 2 3/4")



CRO-05 3 1/8

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Crown Mould

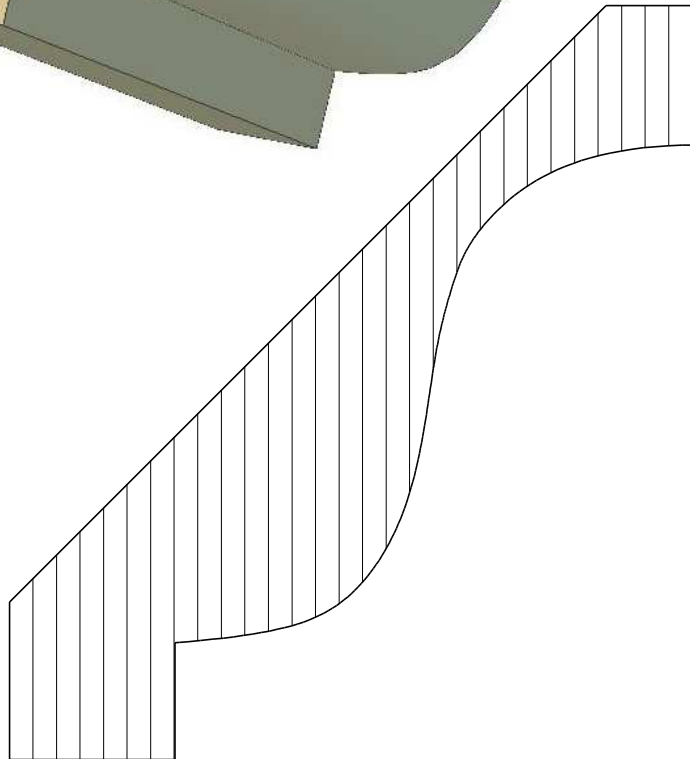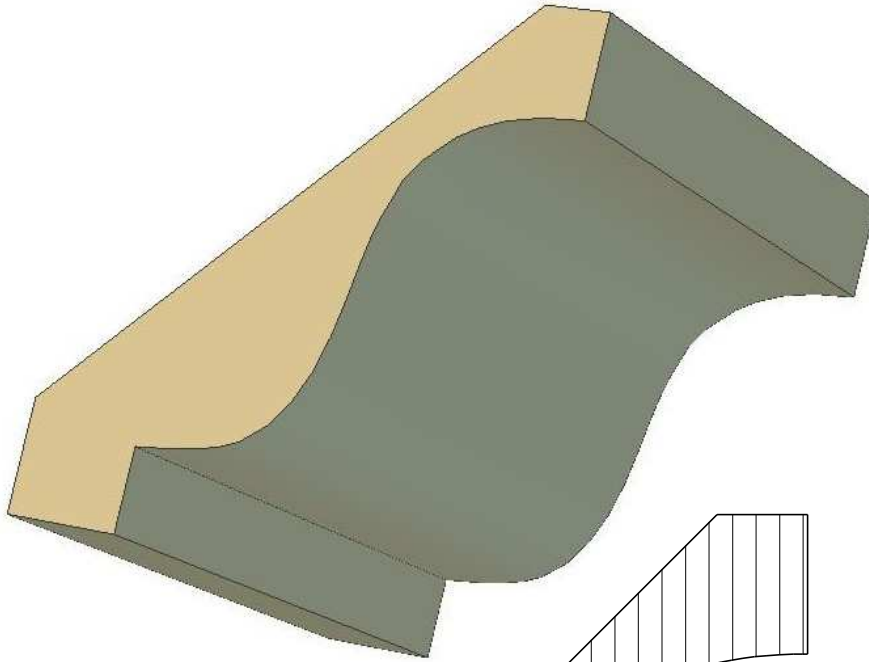

A = PROJECTION
B = HEIGHT



CRO-06 (A 3 5/8")
(B 2")



CRO-06 4 3/8

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

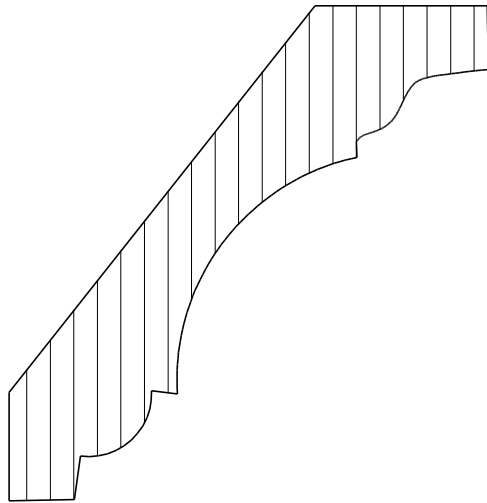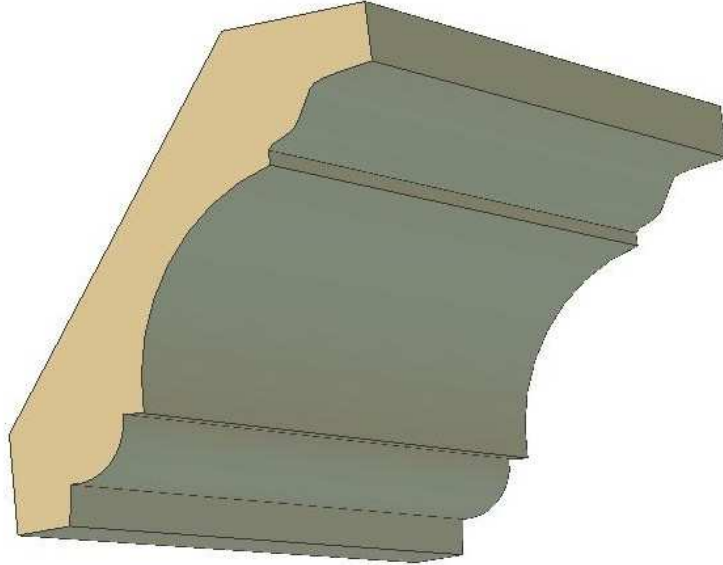

A = PROJECTION
B = HEIGHT

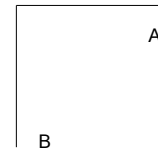

CRO-07 (A 2 1/2")
(B 2 1/2")



CRO-07 3 5/8

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

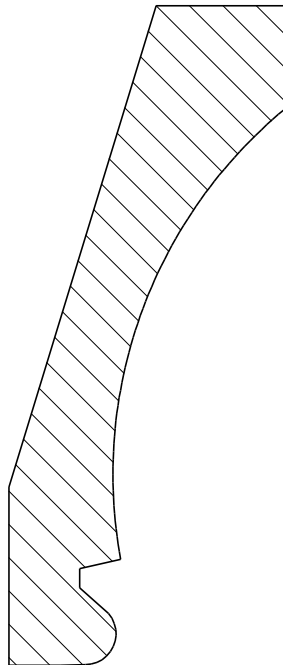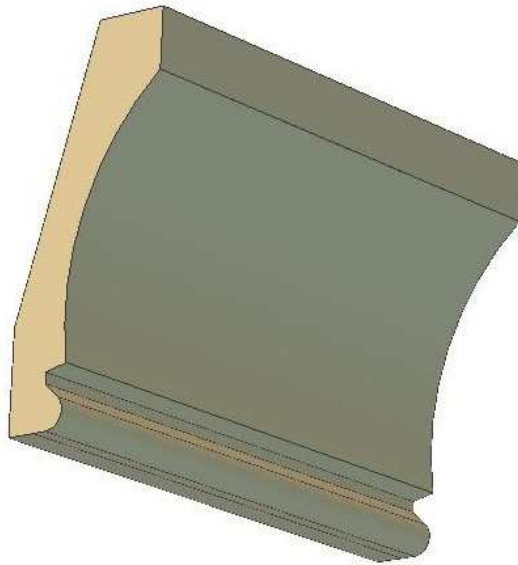

A = PROJECTION
B = HEIGHT

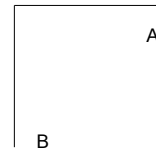

CRO-08 (A 1 1/2")
(B 3 1/2")


CRO-08 4 3/4

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Crown Mould

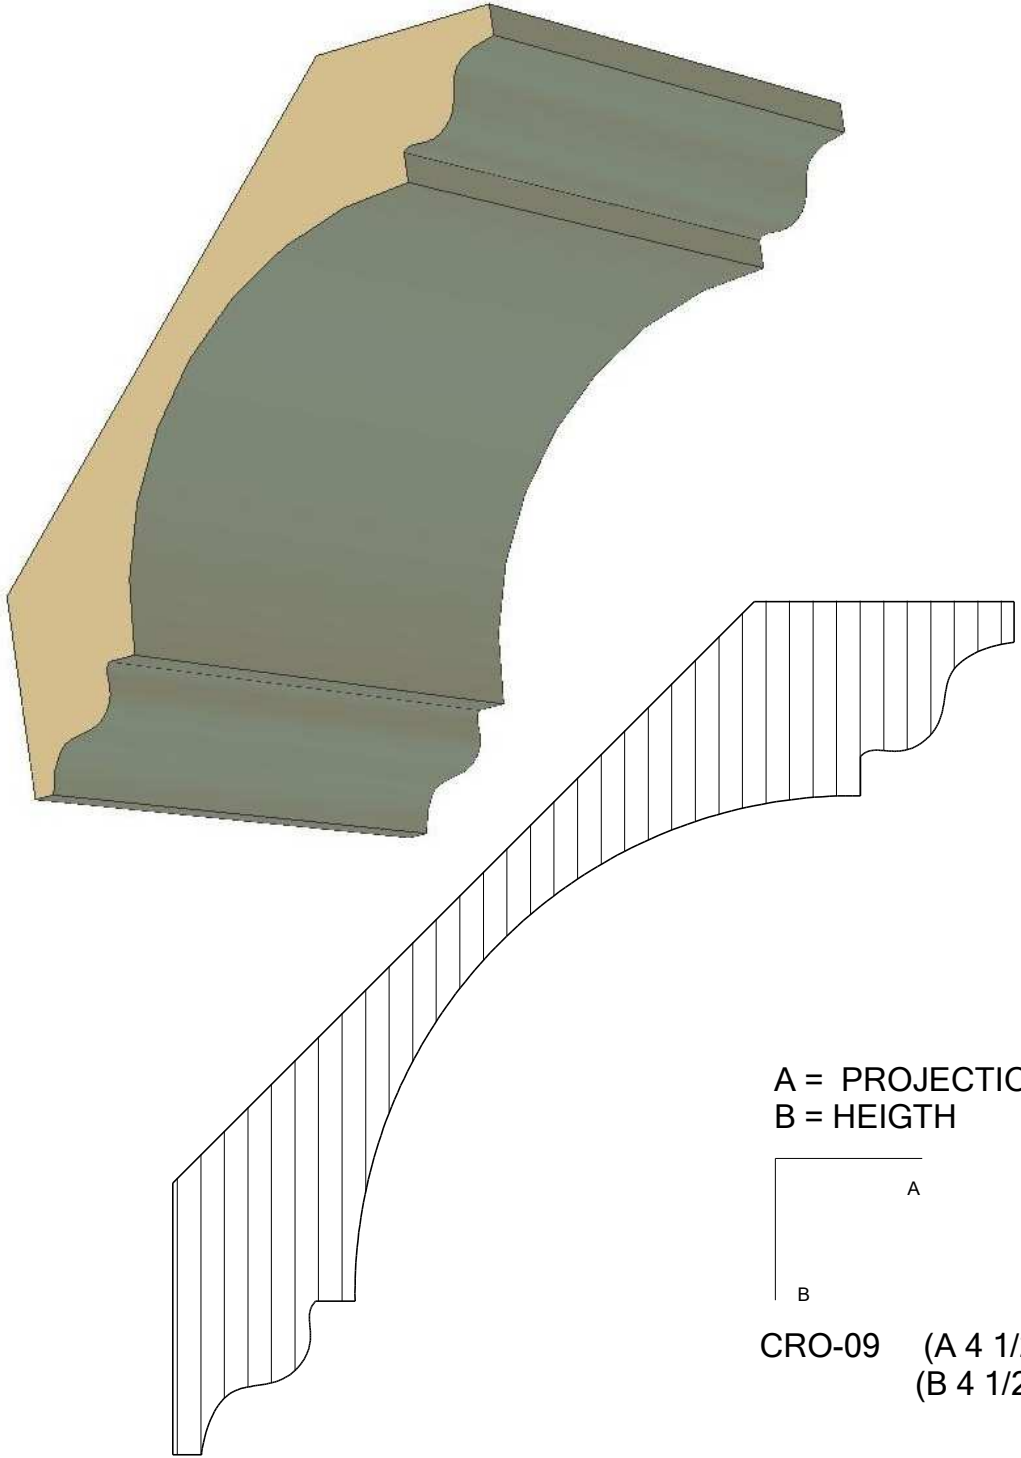



CRO-09 6 3/8

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

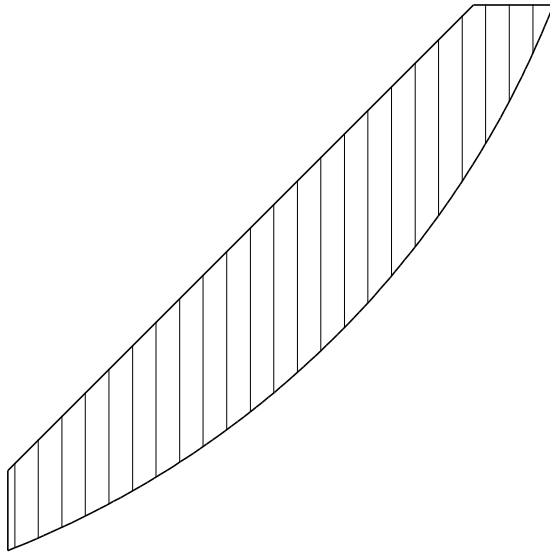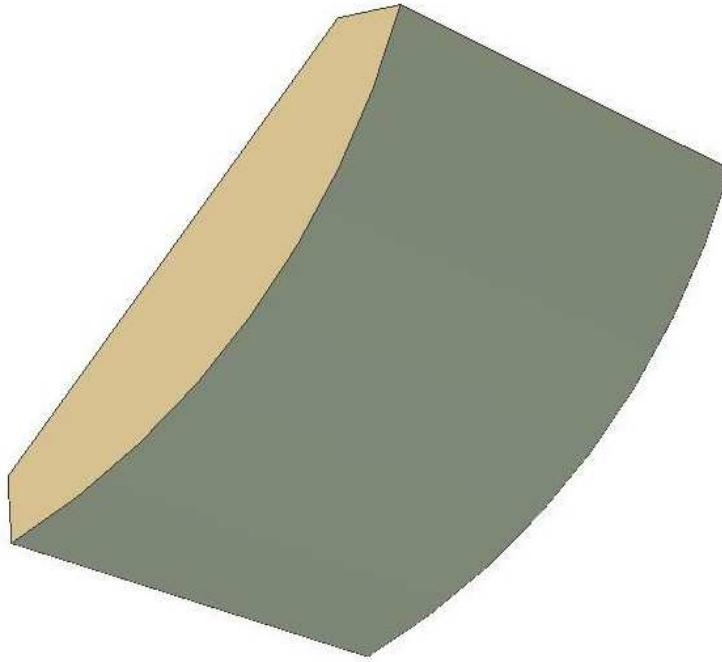

A = PROJECTION
B = HEIGHT

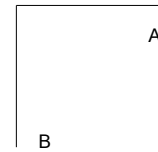

CRO-10 (A 2 7/8")
(B 2 7/8")



CRO-10 4"

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

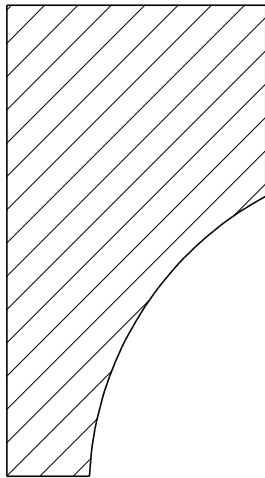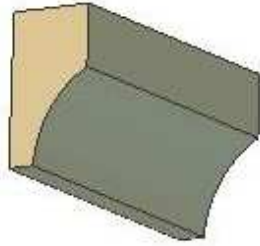

A = PROJECTION
B = HEIGHT

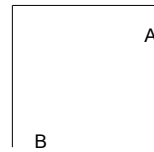

CRO-05 (A 1 3/8")
(B 2 1/2")



CRO-11 3 7/8"

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

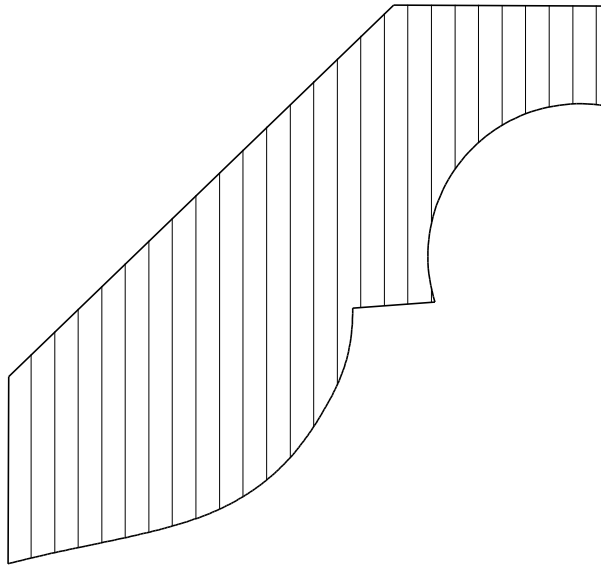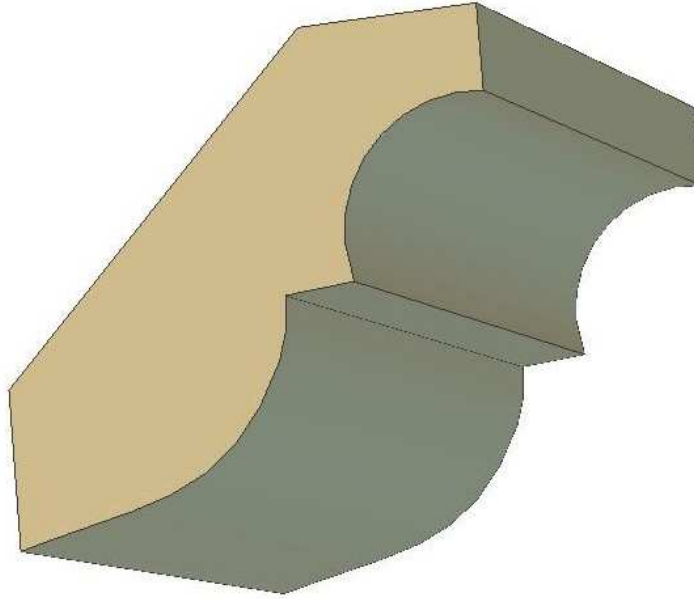

A = PROJECTION
B = HEIGHT

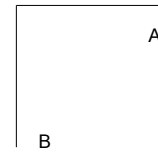

CRO-12 (A 3 3/8")
(B 3")



CRO-12 4 3/8"

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

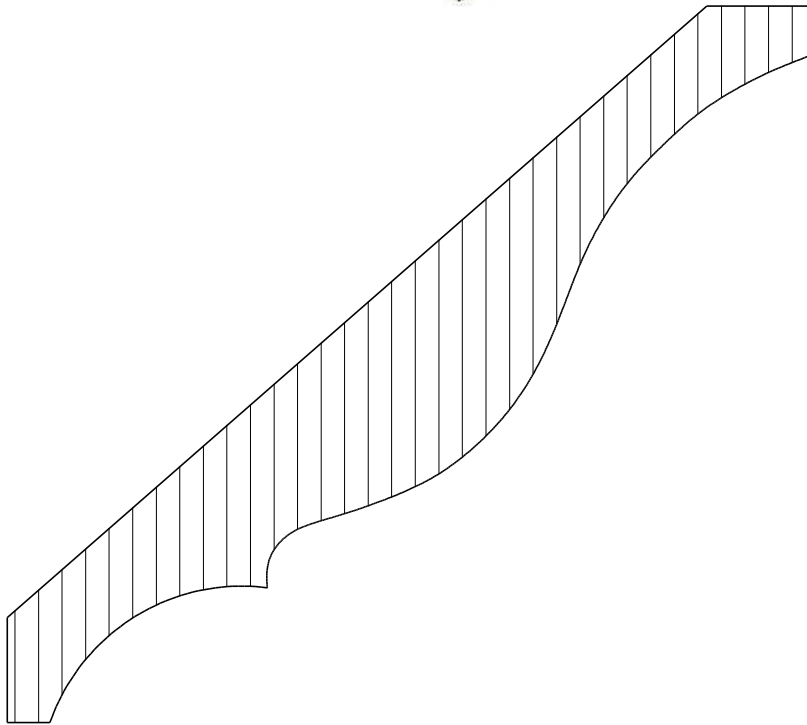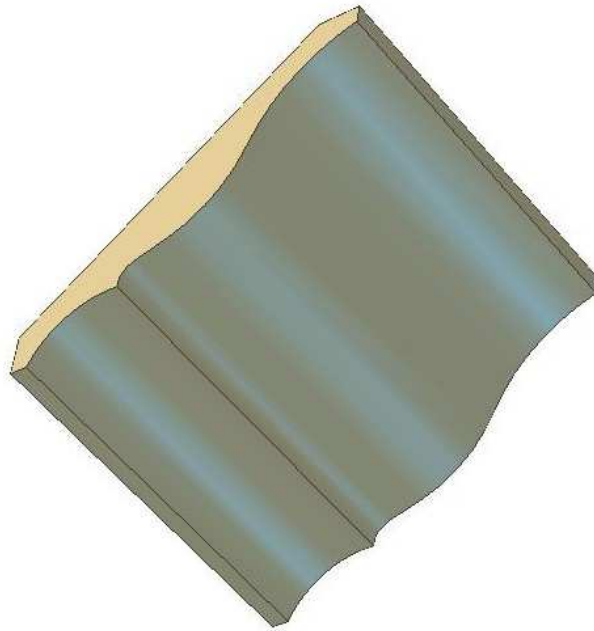

A = PROJECTION
B = HEIGHT

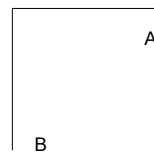

CRO-13 (A 4 1/4")
(B 3 3/4")



CRO-13 5 3/4"

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

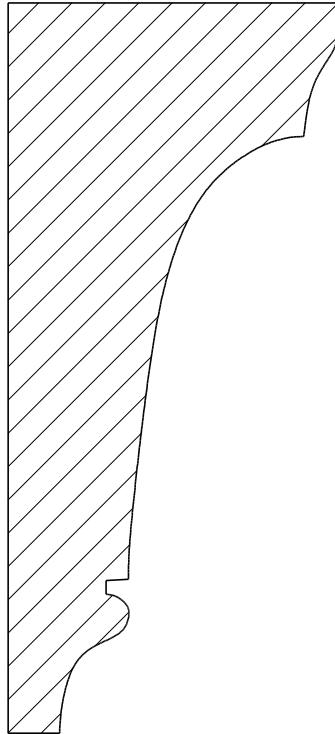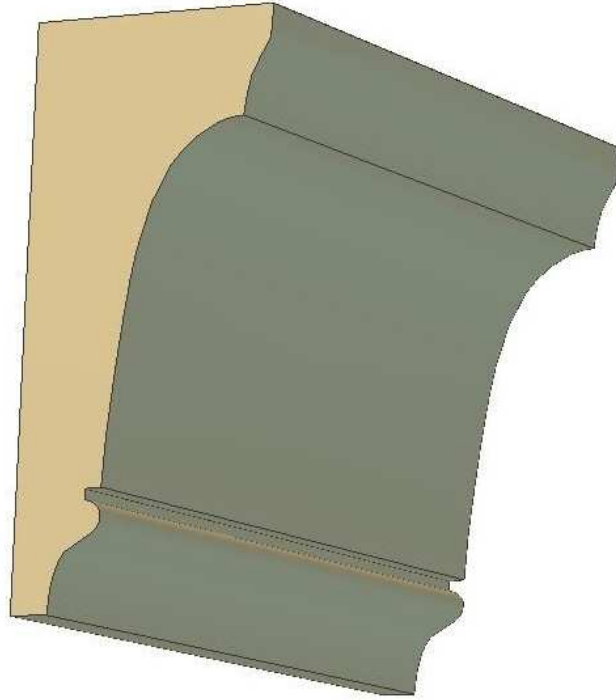

A = PROJECTION
B = HEIGHT

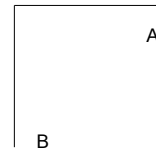

CRO-14 (A 3 7/8")
(B 3 7/8")



CRO-14 3 7/8

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

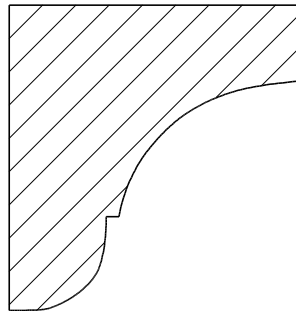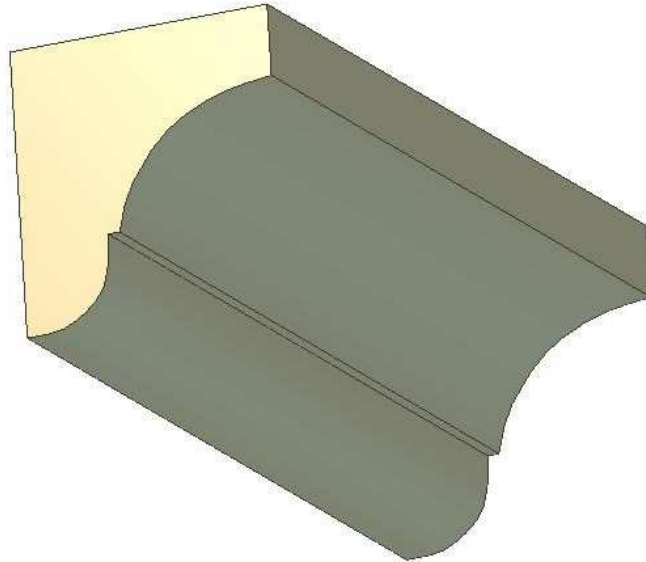

A = PROJECTION
B = HEIGHT

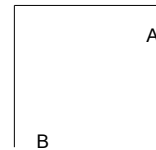

CRO-15 (A 1 9/16")
(B 1 5/8")



CRO-15 2 1/4"

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Crown Mould

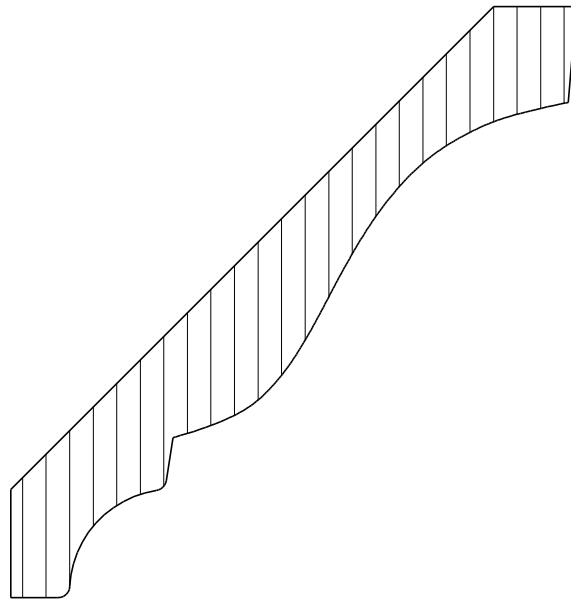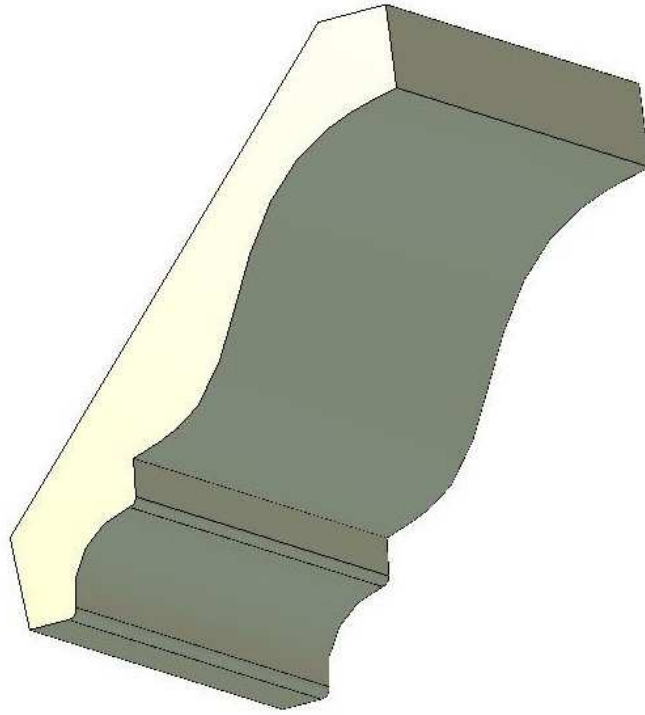

A = PROJECTION
B = HEIGHT



CRO-16 (A 3")
(B 3 1/8")



CRO-16 4 3/8"

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

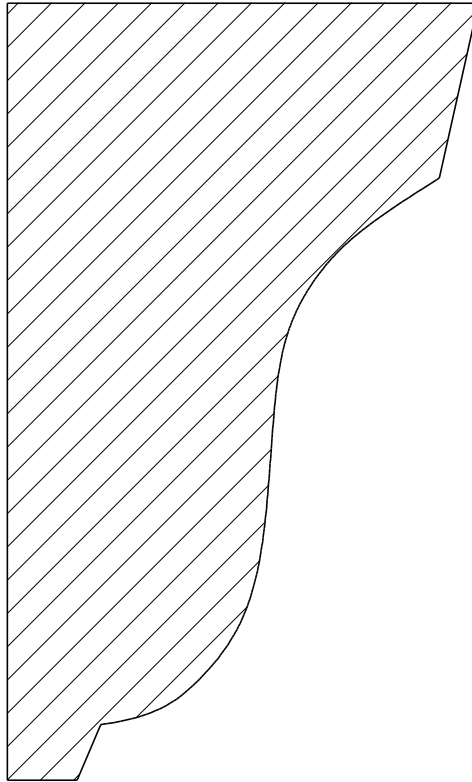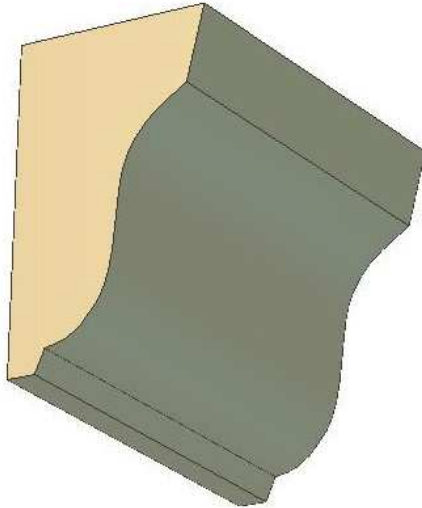

A = PROJECTION
B = HEIGHT

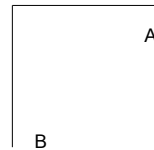

CRO-05 (A 2 1/2")
(B 4 1/8")



CRO-17 4 7/8"

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

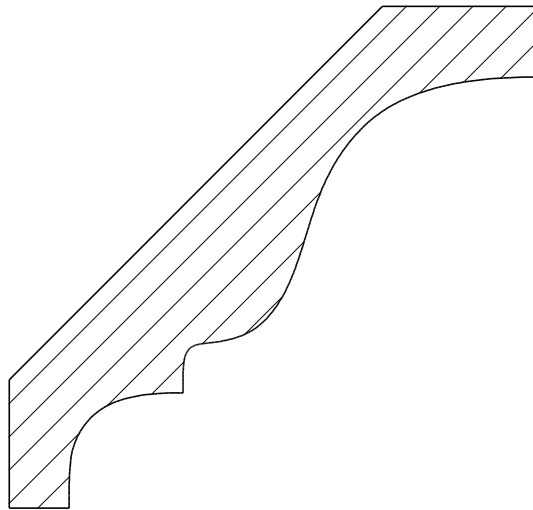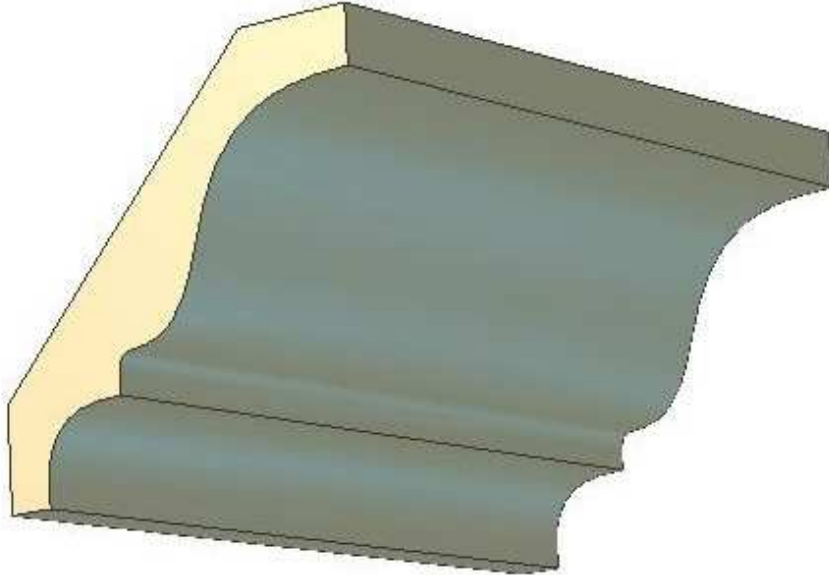

A = PROJECTION
B = HEIGHT

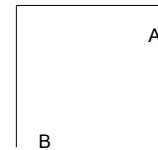

CRO-18 (A 2 13/16")
(B 2 5/8")



CRO-18 3 13/16"

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

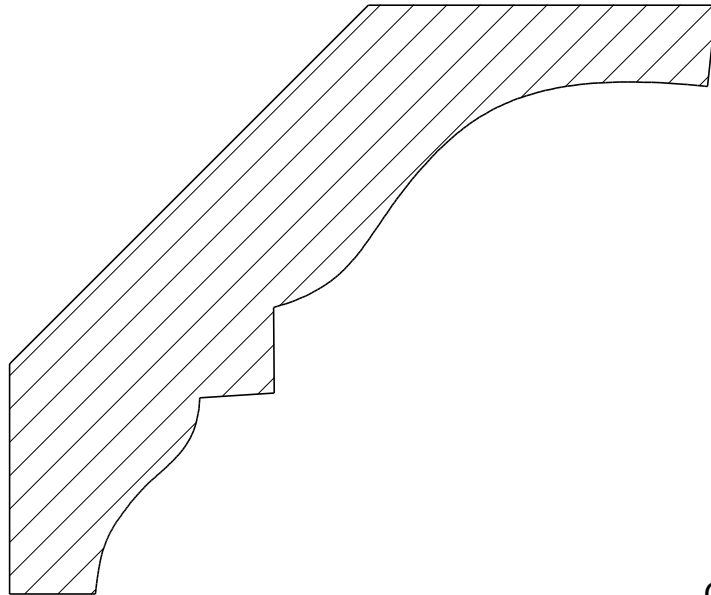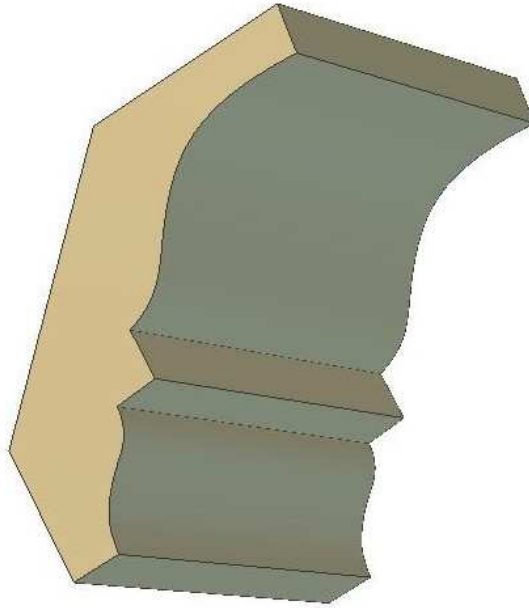

A = PROJECTION
B = HEIGHT

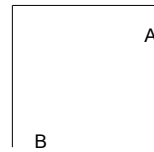

CRO-19 (A 3 3/4")
(B 3 1/8")


CRO-19 4 13/16

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Crown Mould

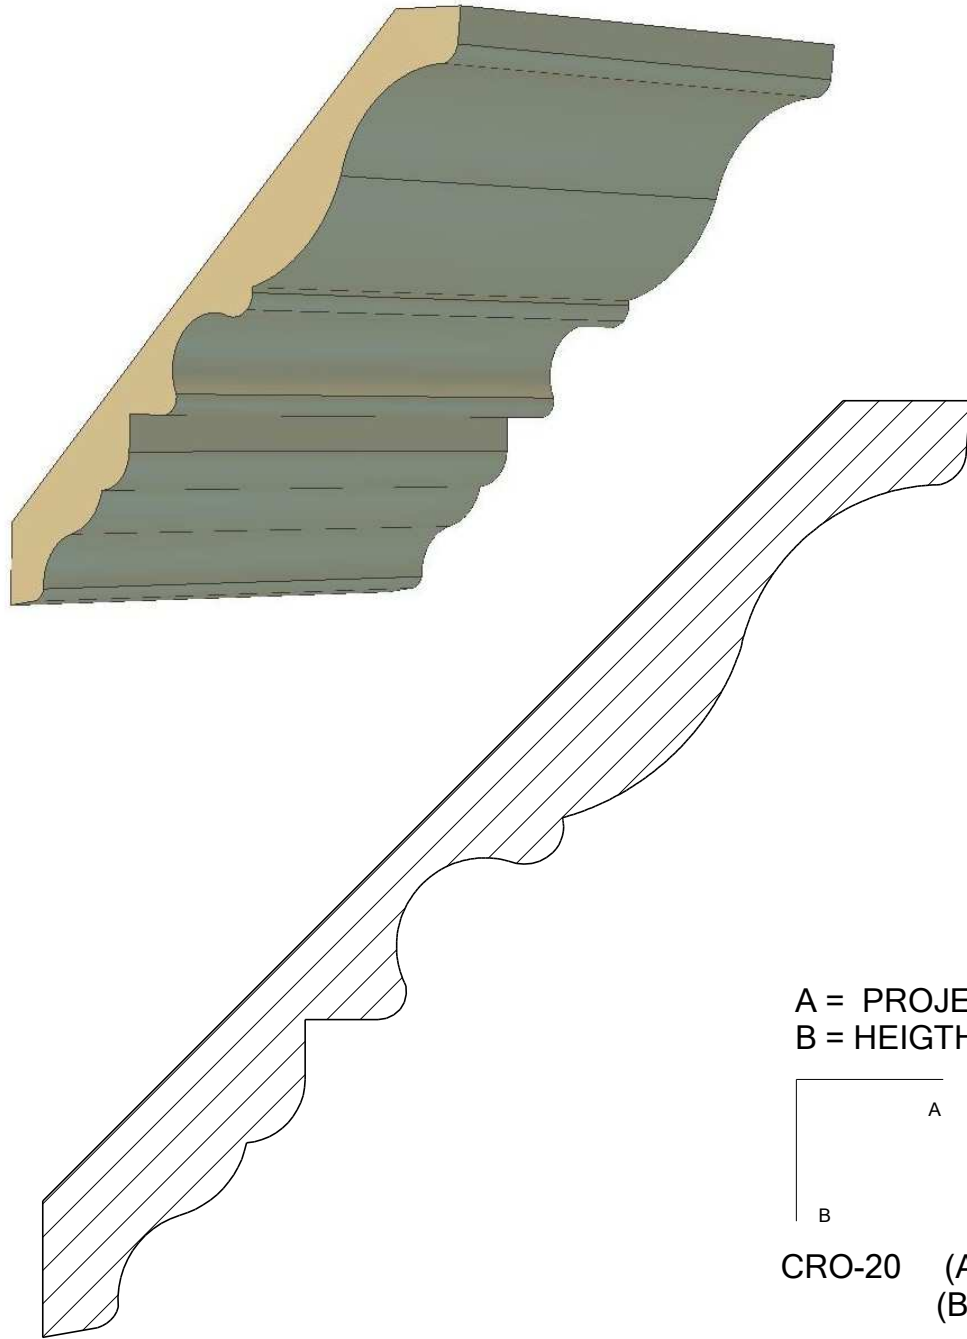



CRO-20 7"

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

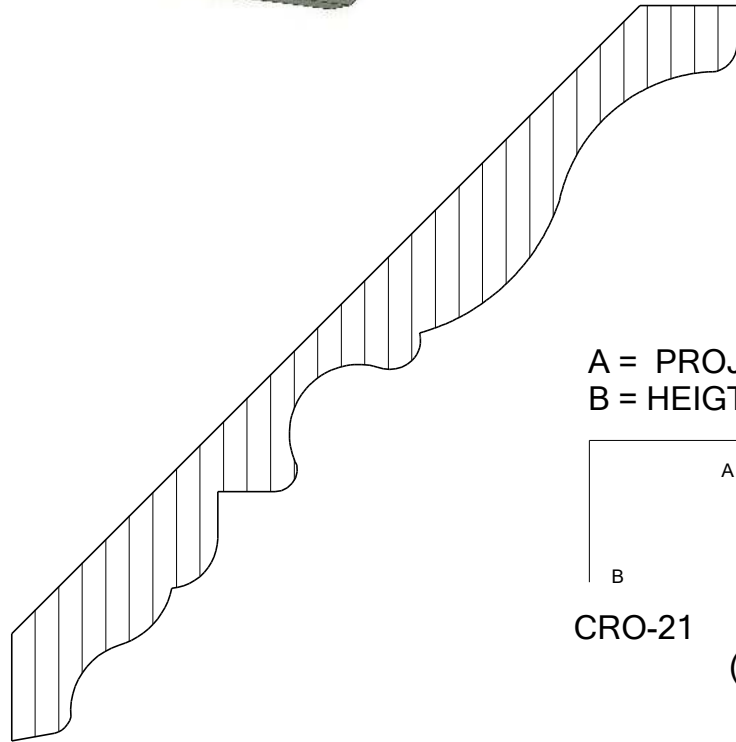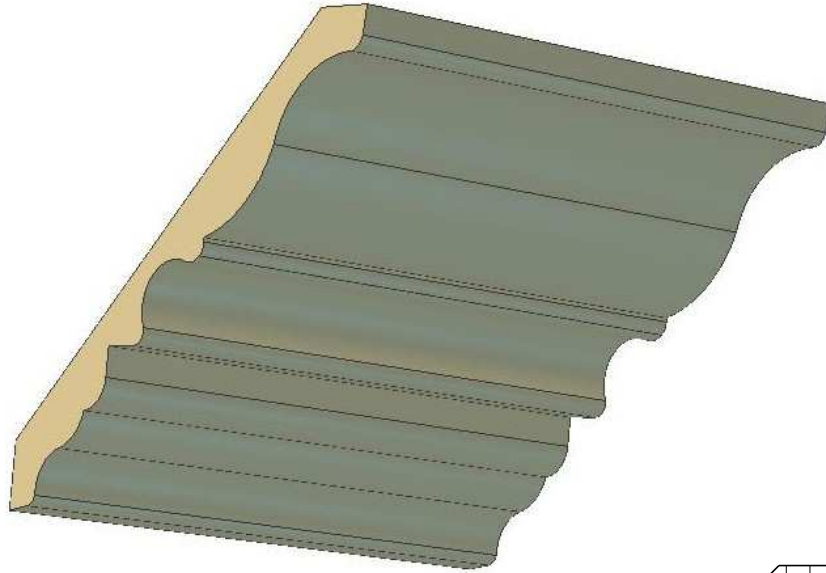

A = PROJECTION
B = HEIGHT

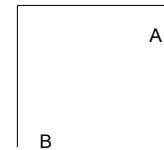

CRO-21 (A 3 13/16")
(B 3 7/8")



CRO-21 5 1/2"

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

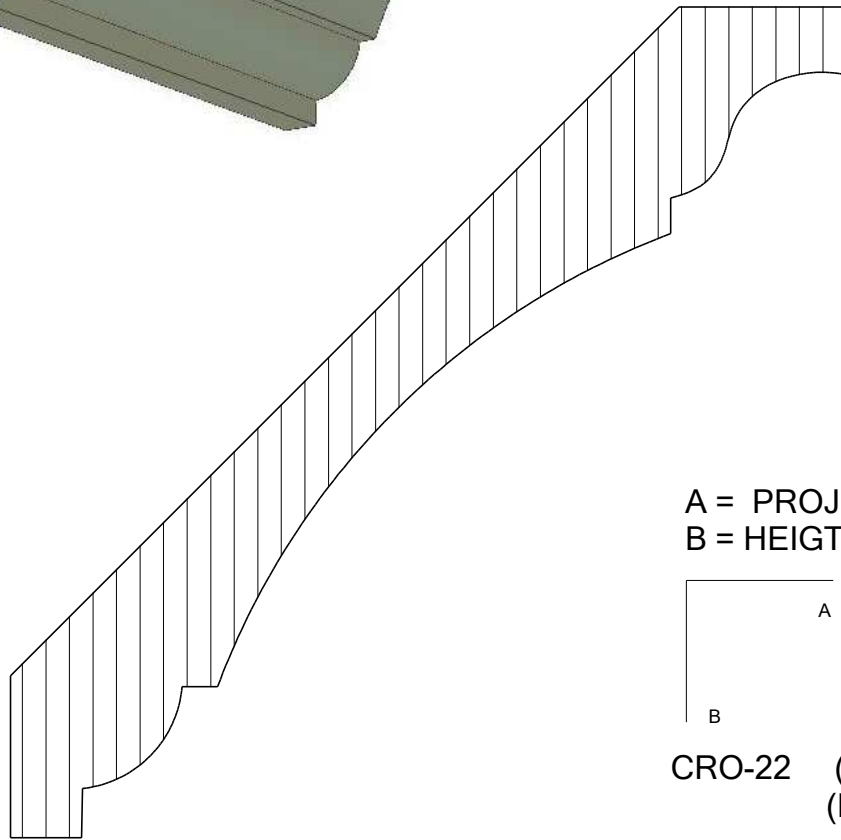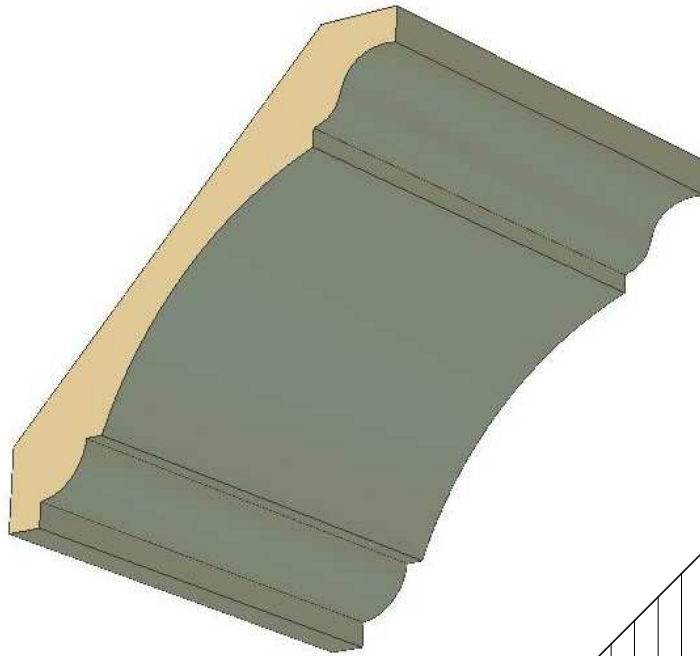

A = PROJECTION
B = HEIGHT

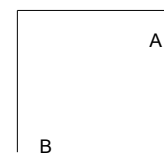

CRO-22 (A 4 7/16")
(B 4 7/16")



CRO-22 6 1/4"

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

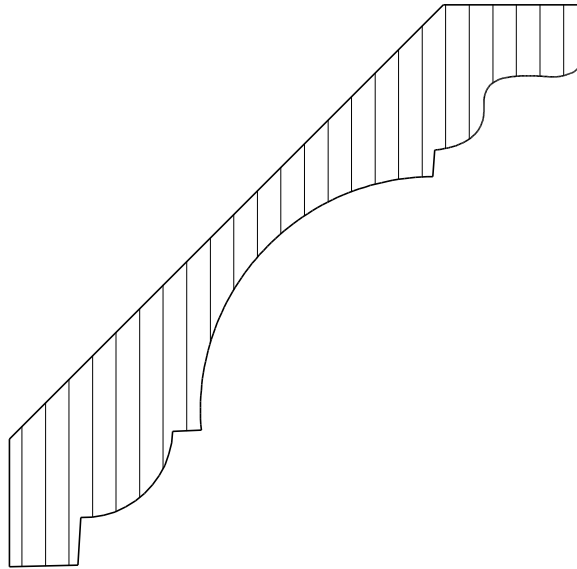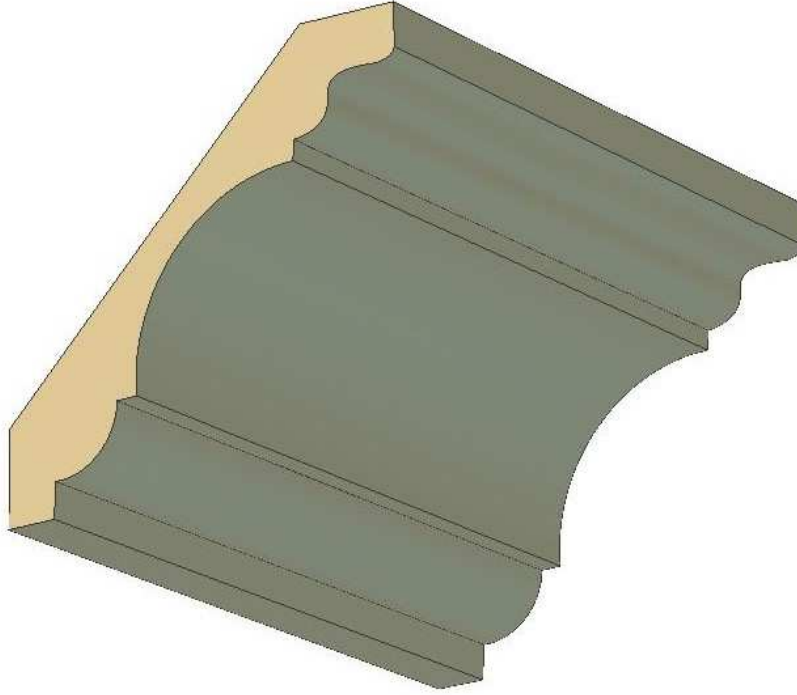

A = PROJECTION
B = HEIGHT

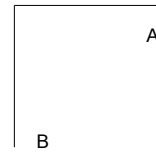

CRO-23 (A 3")
(B 3")



CRO-23 4 1/4

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

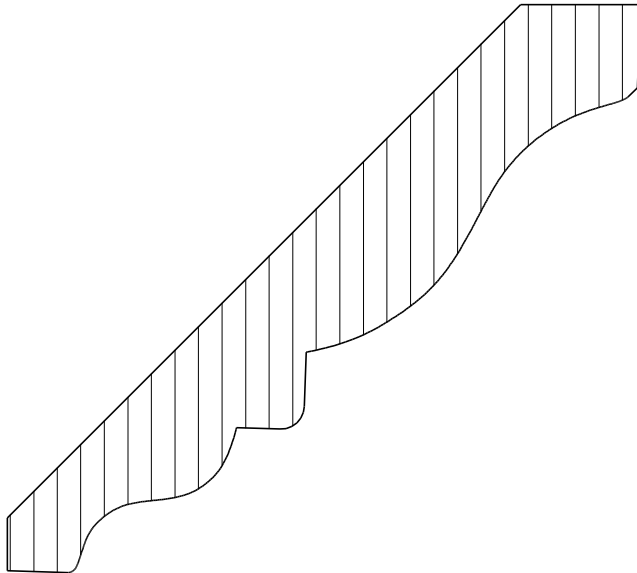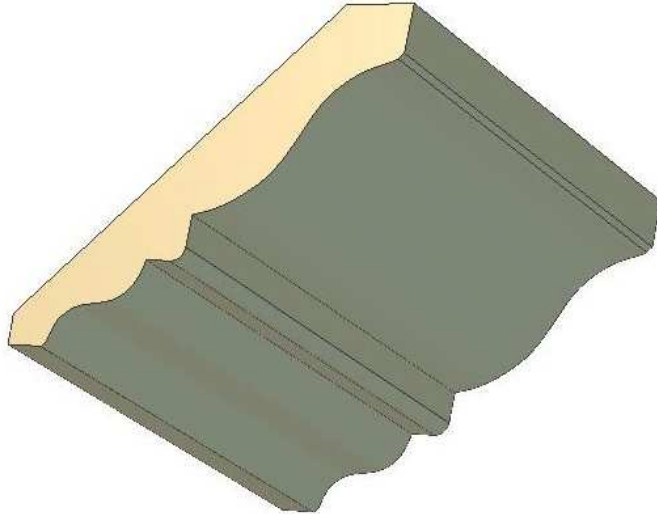

A = PROJECTION
B = HEIGHT

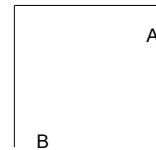

CRO-24 (A 3 3/8")
(B 3")


CRO-24 4 1/2

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

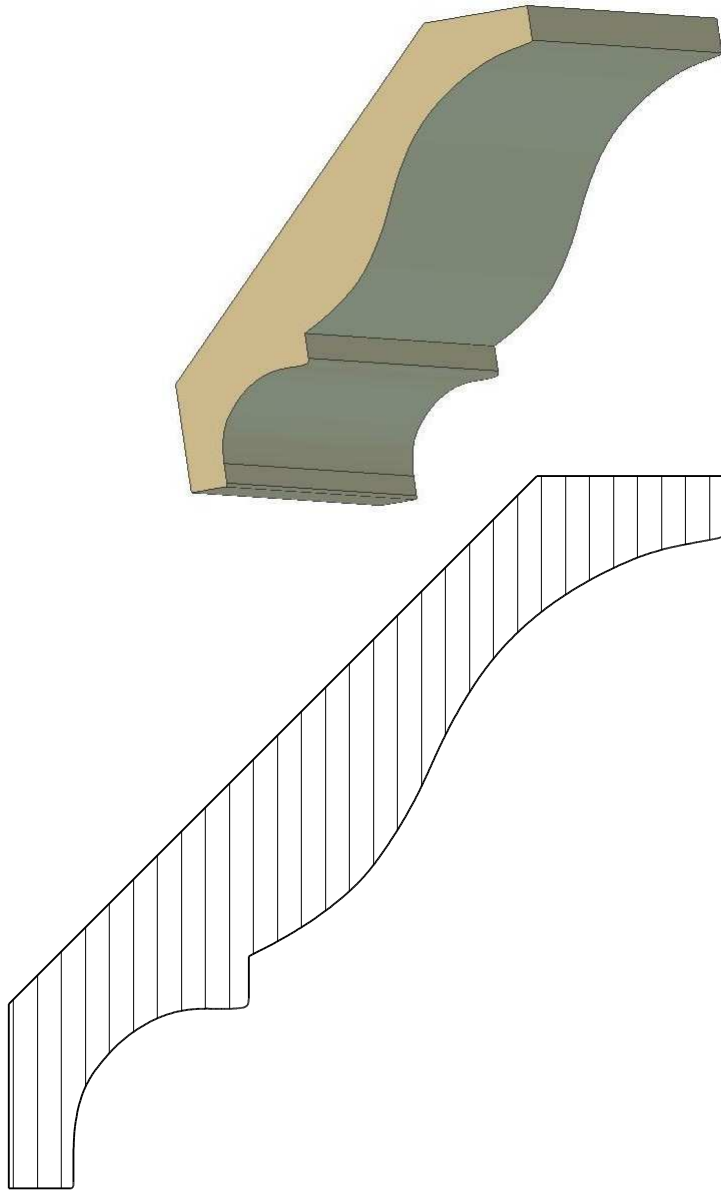

A = PROJECTION
B = HEIGHT

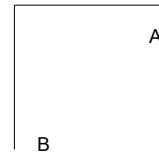

CRO-25 (A 3 3/4")
(B 3 3/4")



CRO-25 4 1/4

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

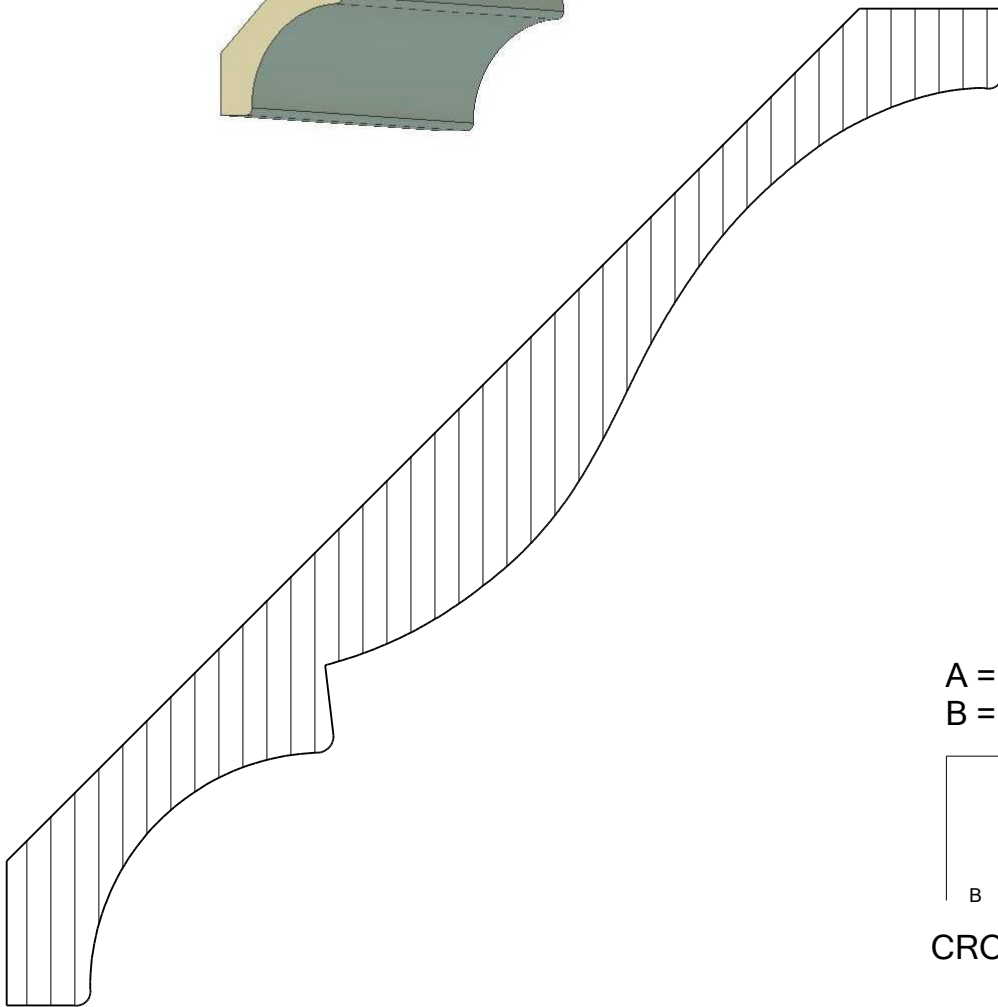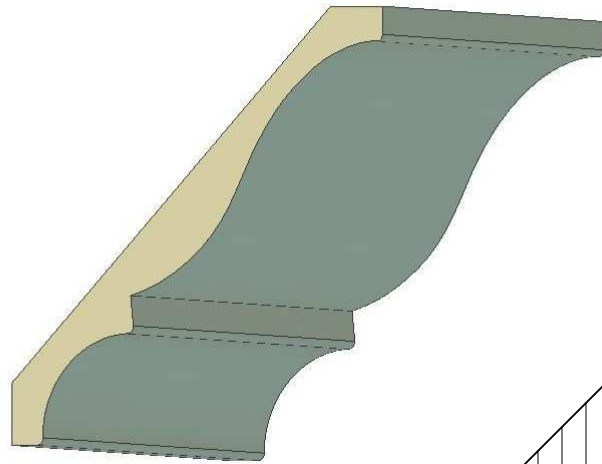

A = PROJECTION
B = HEIGHT

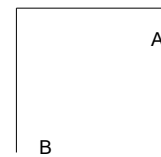

CRO-26 (A 5 1/8")
(B 5 1/8")



CRO-26 7 3/8

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

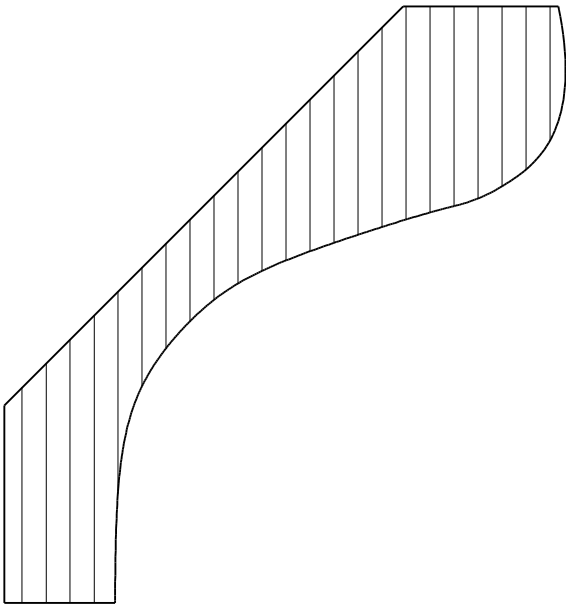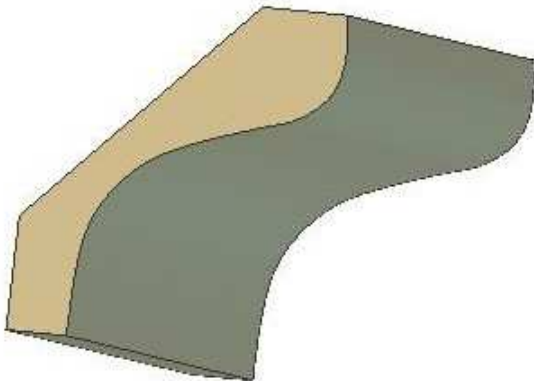

A = PROJECTION
B = HEIGHT

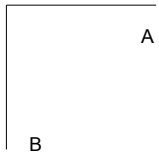

CRO-27 (A 2 7/8")
(B 3 1/8")



CRO-27 4 1/2

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

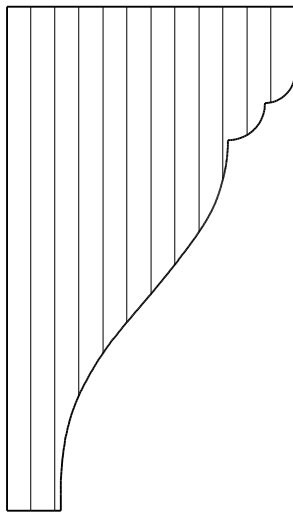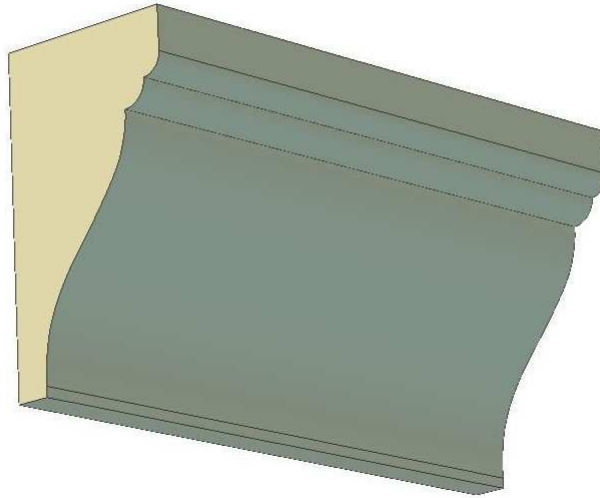

A = PROJECTION
B = HEIGHT

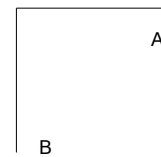

CRO-28 (A 1 1/2")
(B 2 5/8")



CRO-28 3"

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Crown Mould

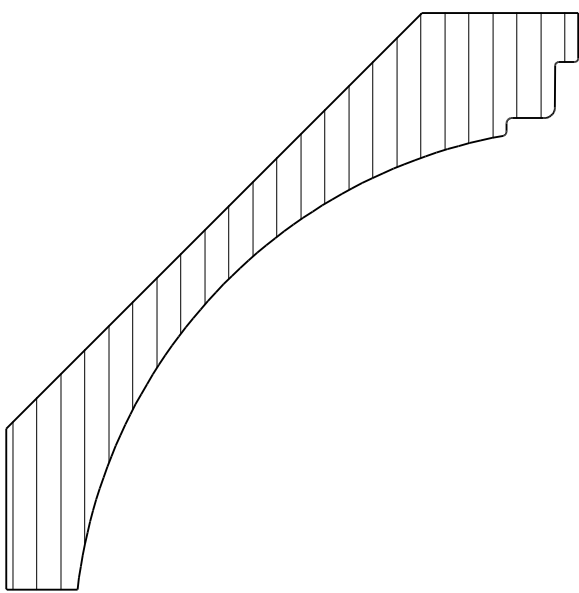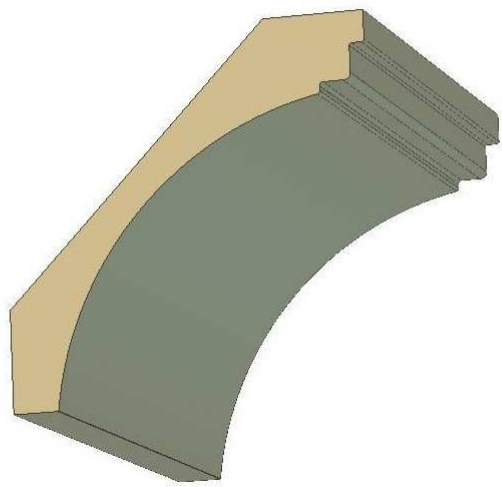

A = PROJECTION
B = HEIGHT



CRO-29 (A 3")
(B 3")



CRO-29 4 1/4

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

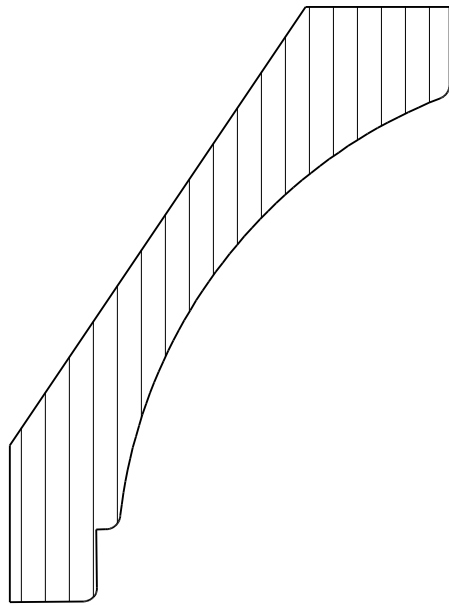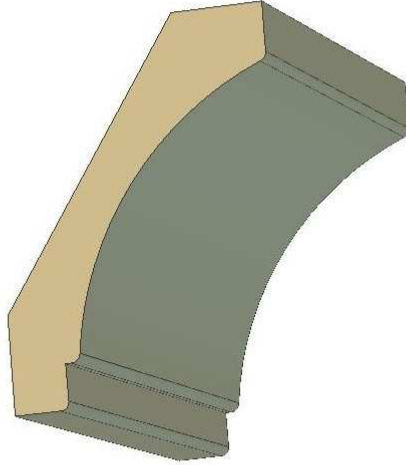

A = PROJECTION
B = HEIGHT

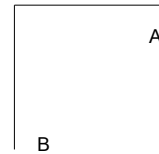

CRO-30 (A 2 1/4")
(B 3 1/8")



CRO-30 3 7/8"

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Crown Mould

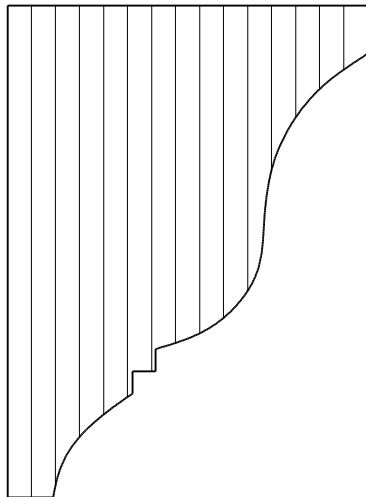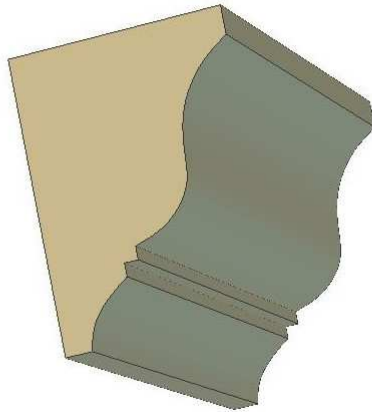

A = PROJECTION
B = HEIGHT



CRO-30 (A 2 1/4")
(B 3 1/8")



CRO-30 3 7/8"

[Click code to go back](#)




HOMESTEAD
WOODWORKS

Crown Mould

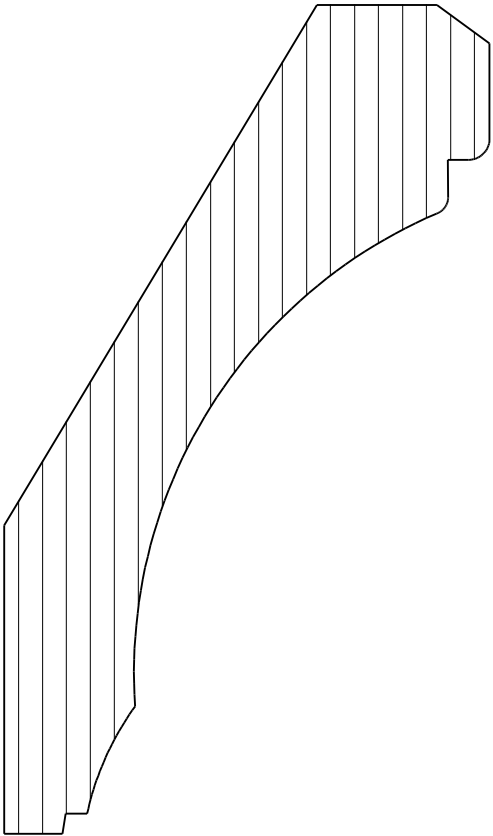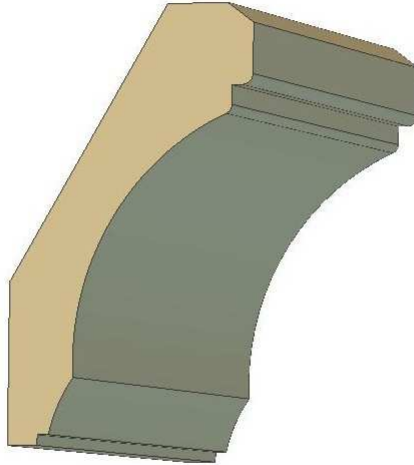

A = PROJECTION
B = HEIGHT

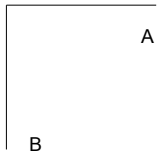

CRO-31 (A 2 1/2")
(B 4 3/8")



CRO-31 4 7/8

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Chairrail

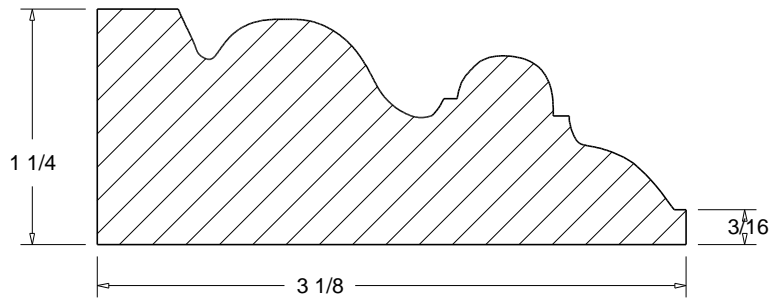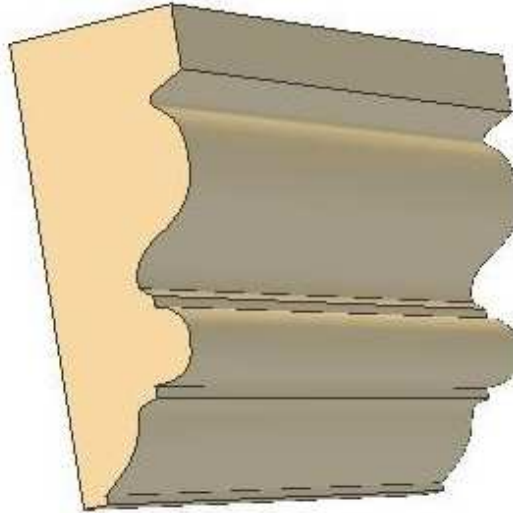

Cha-01



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Chairrail

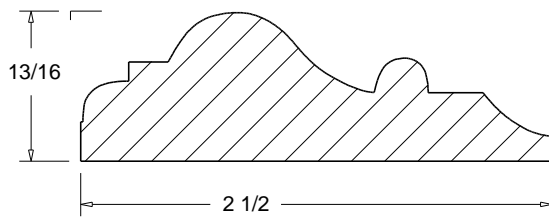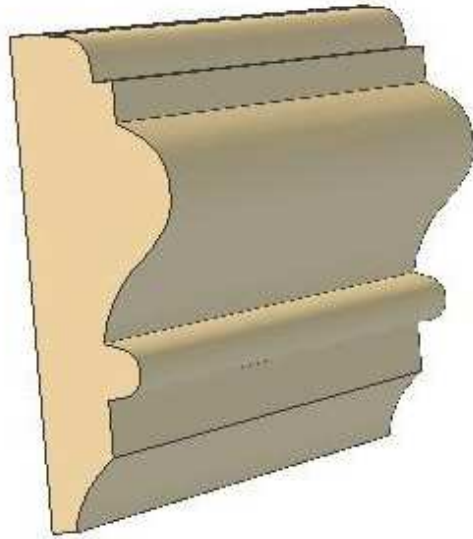

Ch-02



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Chairrail

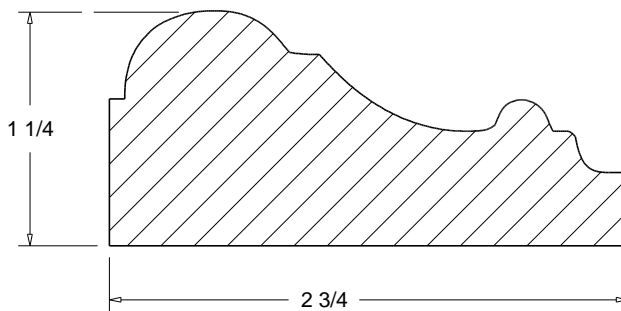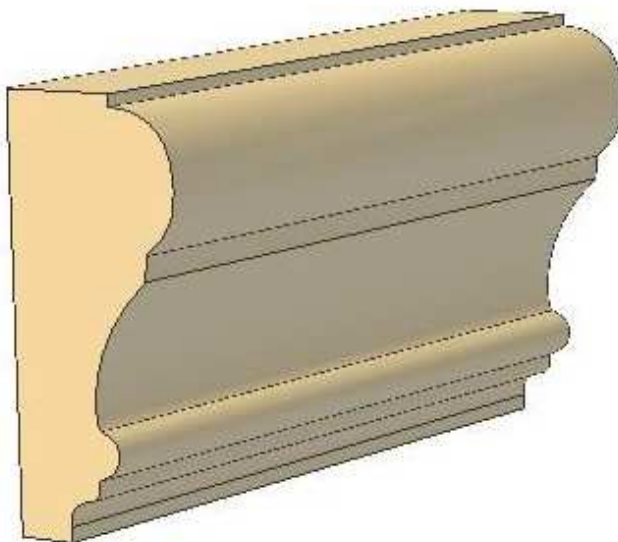

Char-03



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Chairrail

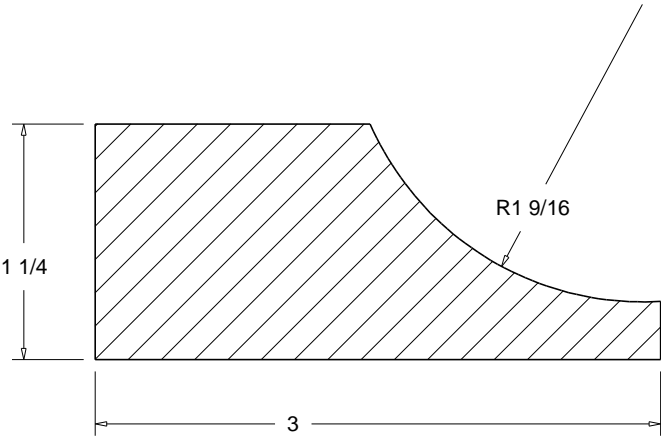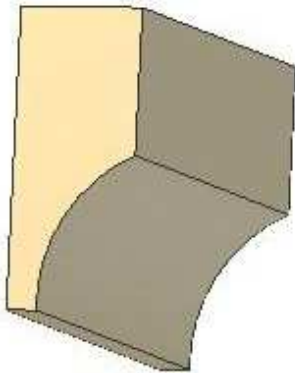

Cha-04



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Chairrail

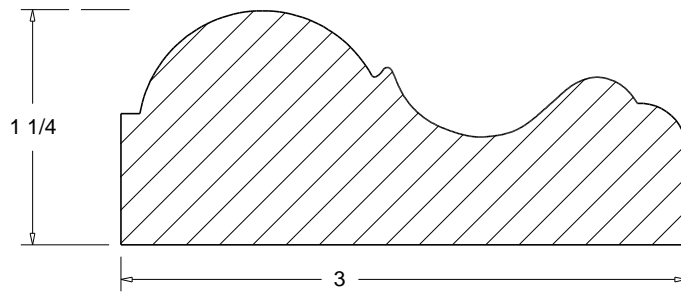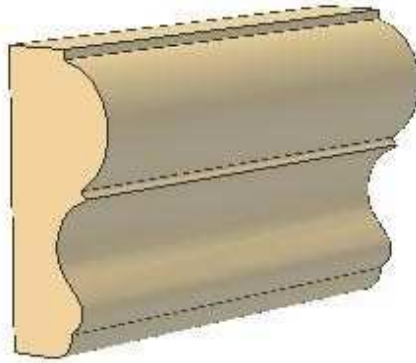

Cha-05



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Chairrail

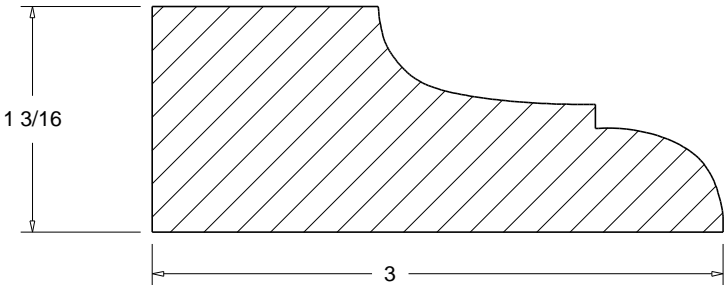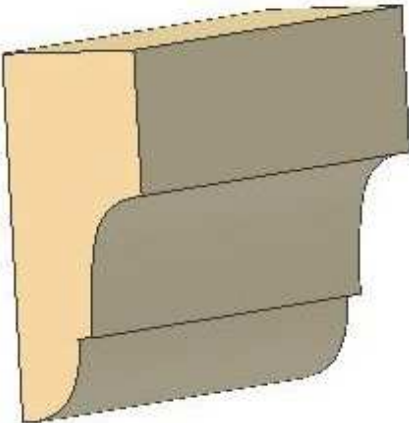

Cha-06



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Chairrail

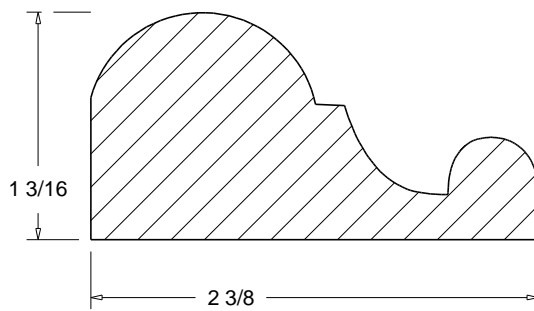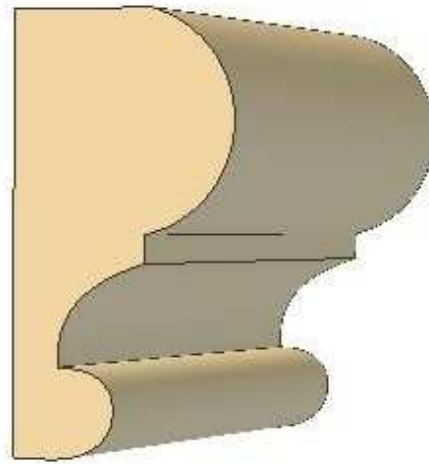

Cha-07



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Chairrail

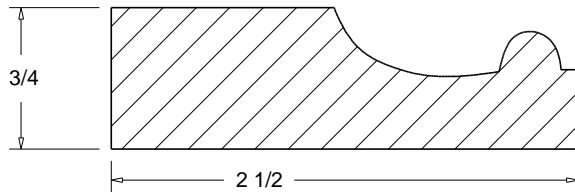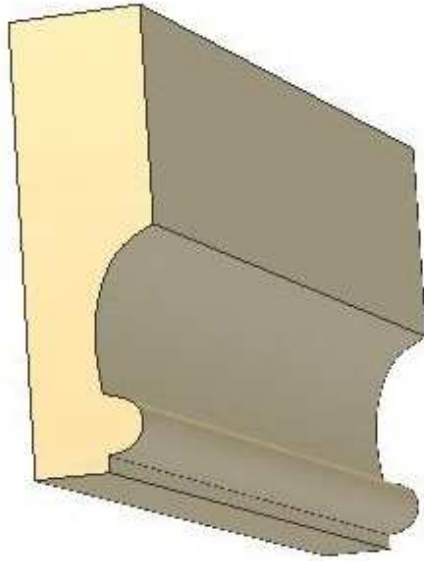

Cha-08



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Chair Rail

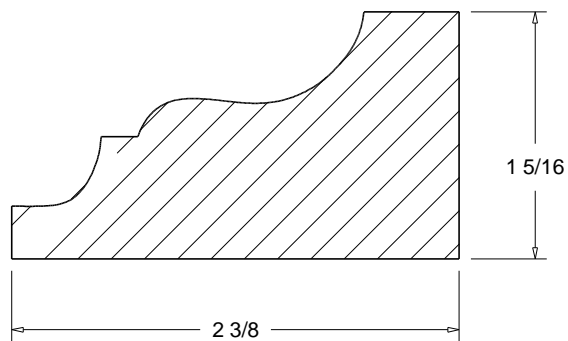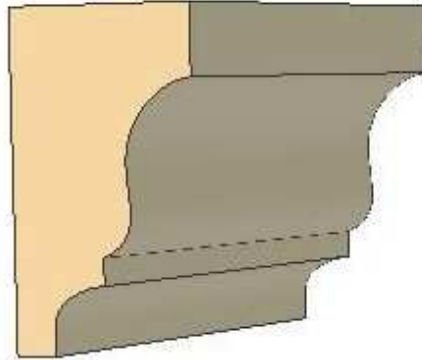

CHA-09



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

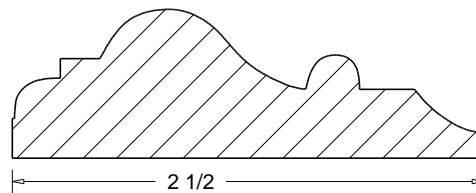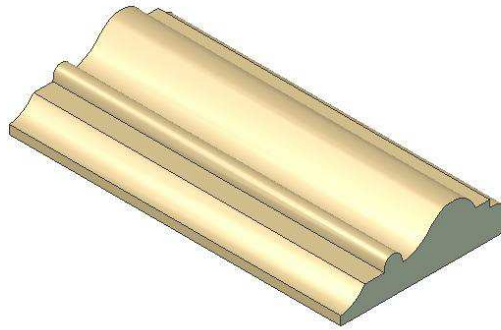

Pan-01



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Panel Mould

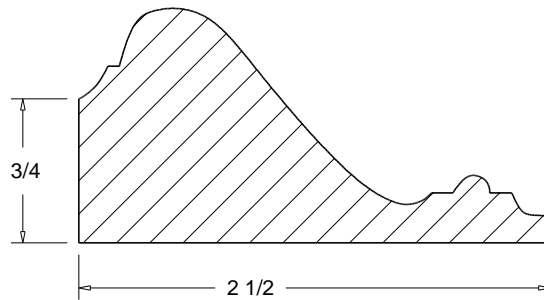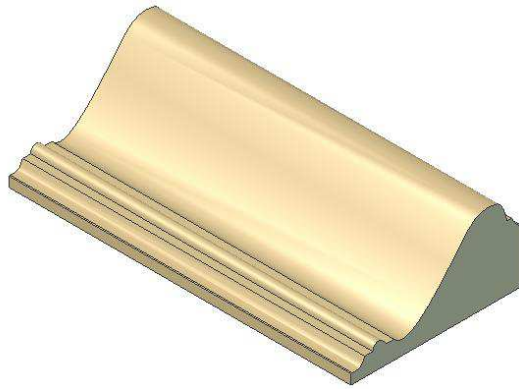

Pan-02



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Panel Mould

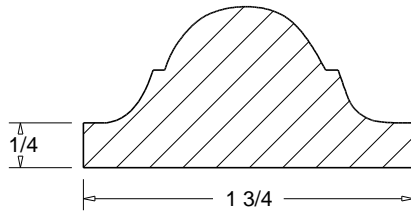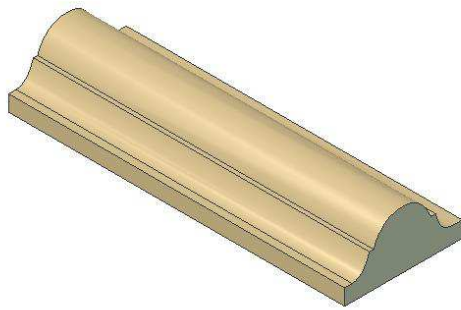

Pan-03



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

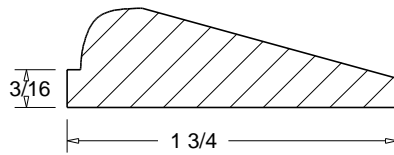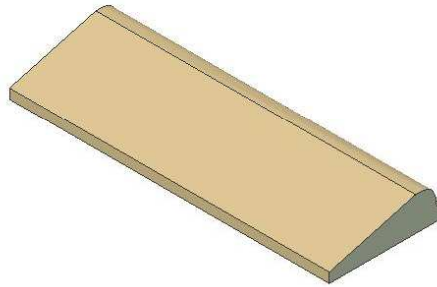

Pan-04



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

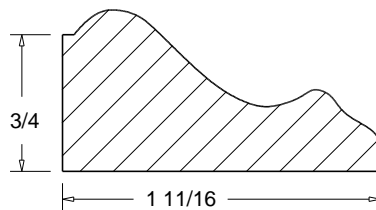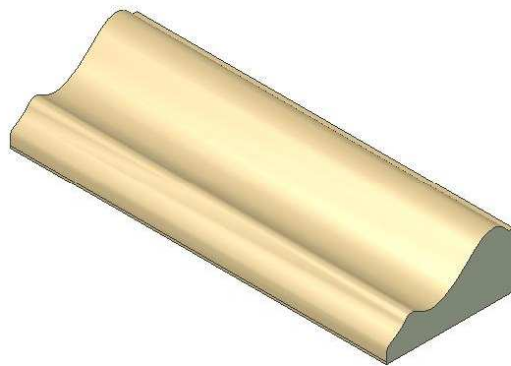

Pan-05



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

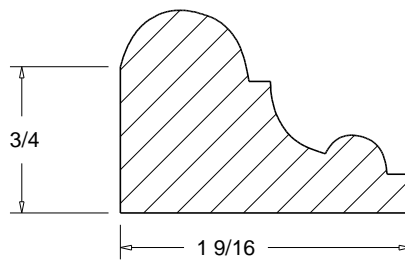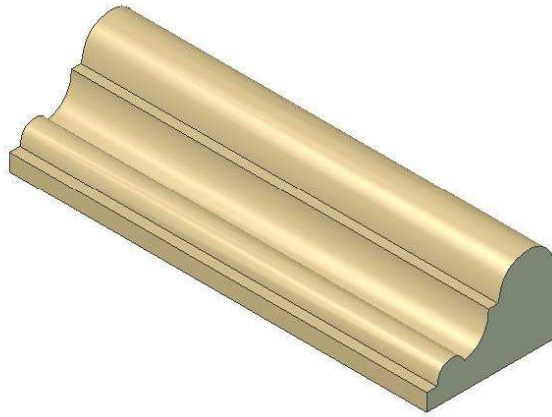

Pan-06



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

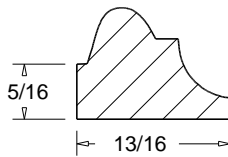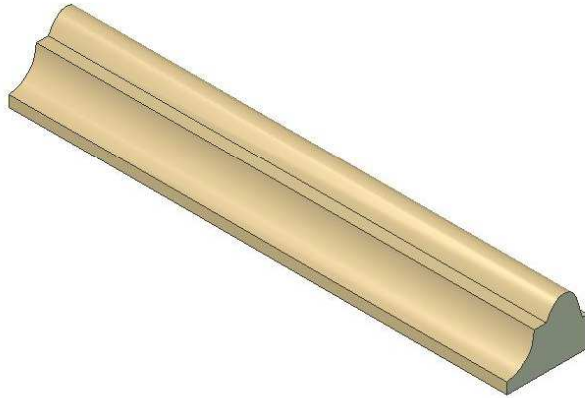

Pan-07



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

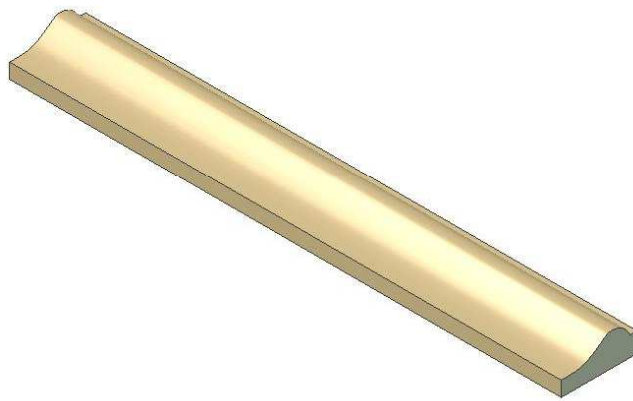

Pan-08



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

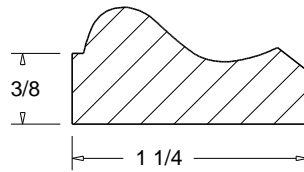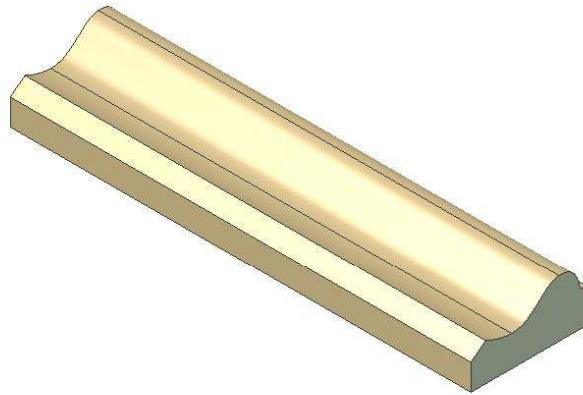

Pan-09



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

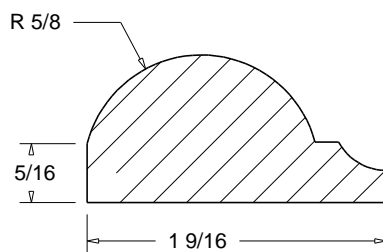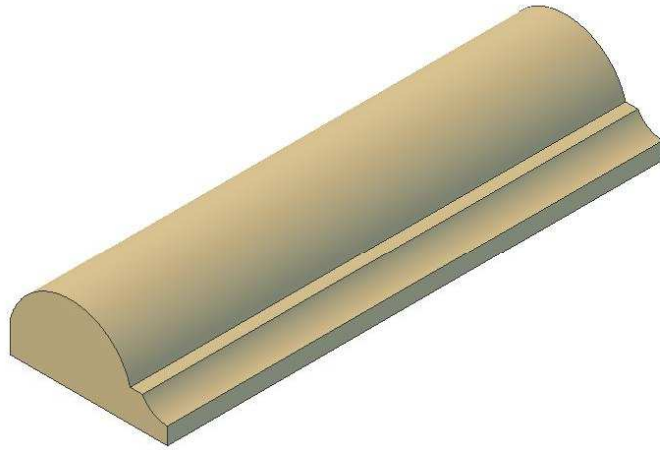

Pan-10



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Panel Mould

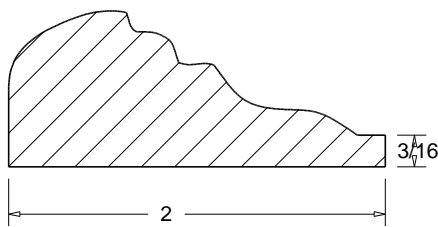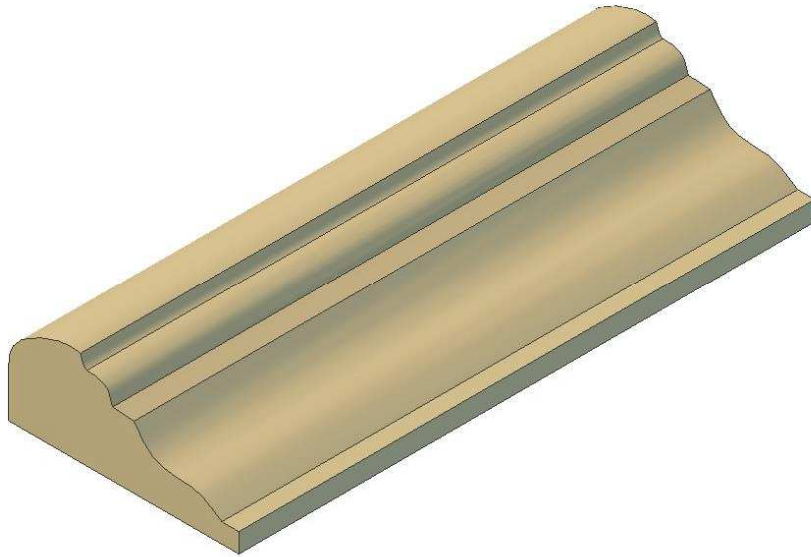

Pan-11



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

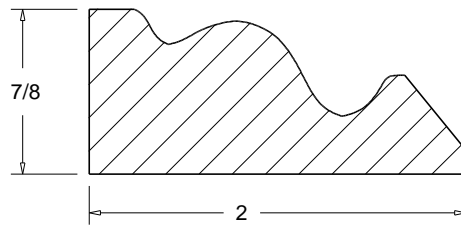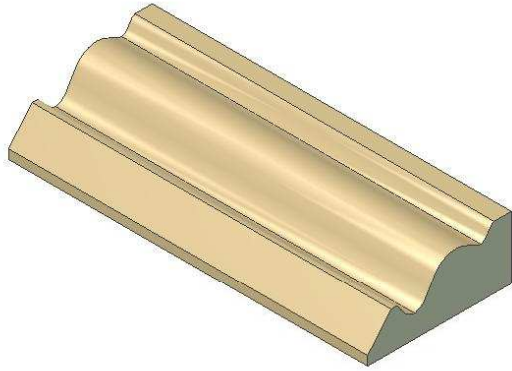

Pan-12



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Panel Mould

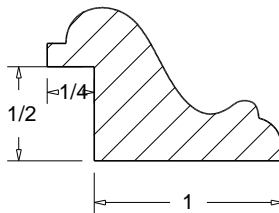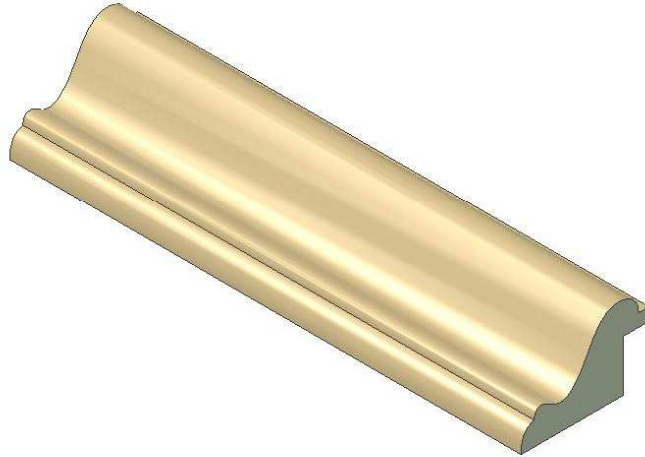

Pan-13



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

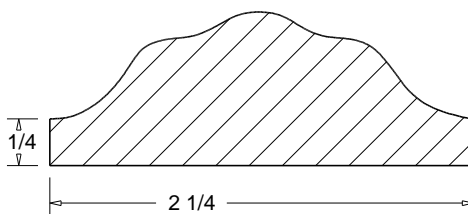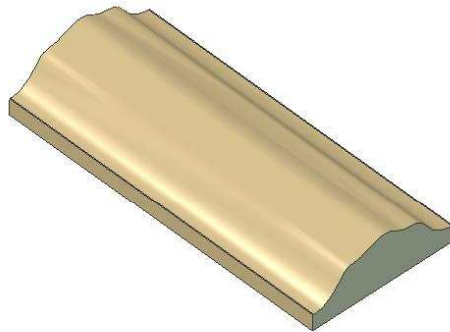

Pan-14



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Panel Mould

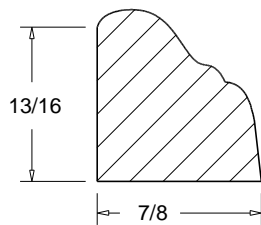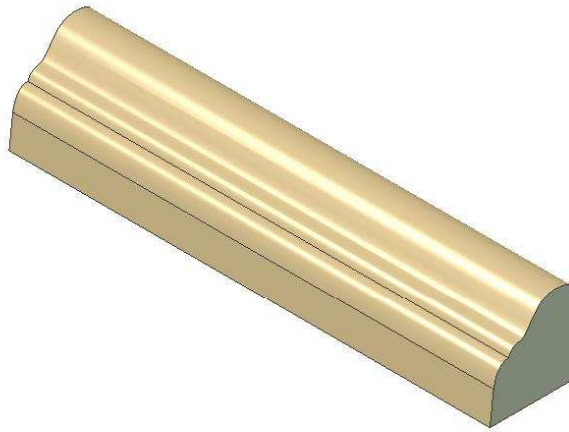

Pan-15



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

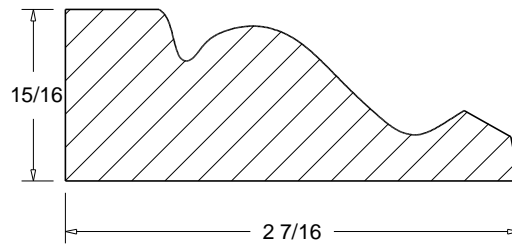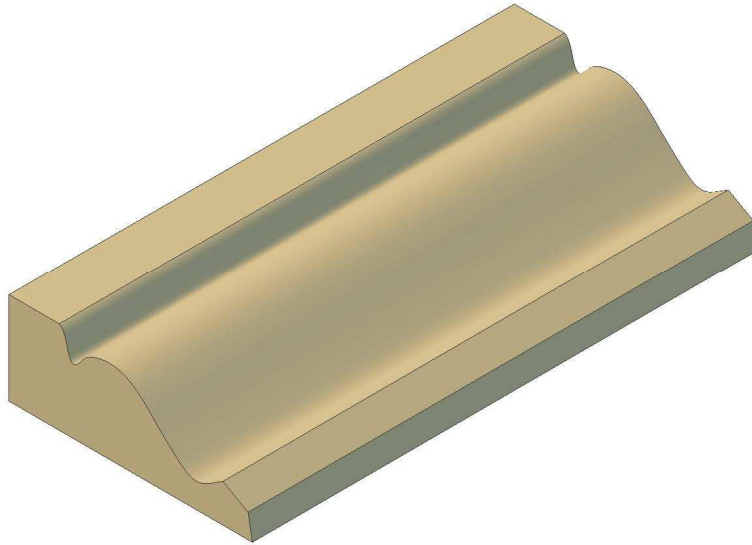

Pan-16



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

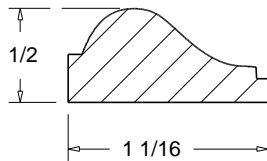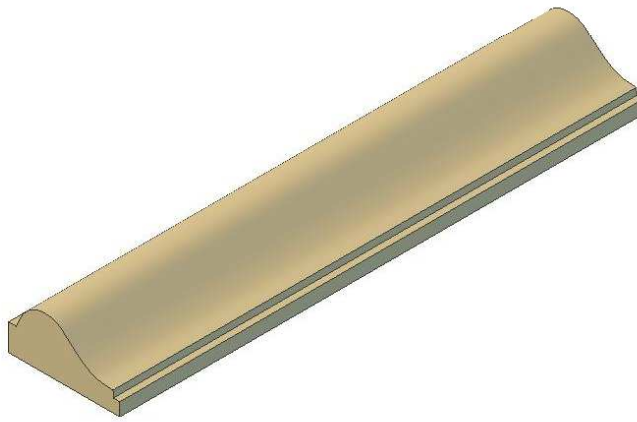

Pan-17



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

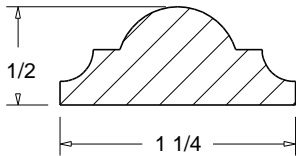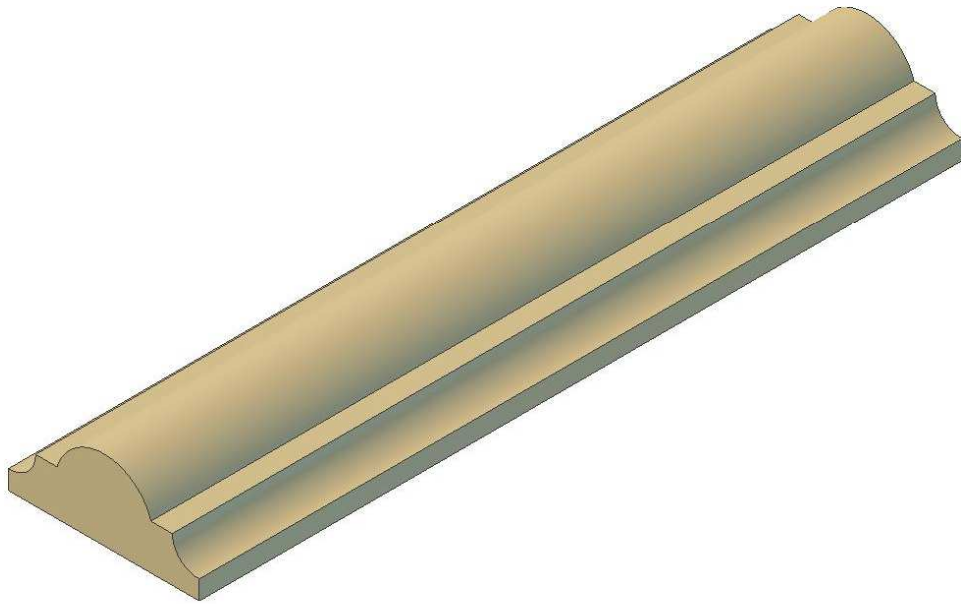

Pan-18



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

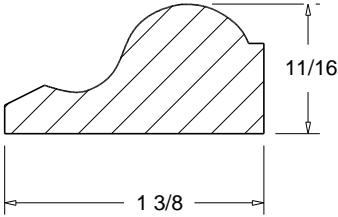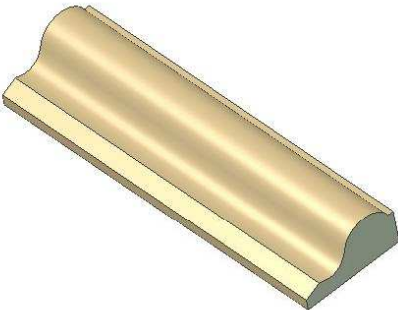

Pan-19



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

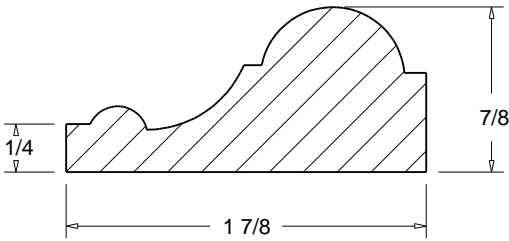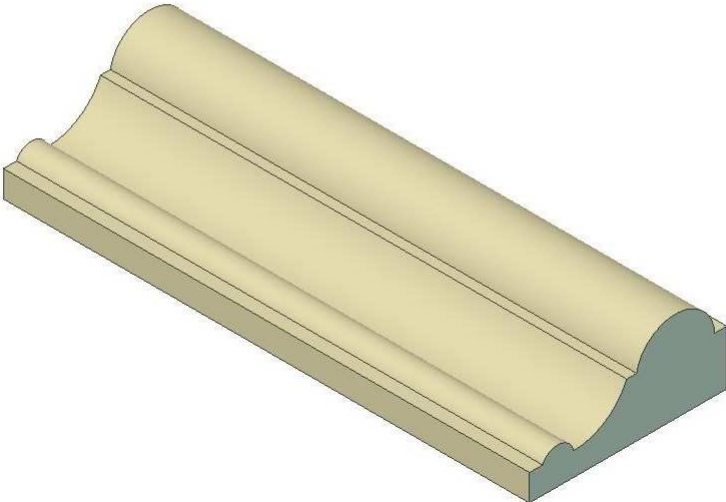

Pan-20



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Panel Mould

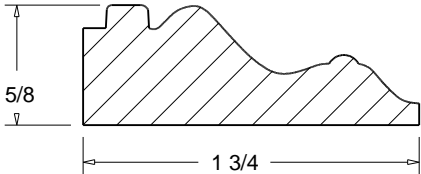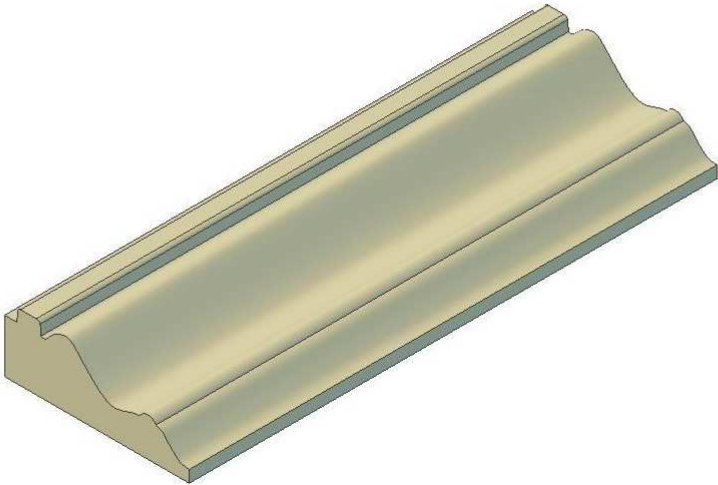

Pan-21



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

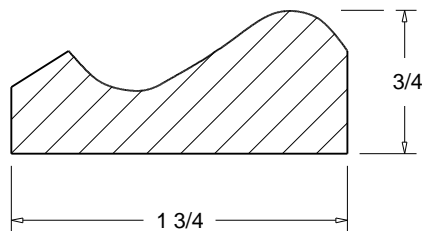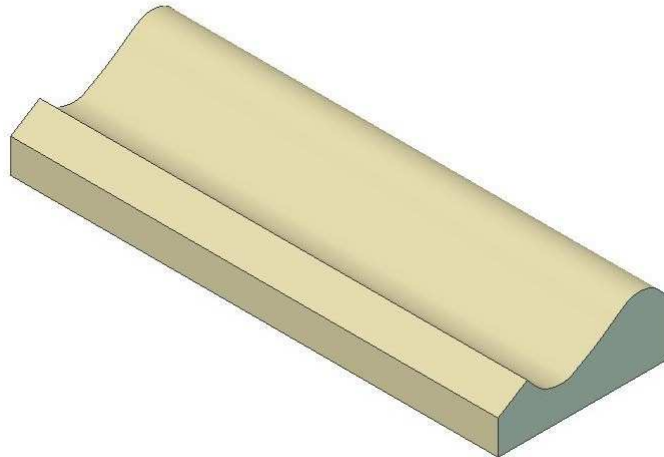

Pan-22



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Panel Mould

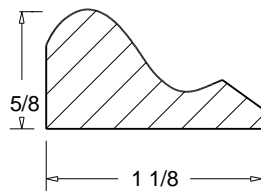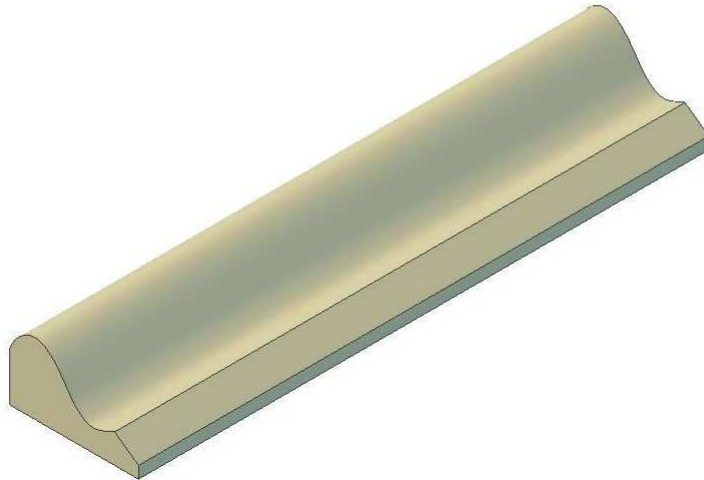

Pan-23



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Panel Mould

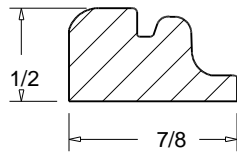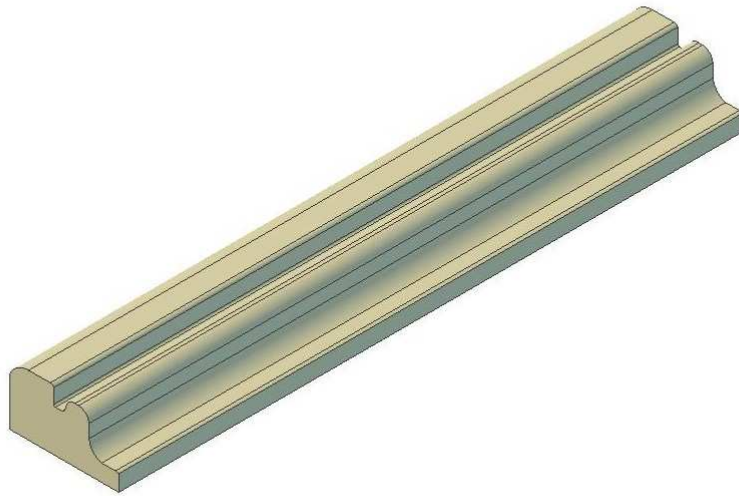

Pan-24



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

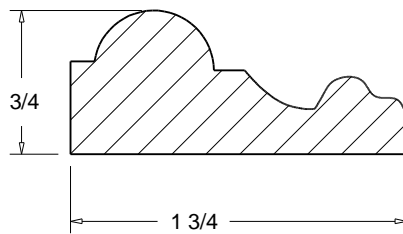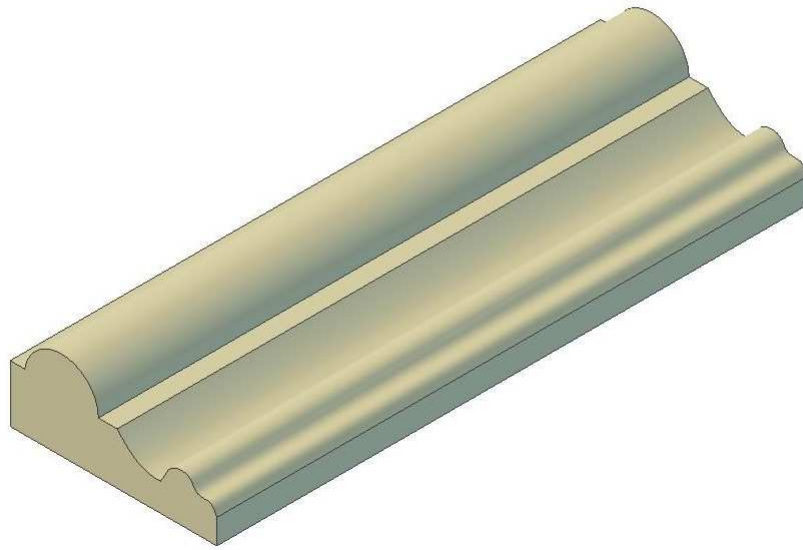

Pan-25



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

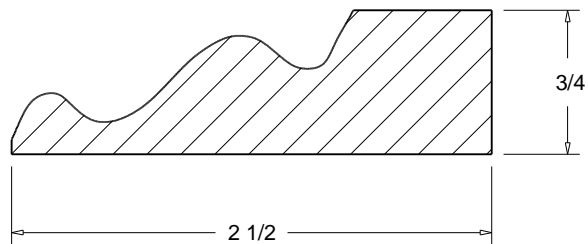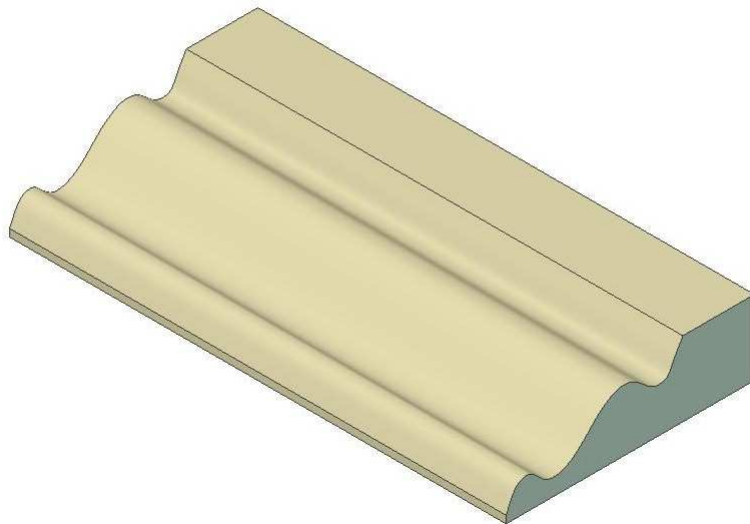

Pan-26



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Panel Mould

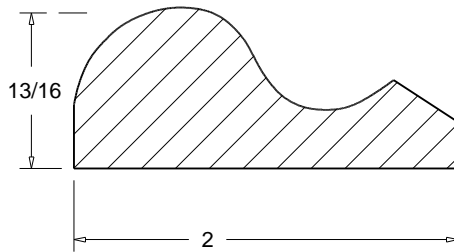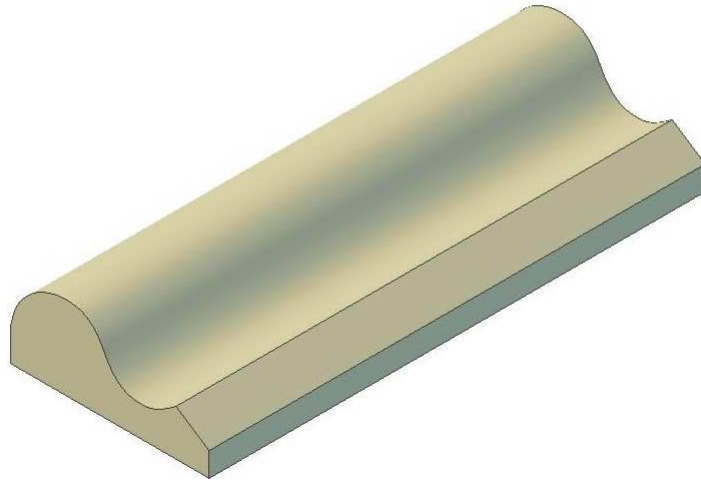

Pan-27



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Panel Mould

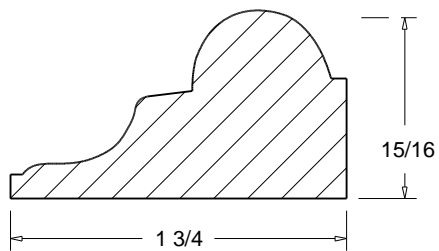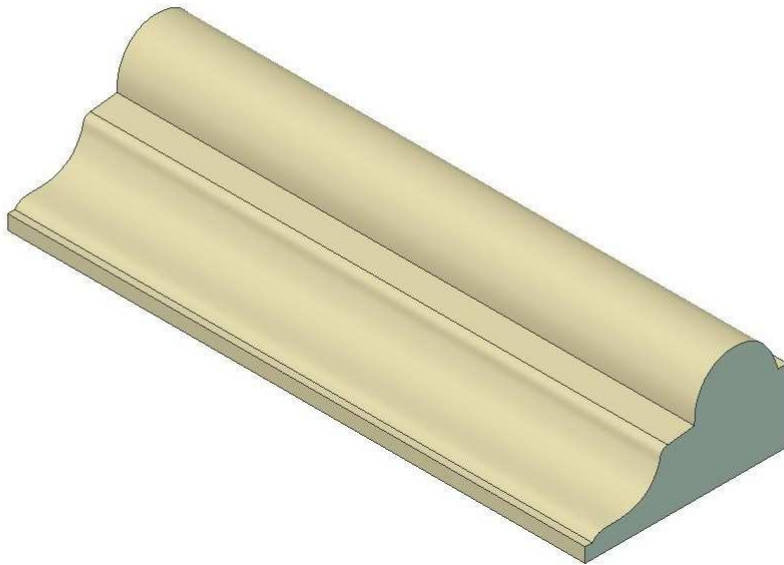

Pan-28



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

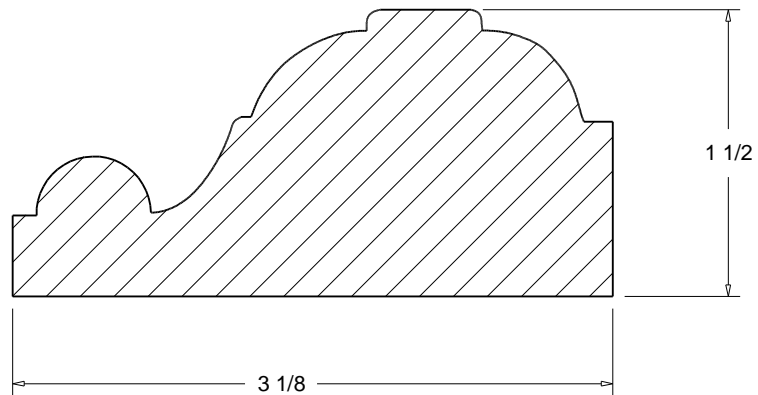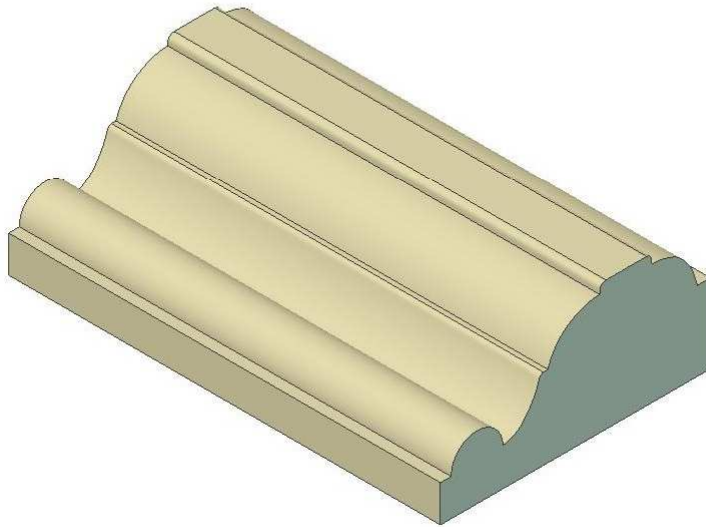

Pan-29



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

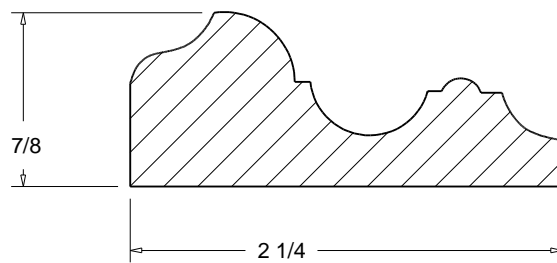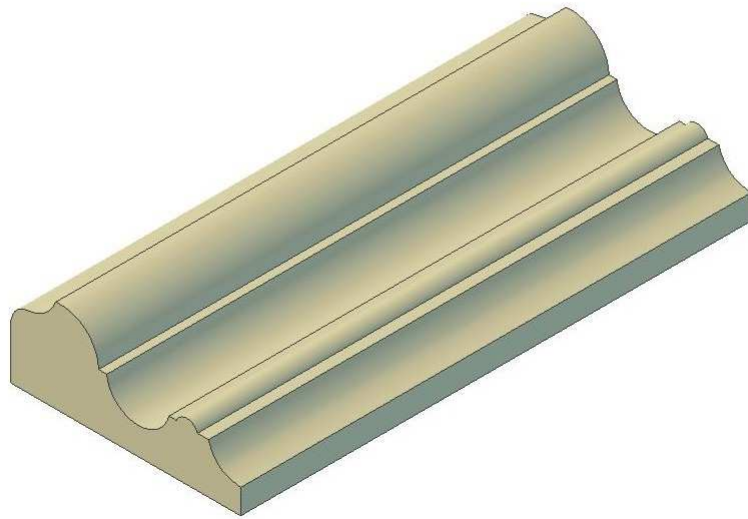

Pan-30


Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

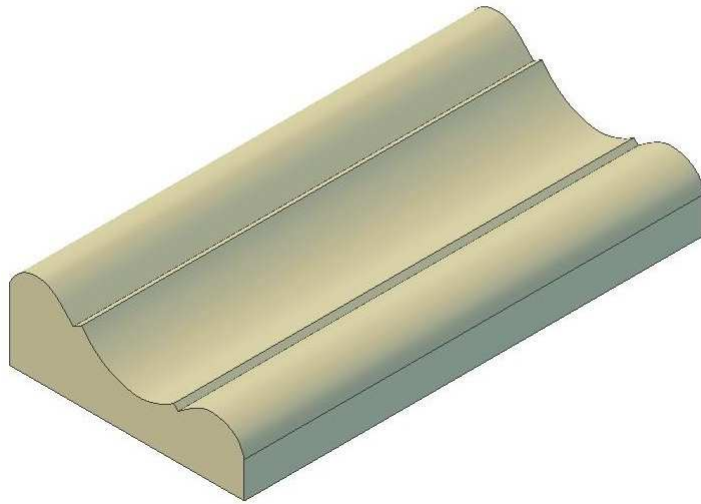

Pan-31



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

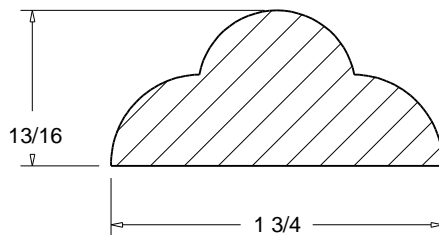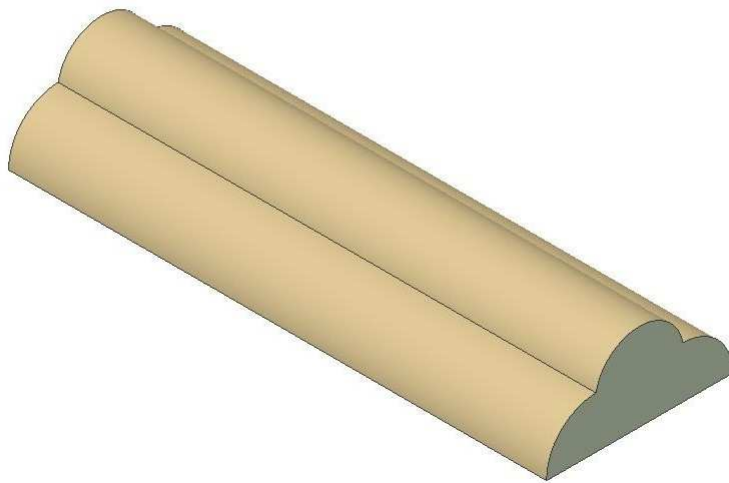

Pan-32



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Panel Mould

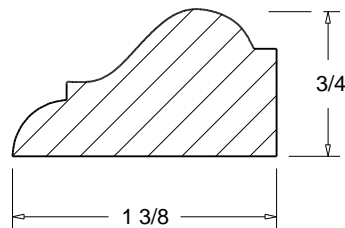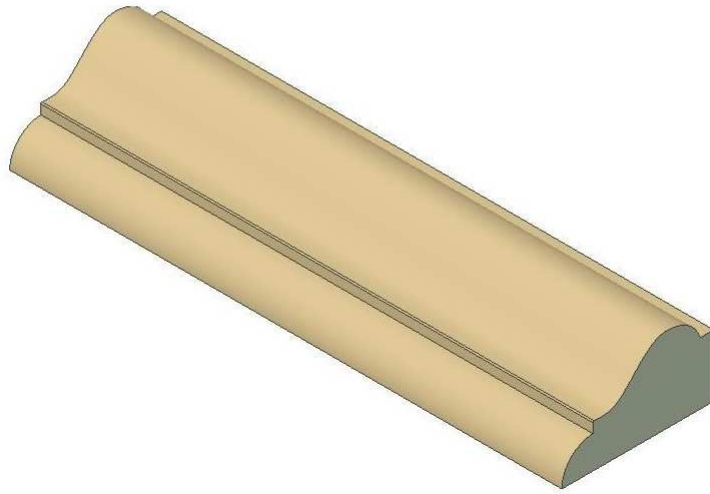

Pan-33



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Panel Mould

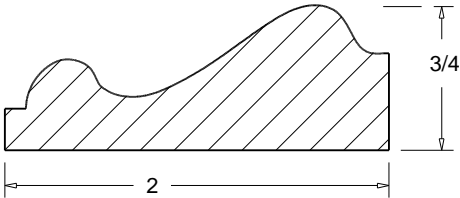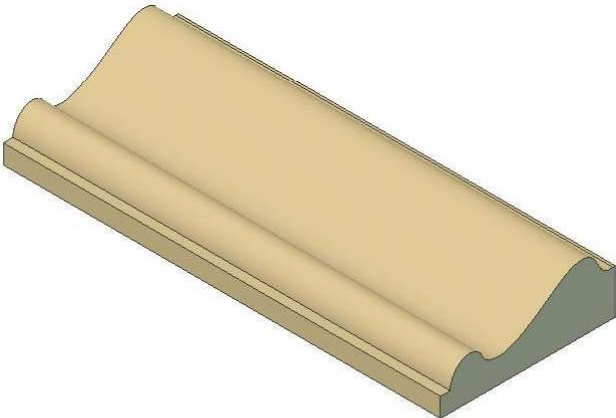

Pan-34



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

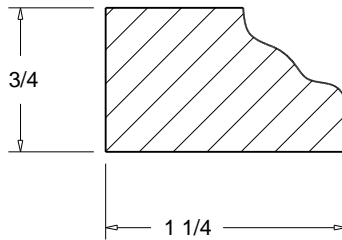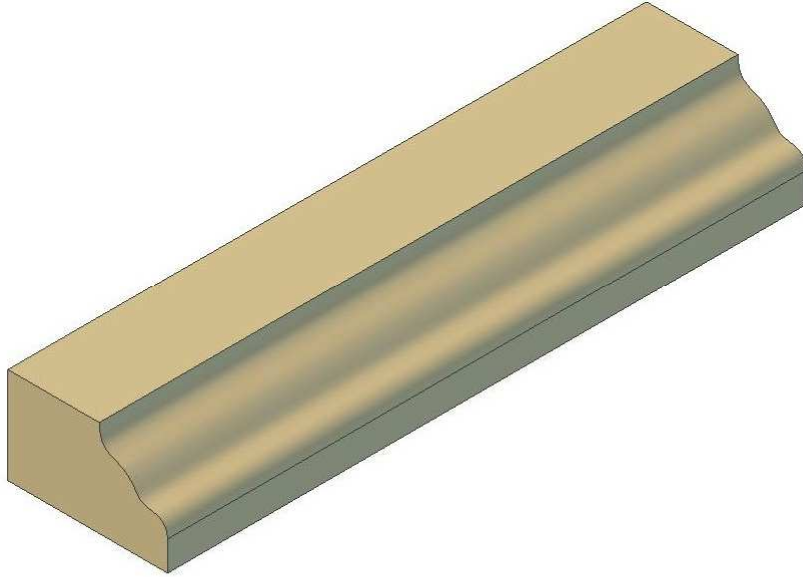

Pan-35



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Panel Mould

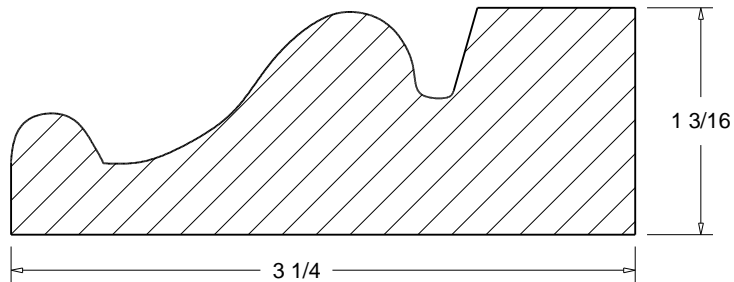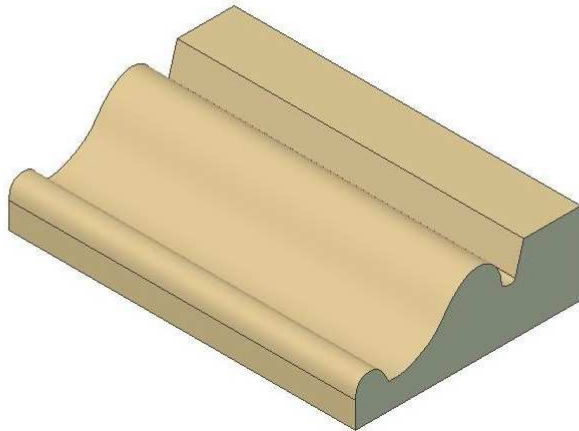

Pan-36



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Window Sill

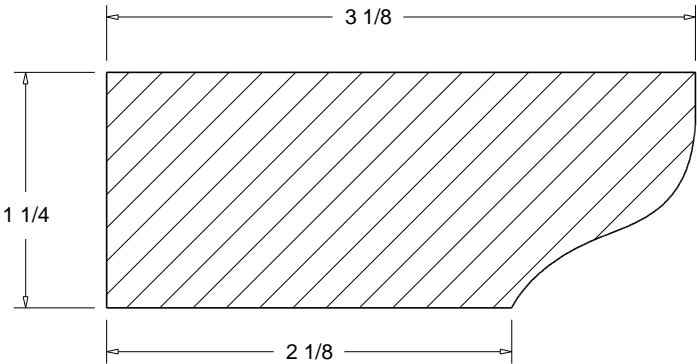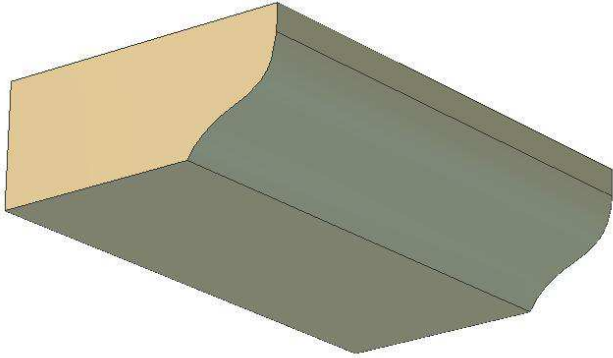

Sill-01



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Window Sill

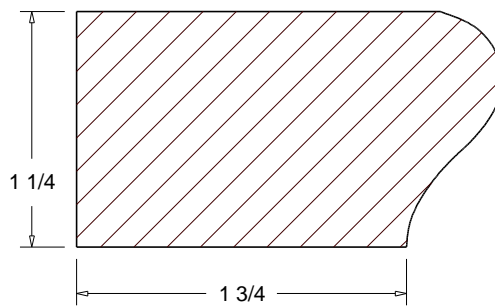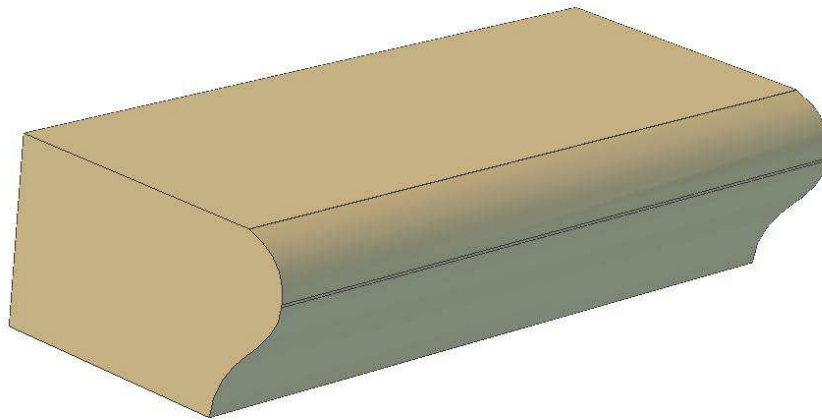

Sill-02



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Window Sill

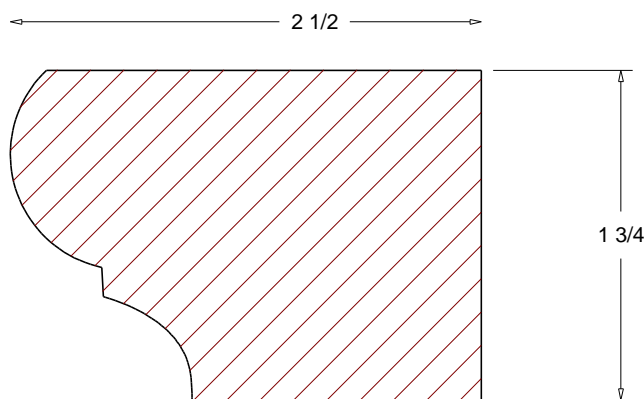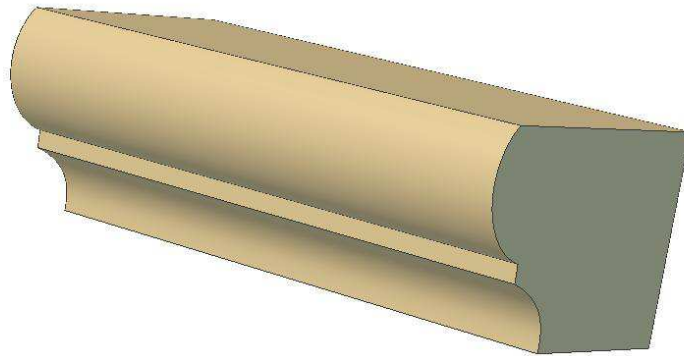

Sill-03



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

T & G Paneling

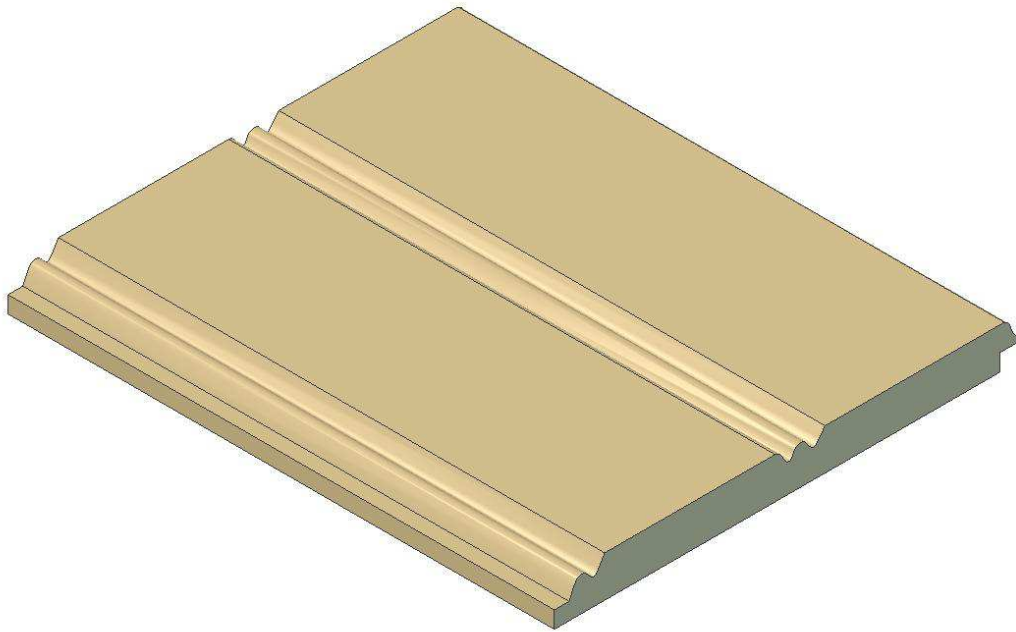

Tg-01



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

T & G Paneling

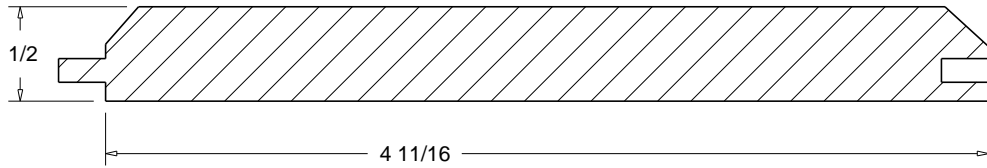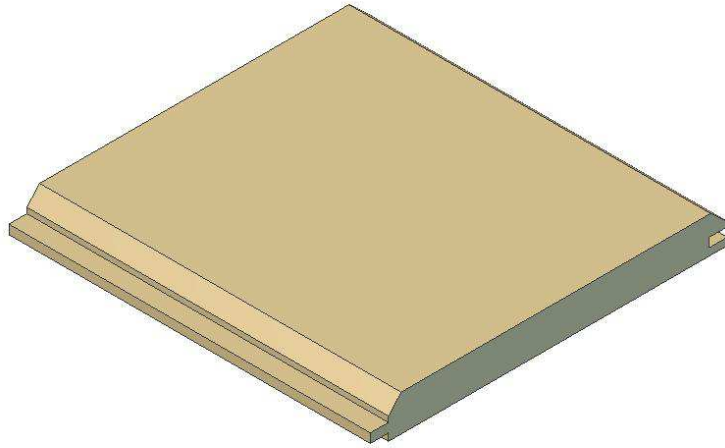

Tg-02



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

T & G Paneling

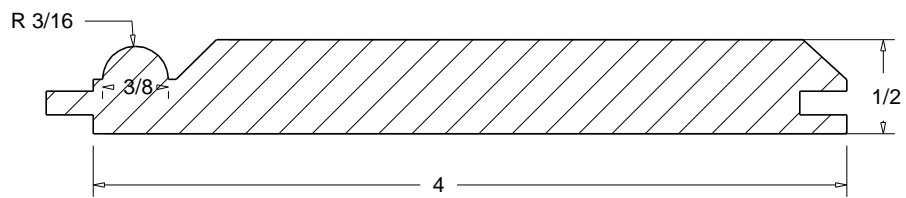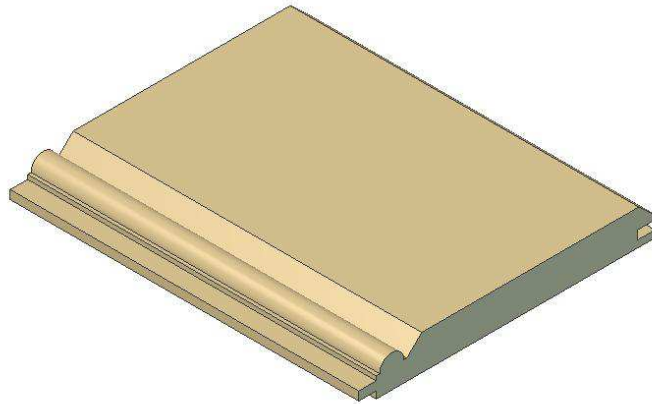

Tg-03



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

T & G Paneling

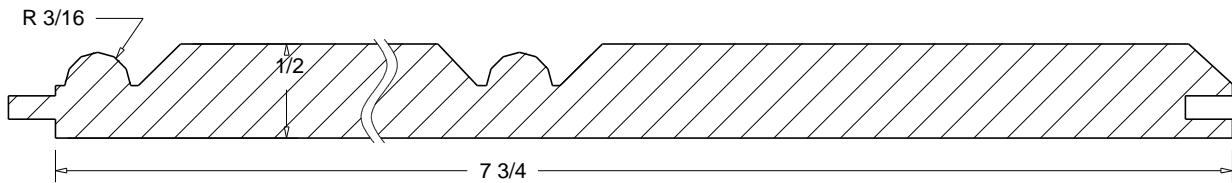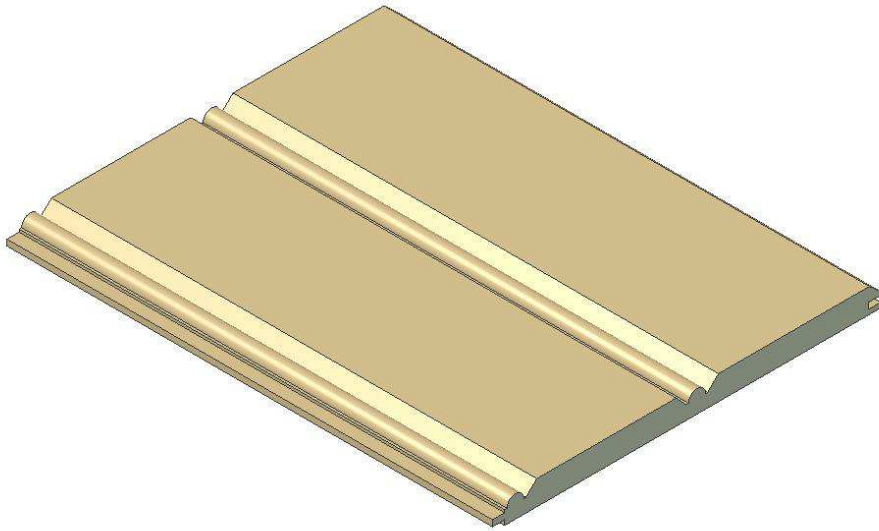

Tg-04



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

T & G Paneling

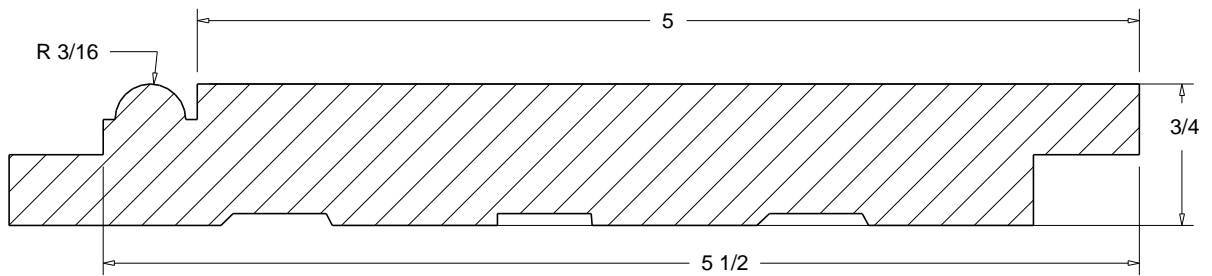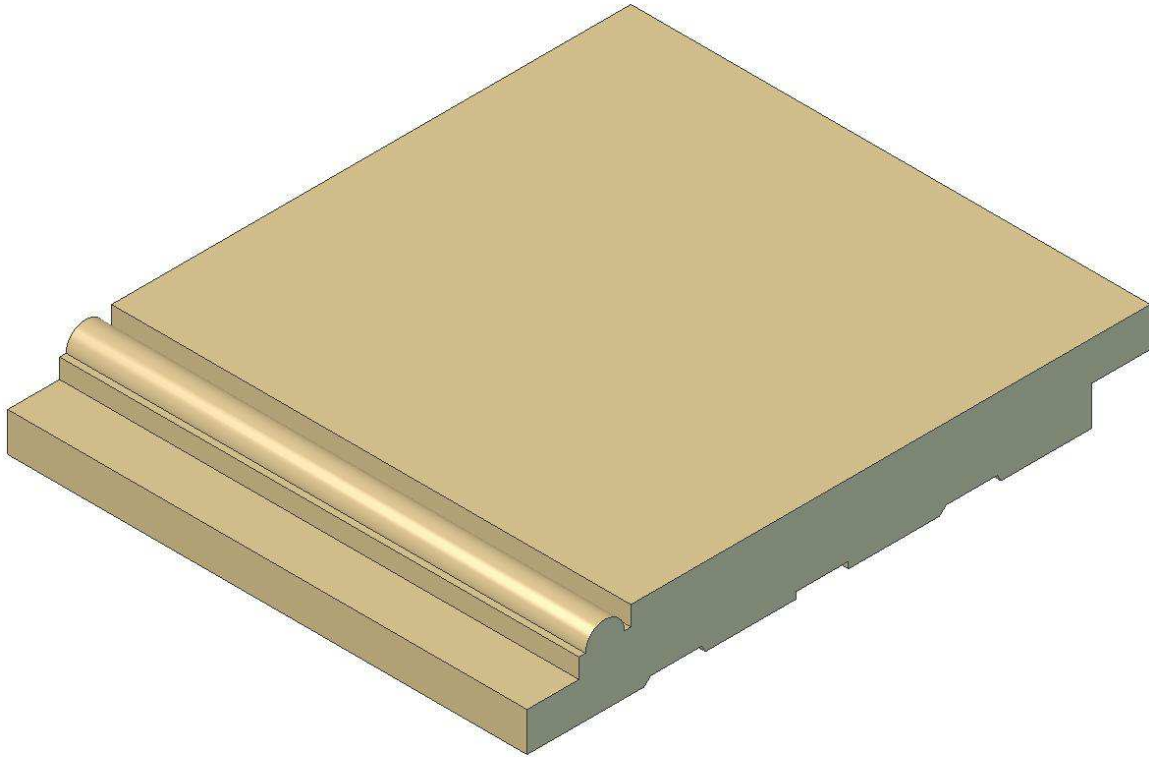

Tg-05



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

T & G Paneling

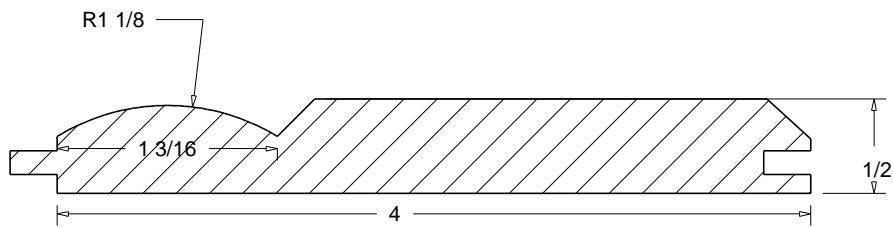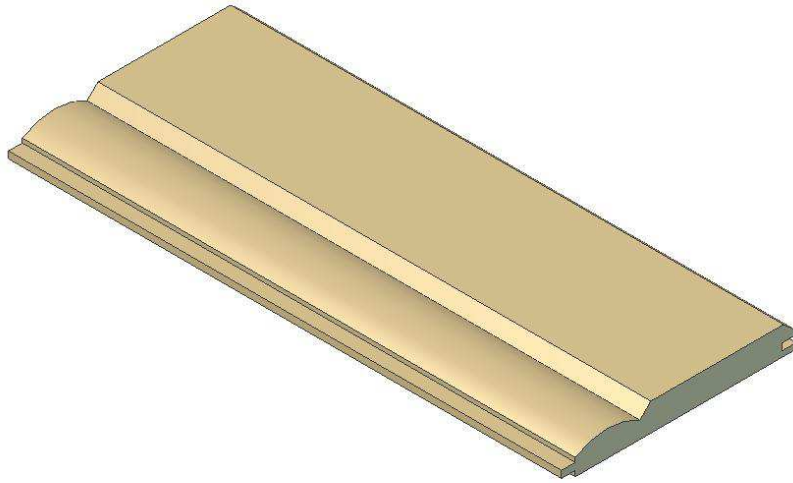

Tg-06



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

T & G Paneling

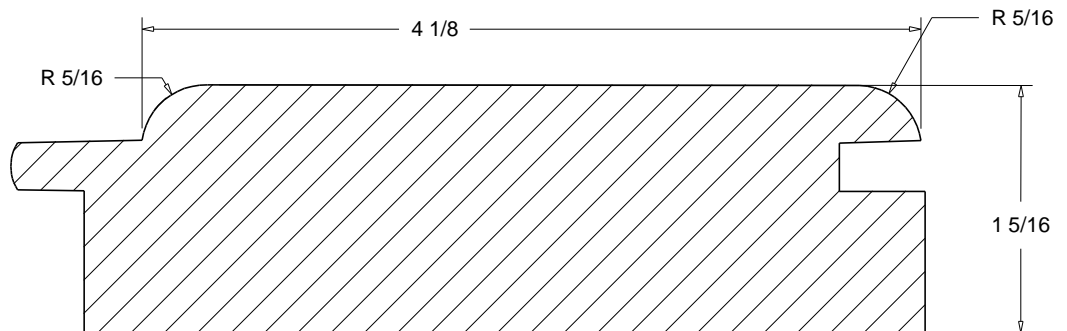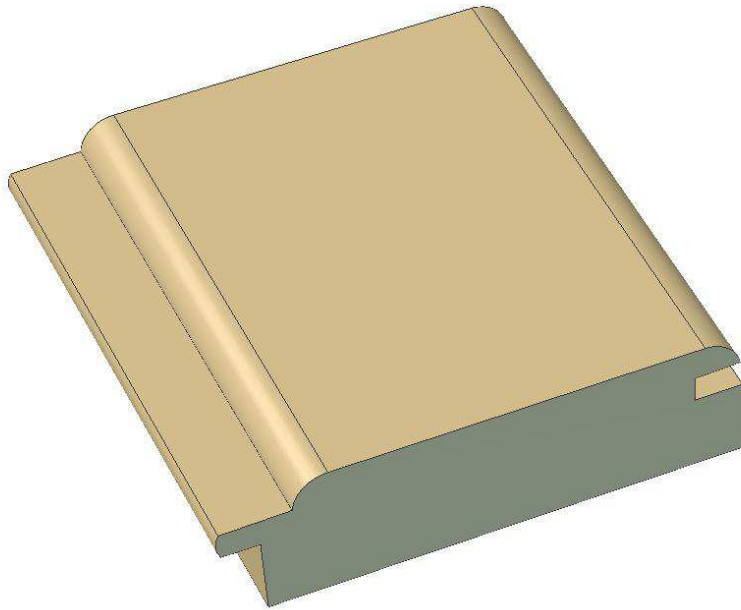

Tg-07



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Handrail

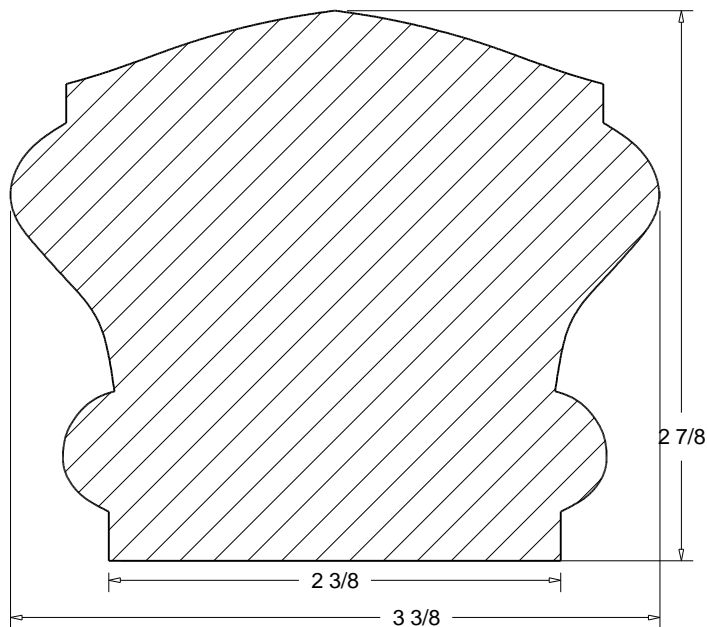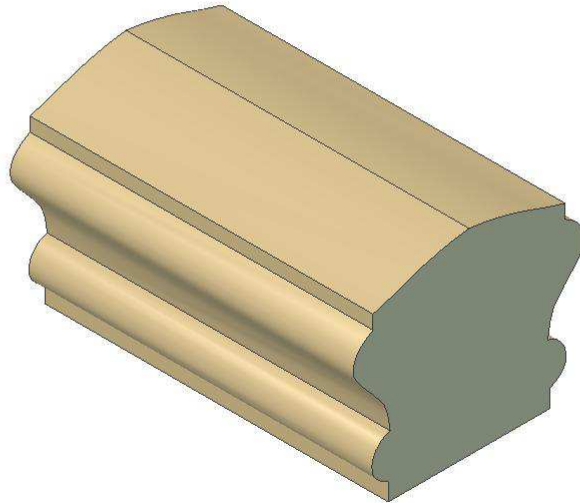

HR-01



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Handrail

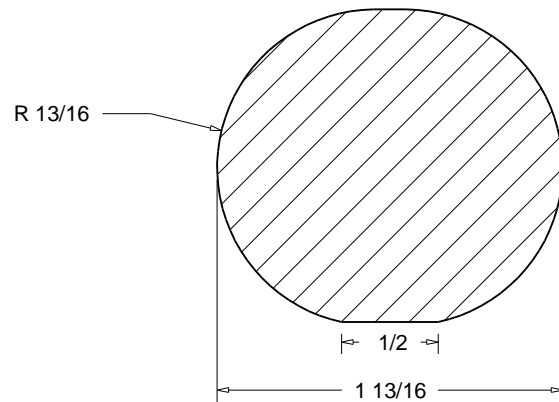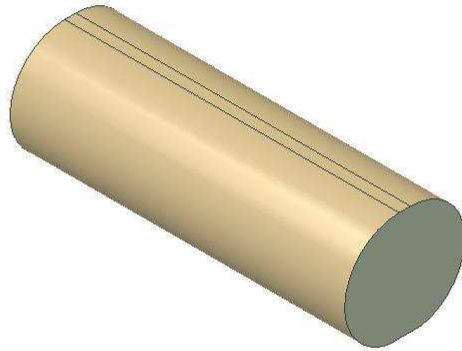

HR-02



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Handrail

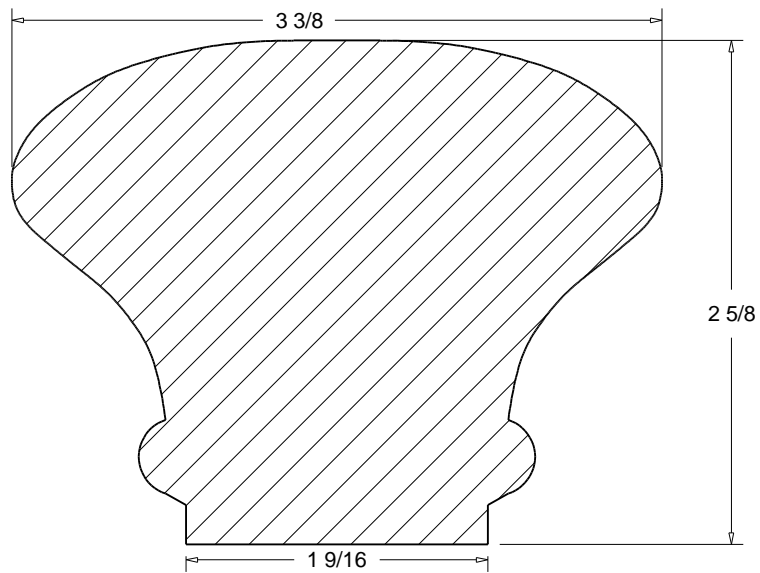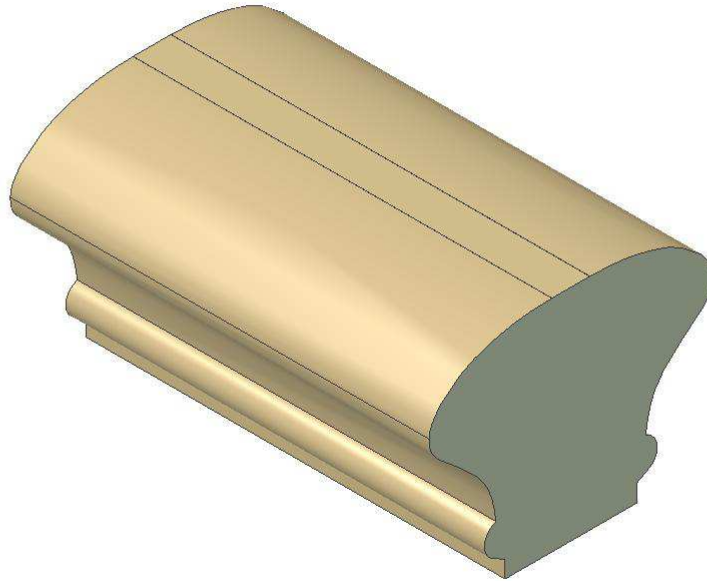

Hr-03



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Handrail

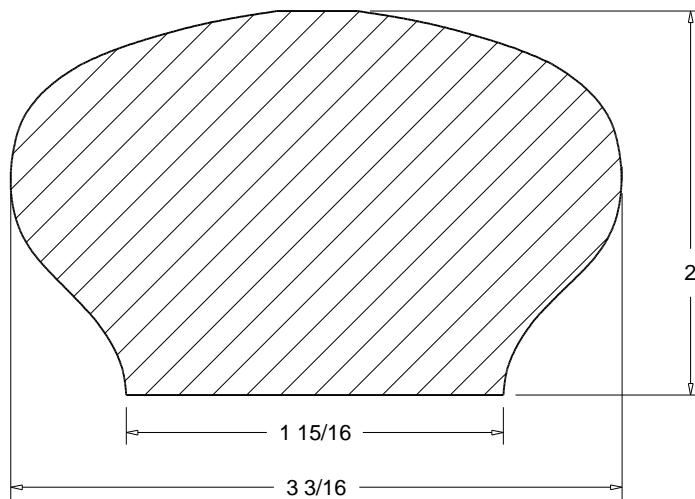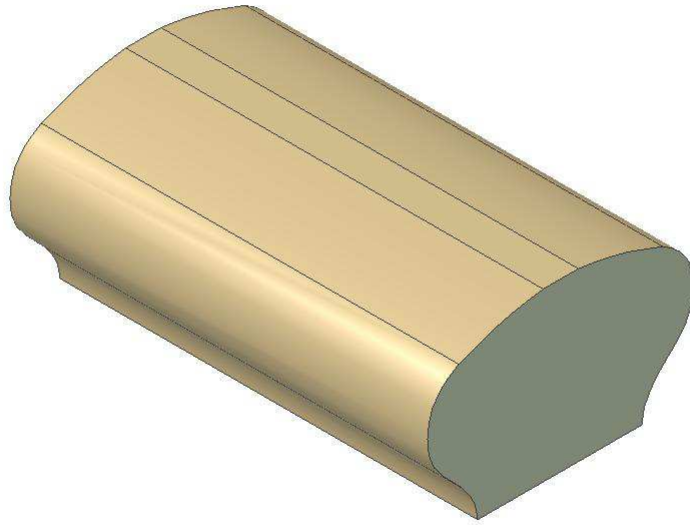

HR-04



Full Scale



HOMESTEAD
WOODWORKS

Click code to go back

Handrail

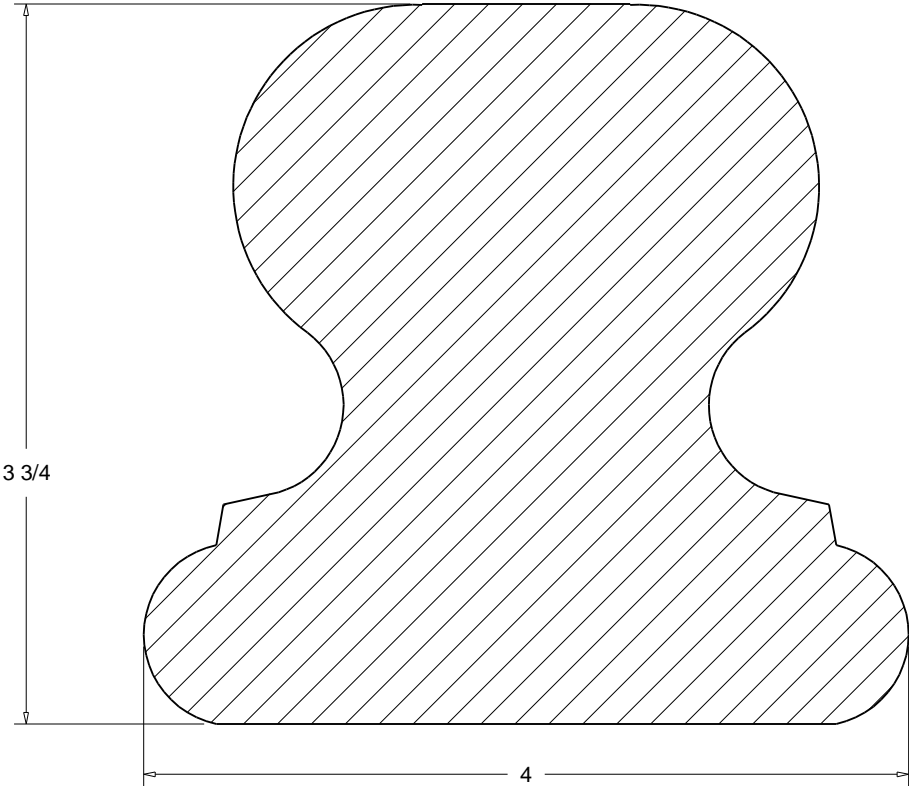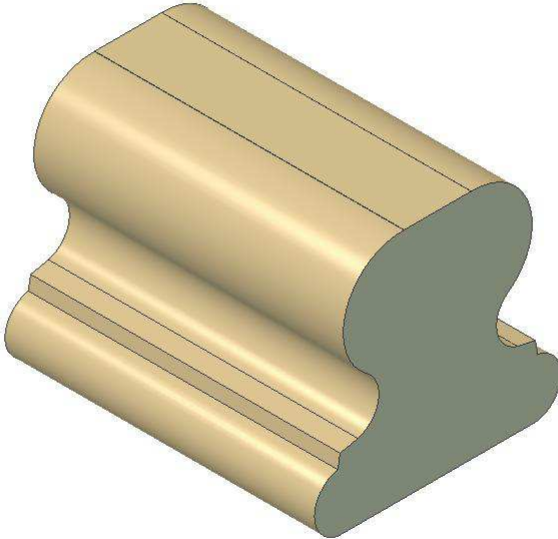

HR-05



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Handrail

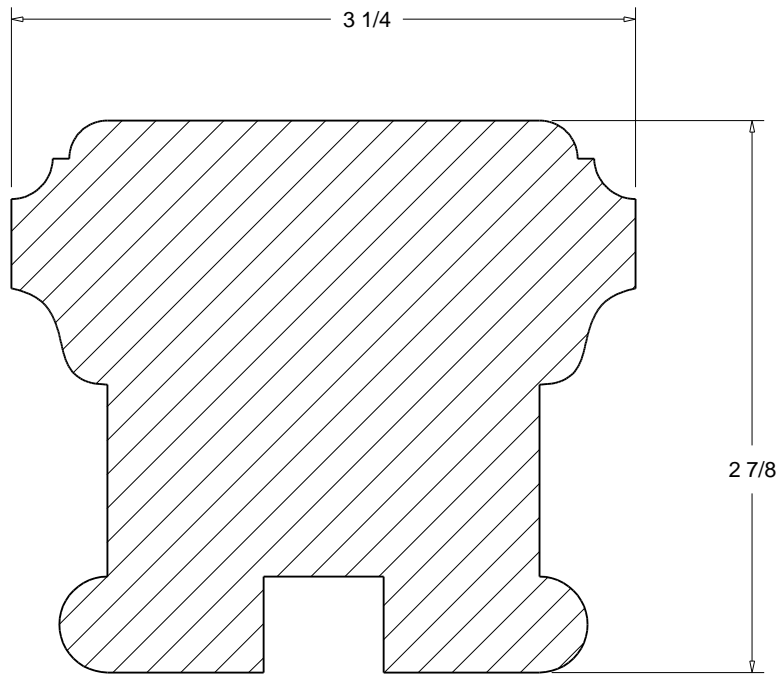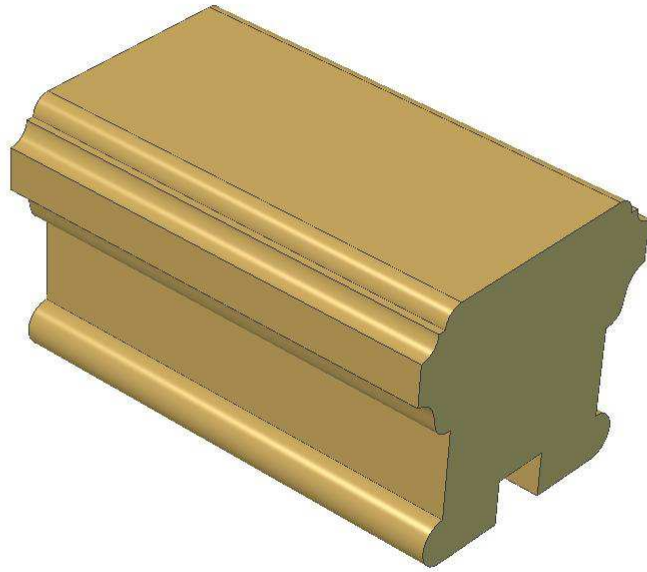

HR-06



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Handrail

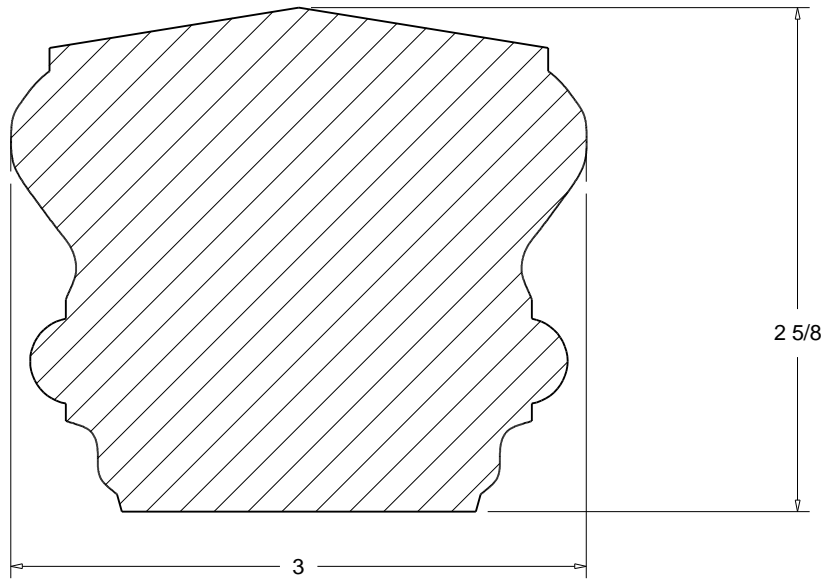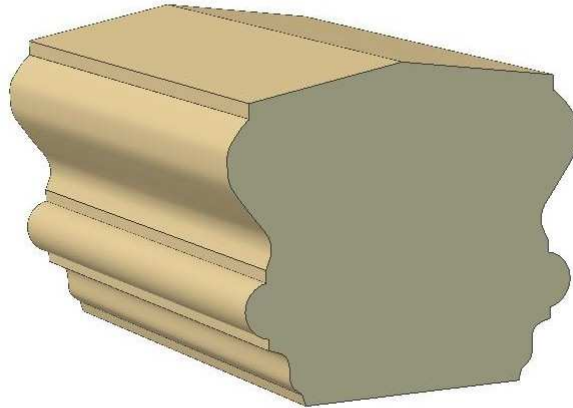

HR-07



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Handrail

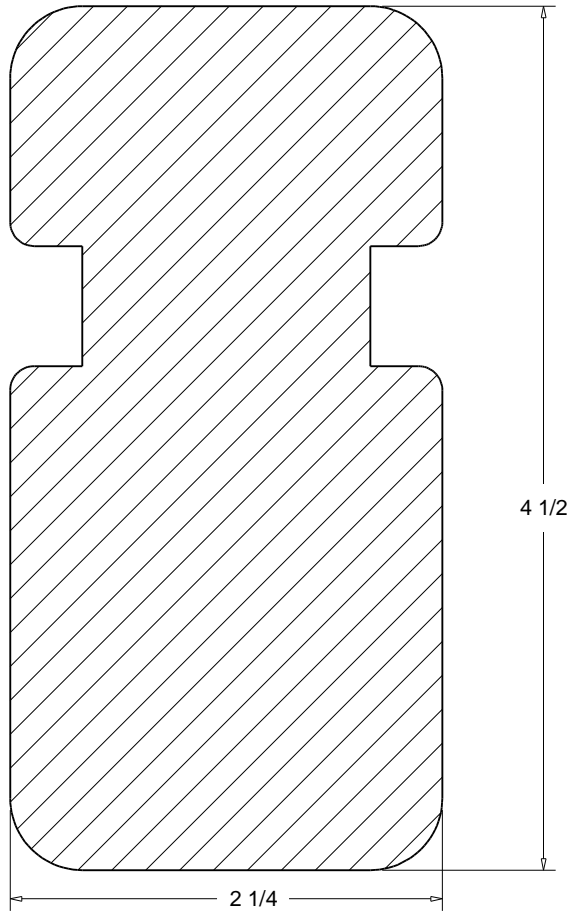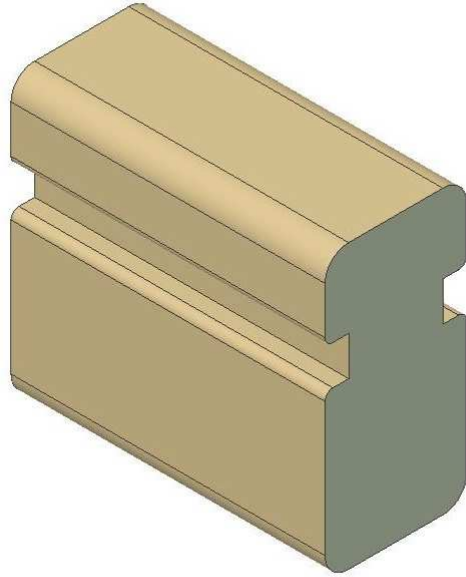

HR-08



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Handrail

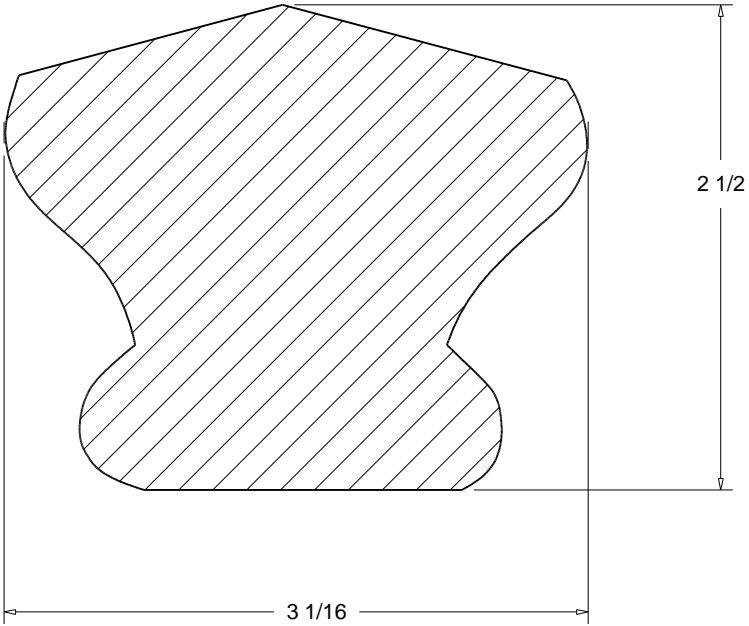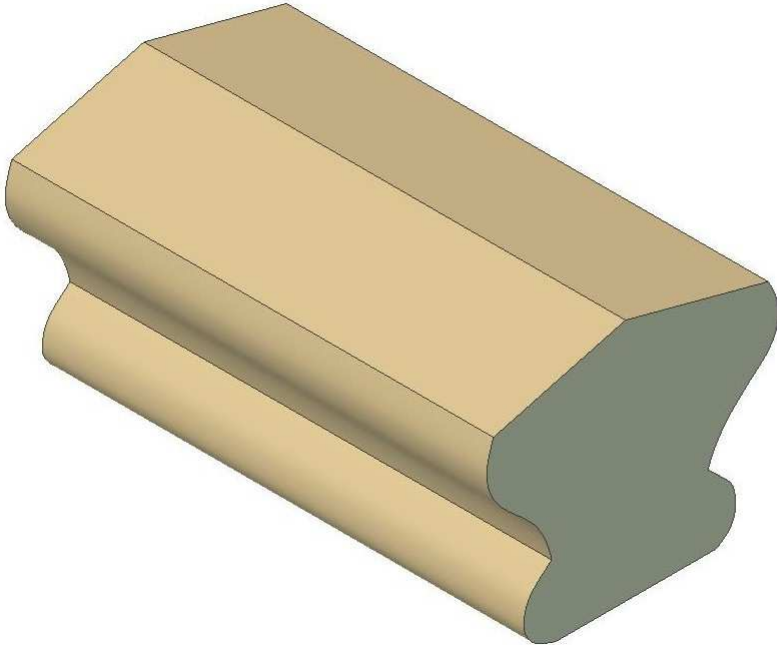

HR-09



Full Scale



HOMESTEAD
WOODWORKS

Click code to go back

Handrail

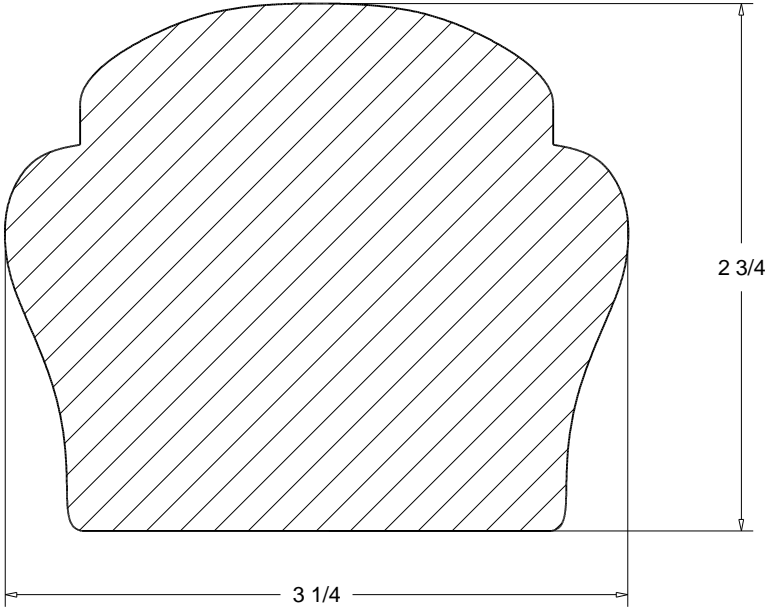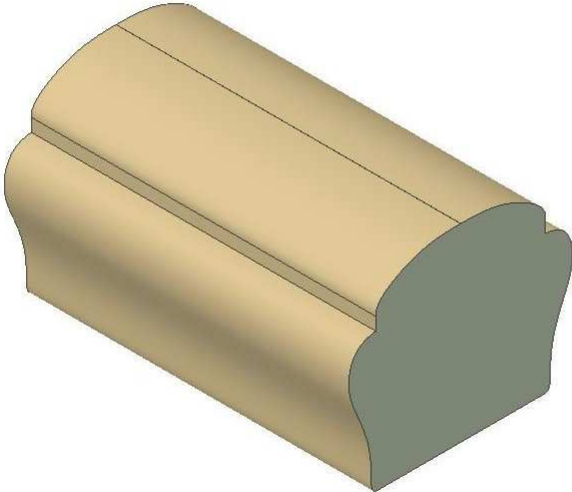

HR-10



Full Scale



HOMESTEAD
WOODWORKS

Click code to go back

Handrail

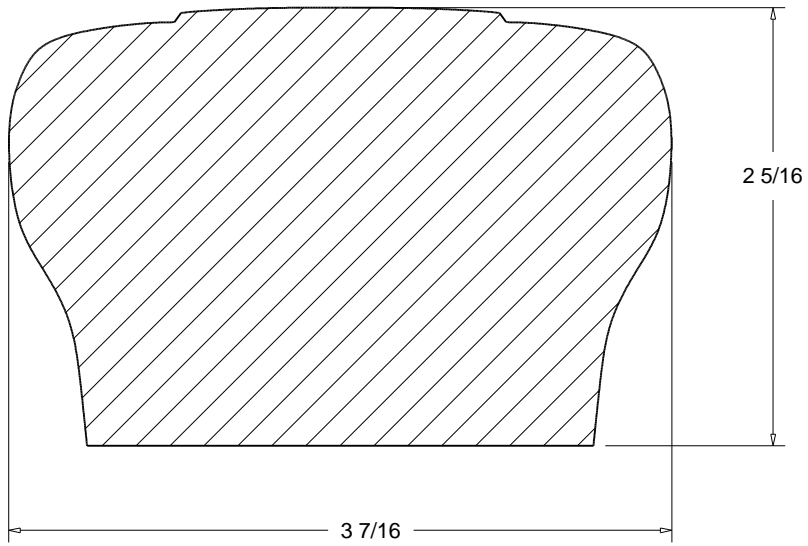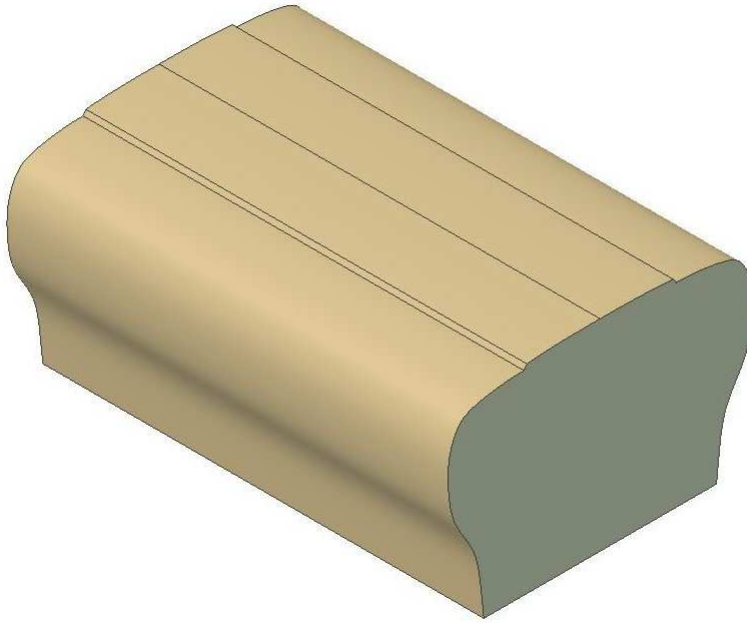

HR-11



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Handrail

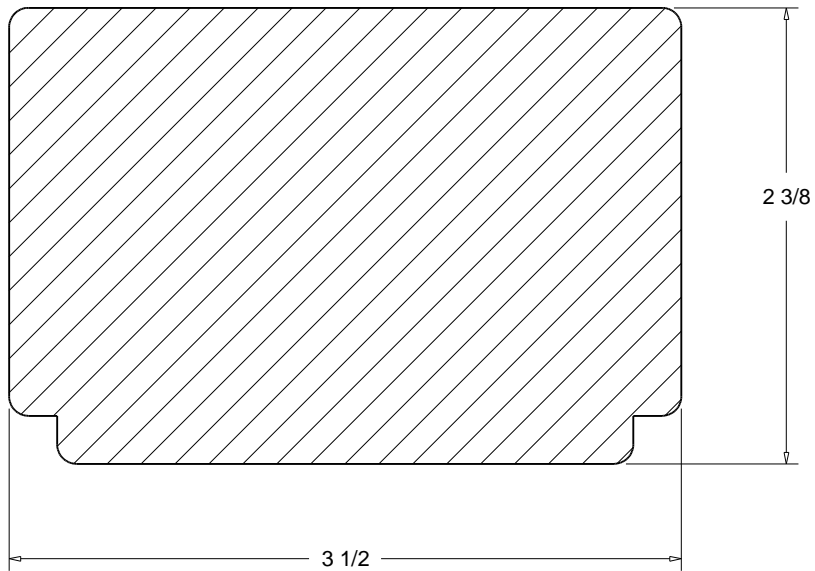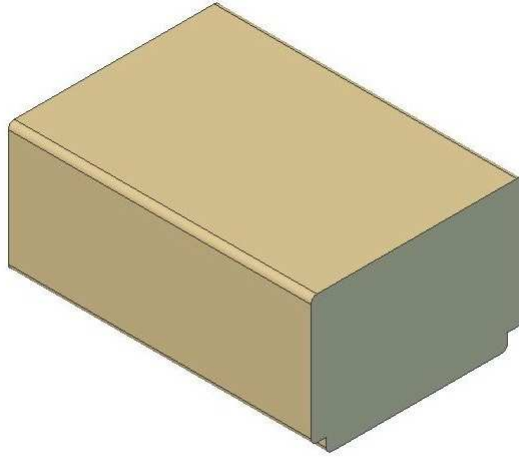

HR-12



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Handrail

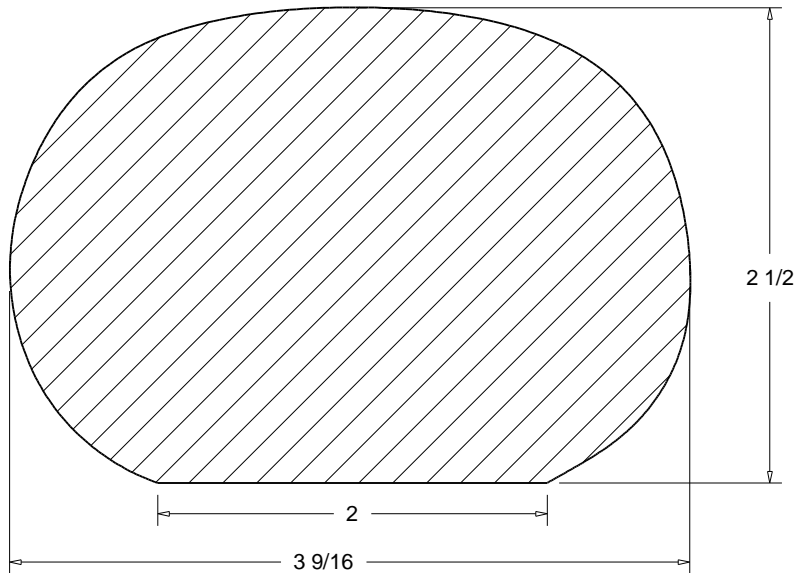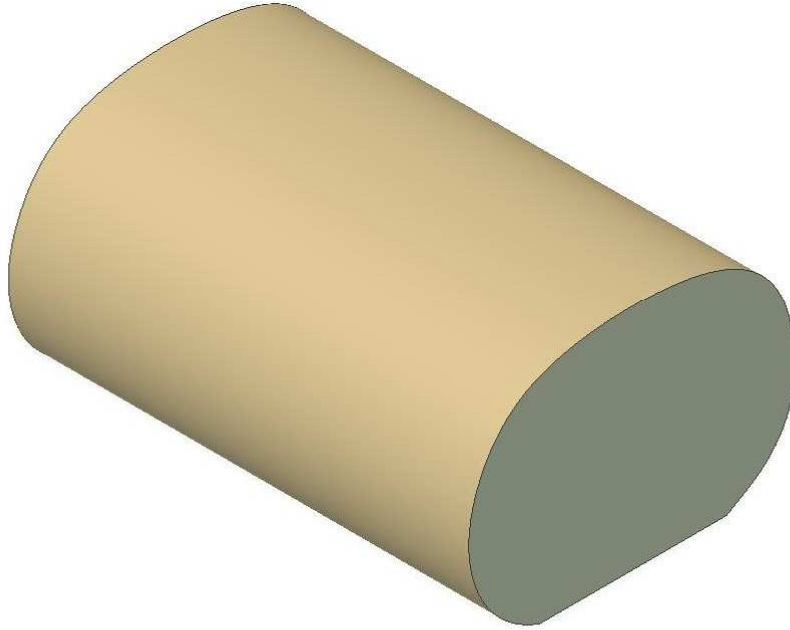

HR-13



Full Scale



HOMESTEAD
WOODWORKS

Click code to go back

Handrail

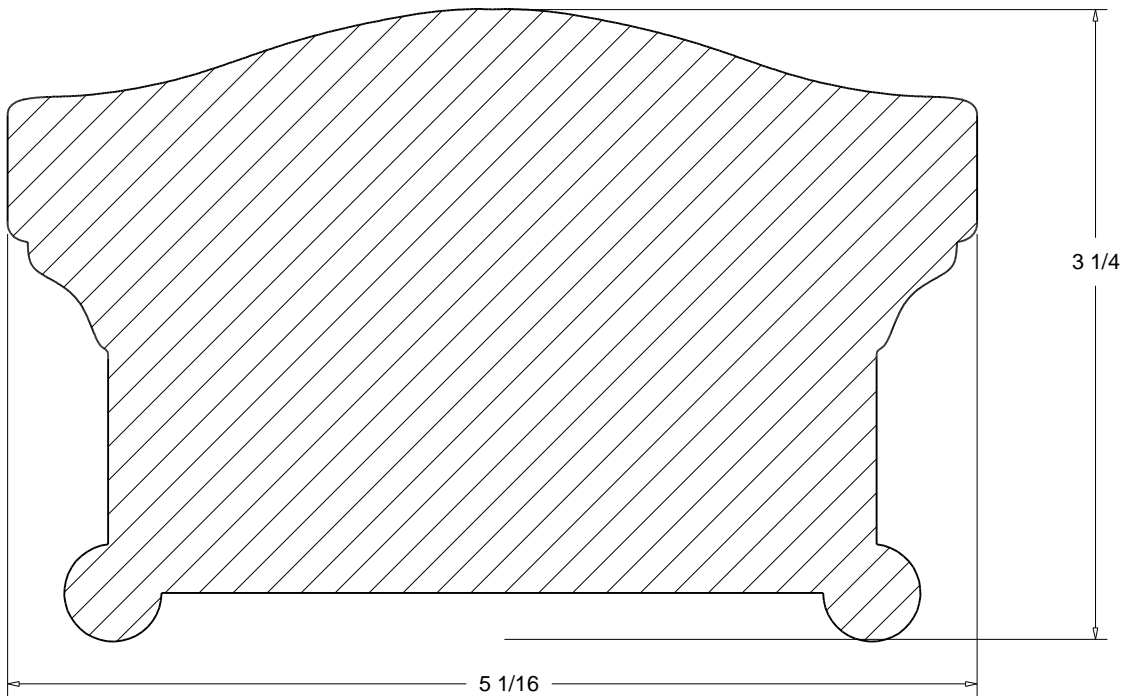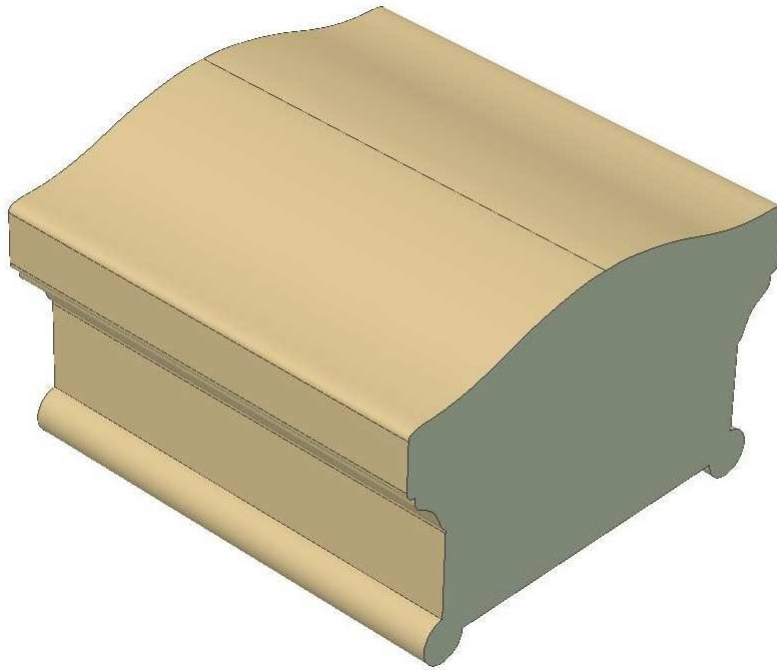

HR-14



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Base Board

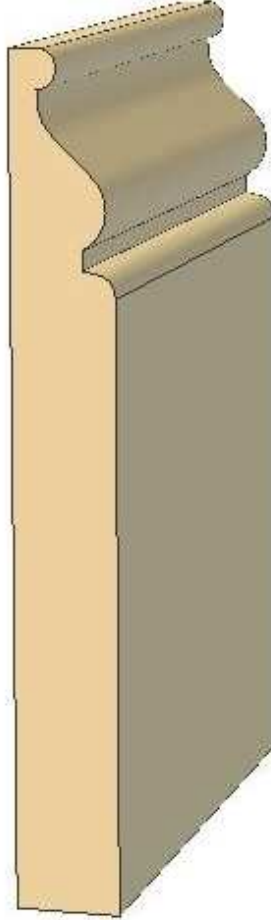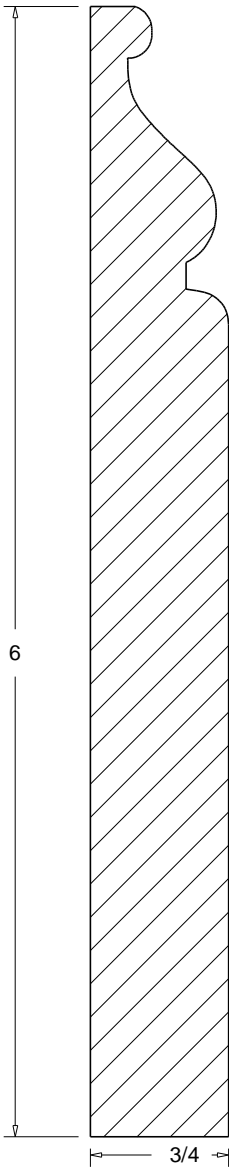

Base-01



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Baseboard

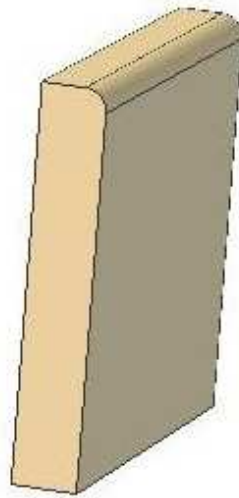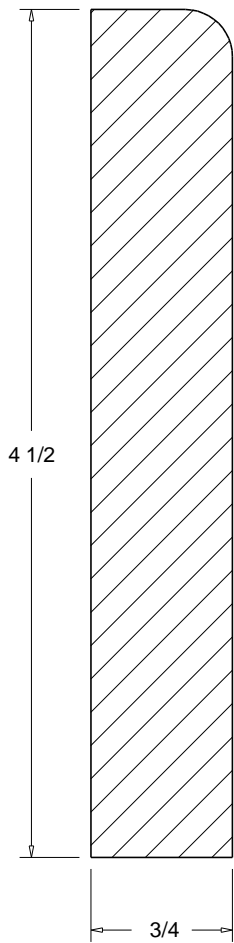

Base-02



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Baseboard

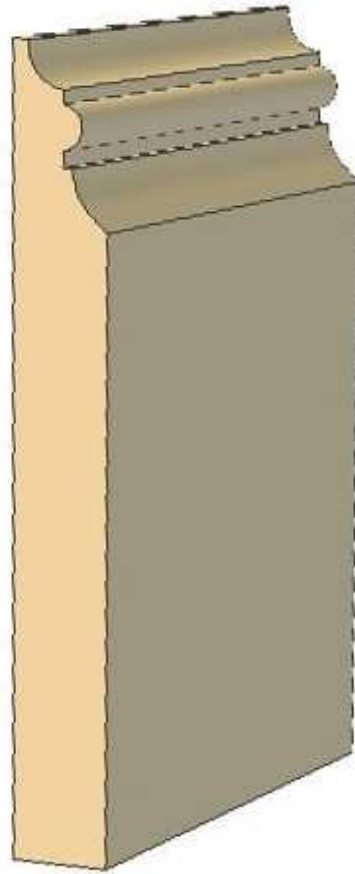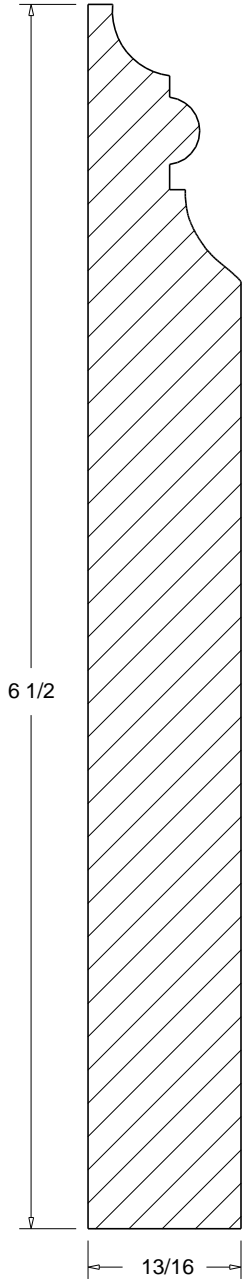

Base-03



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Baseboard

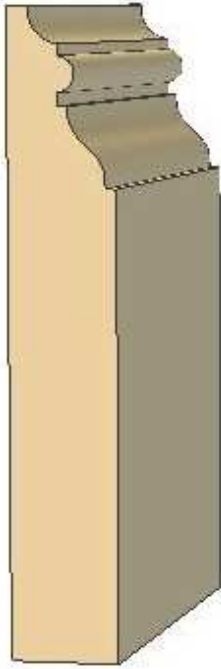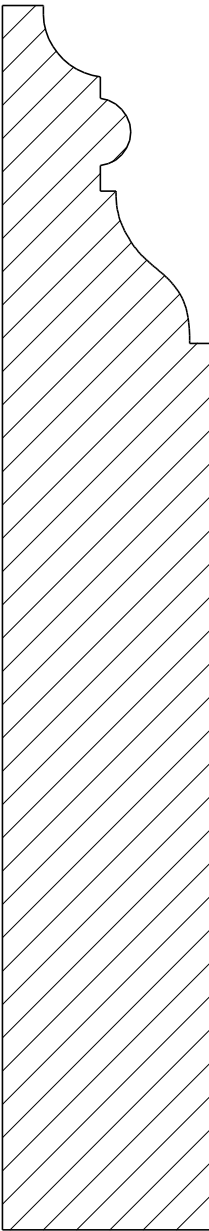

Base-04



Full Scale


[Click code to go back](#)





HOMESTEAD
WOODWORKS

Baseboard

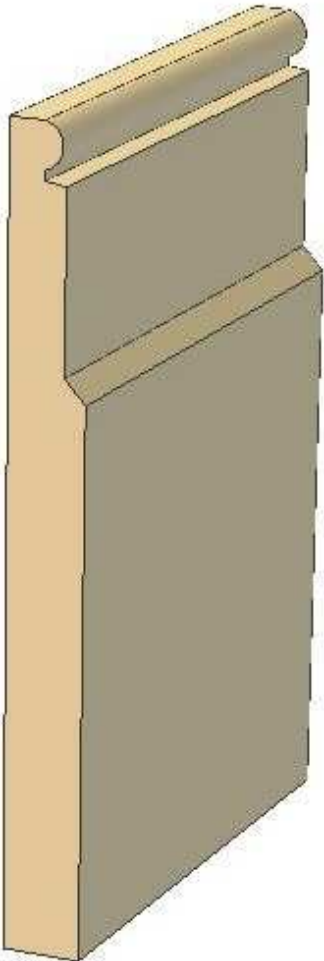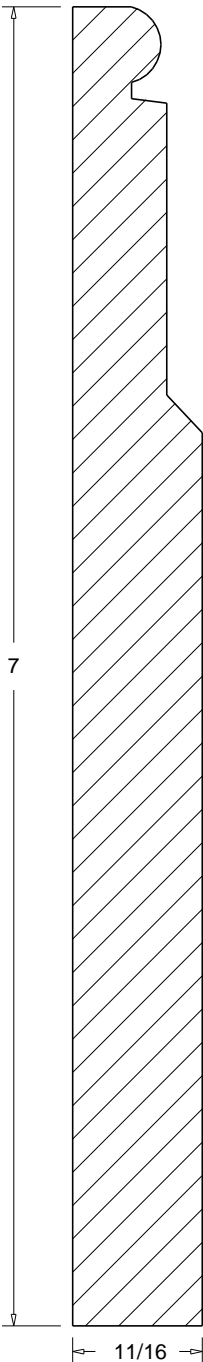

| | | |
|-----------------------|-------------------|--|
| Base-05 | Full Scale |  HOMESTEAD WOODWORKS |
| Click code to go back | | |

Baseboard

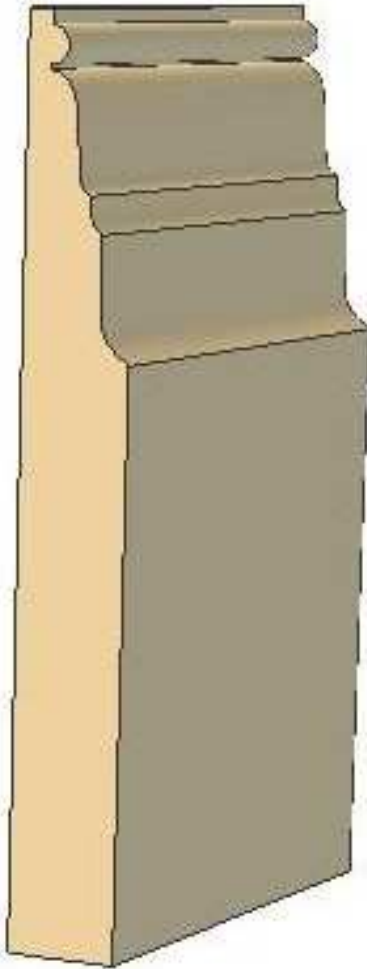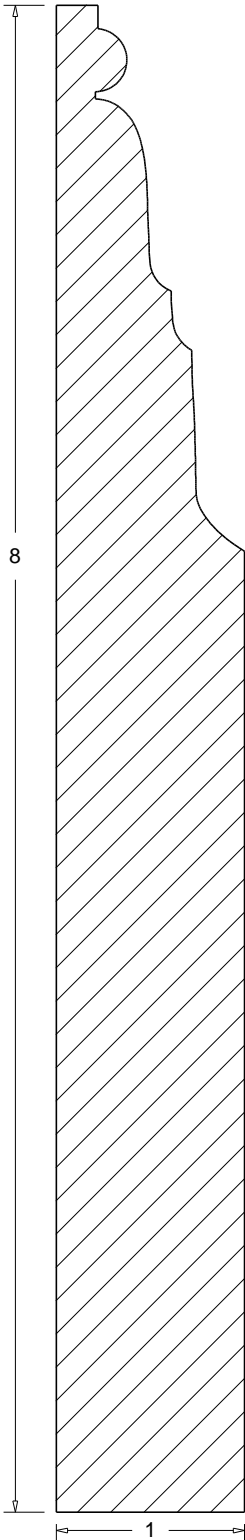

Base-06



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Baseboard

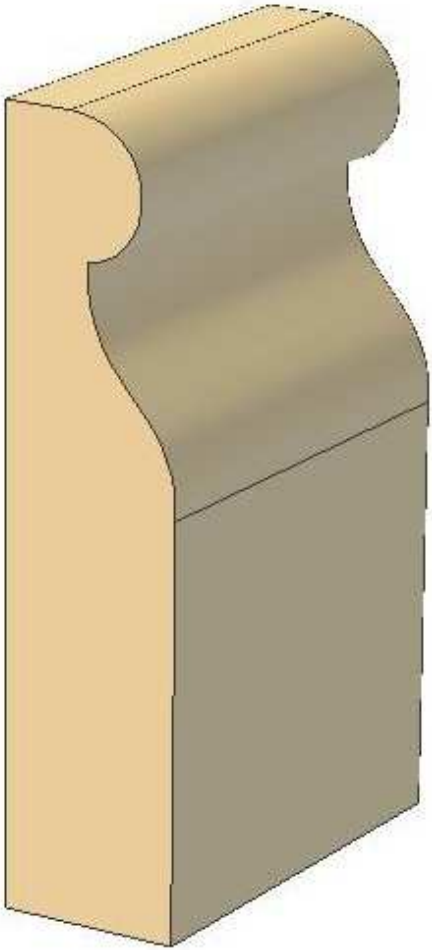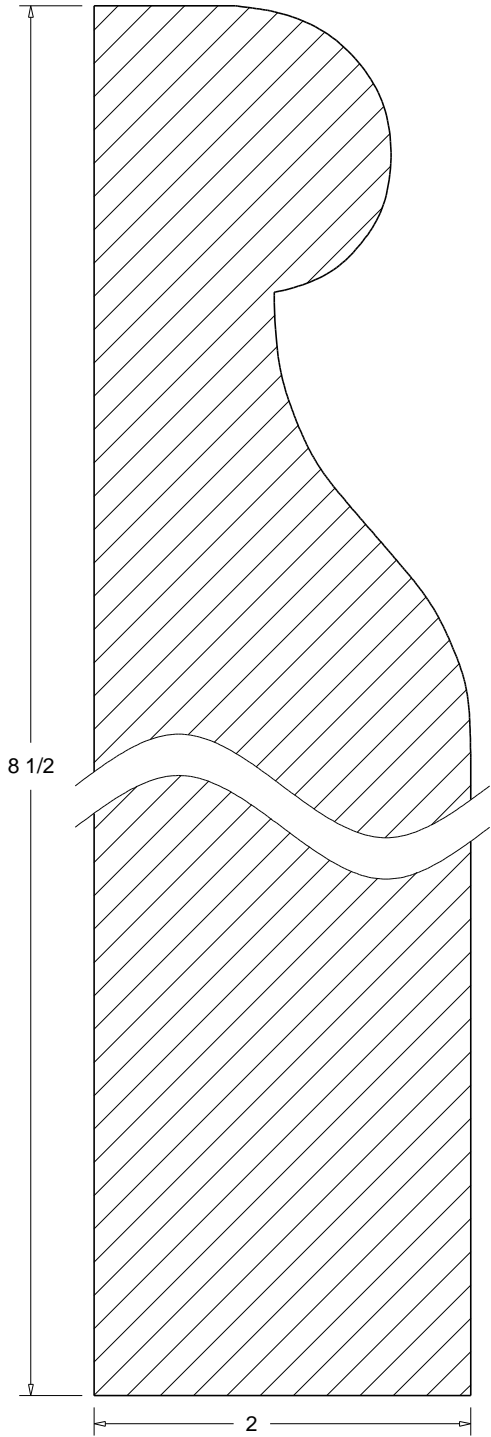

Base-08



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Baseboard

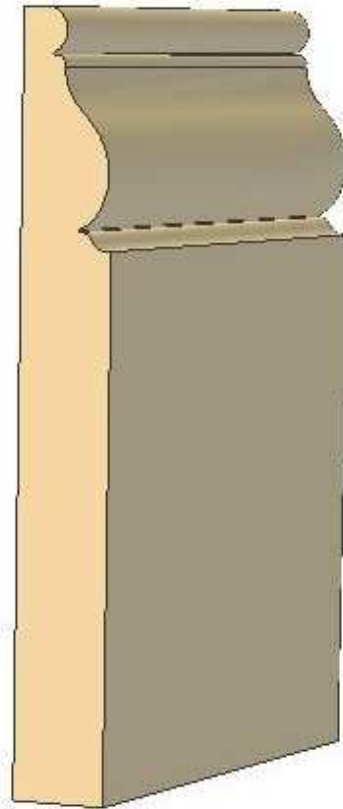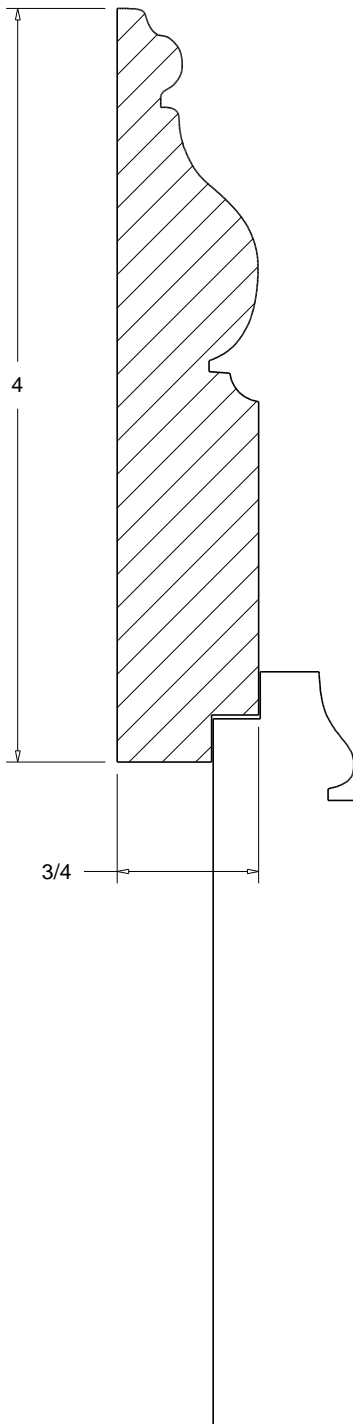

Base-08



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Base Board

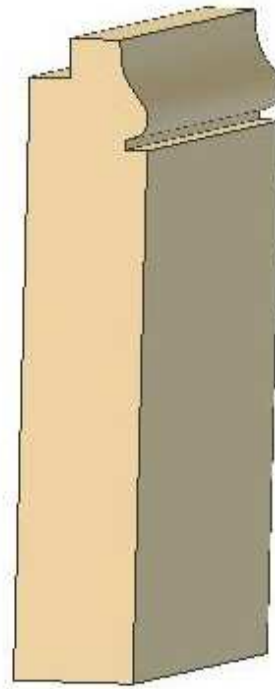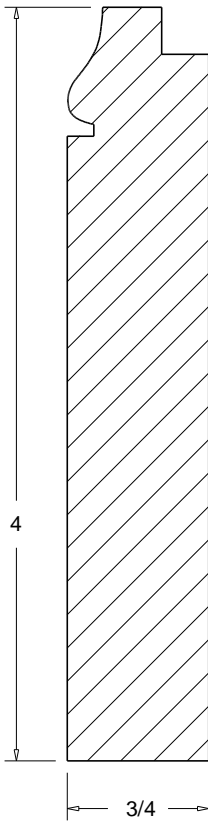

Base-09



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Base Board

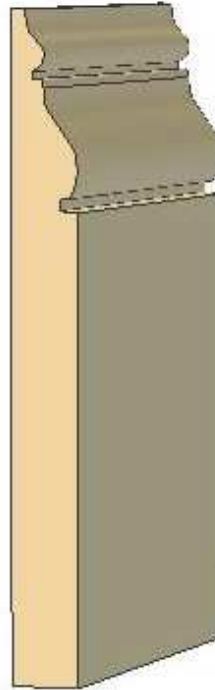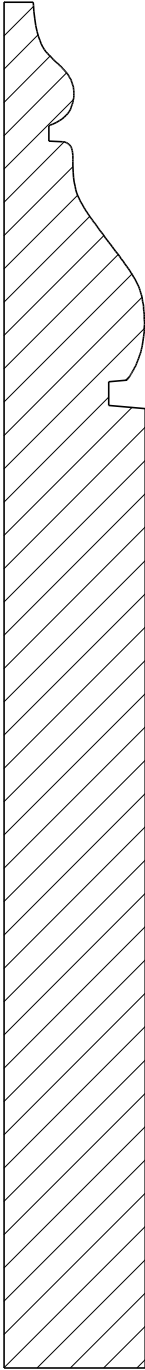

Base-10



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Base Board

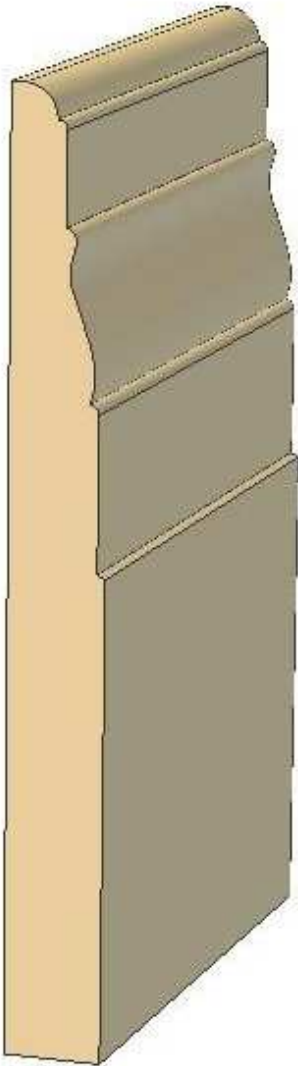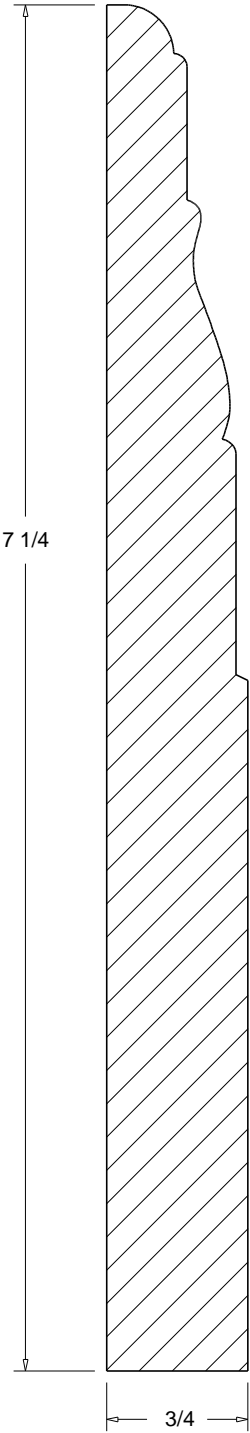

Base-11



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Door Stop

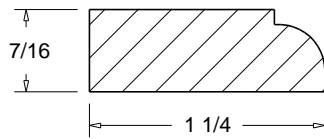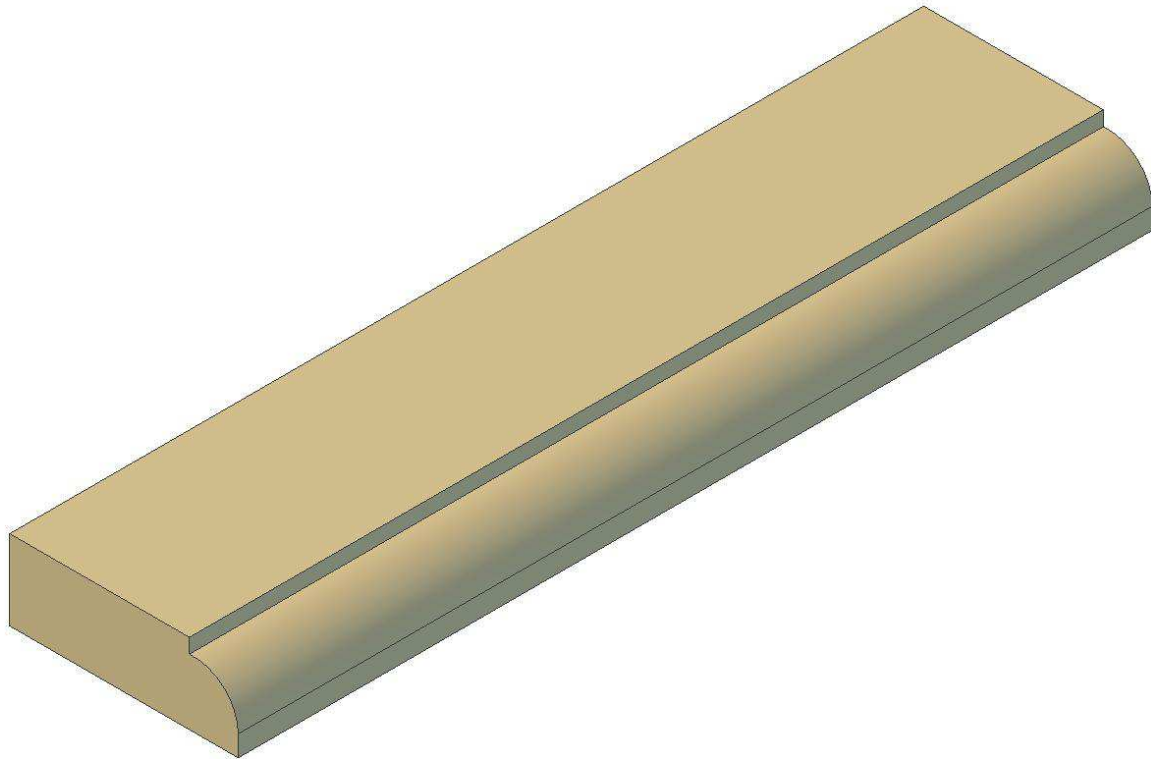

DS-01



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Door Stop

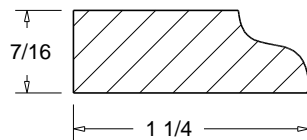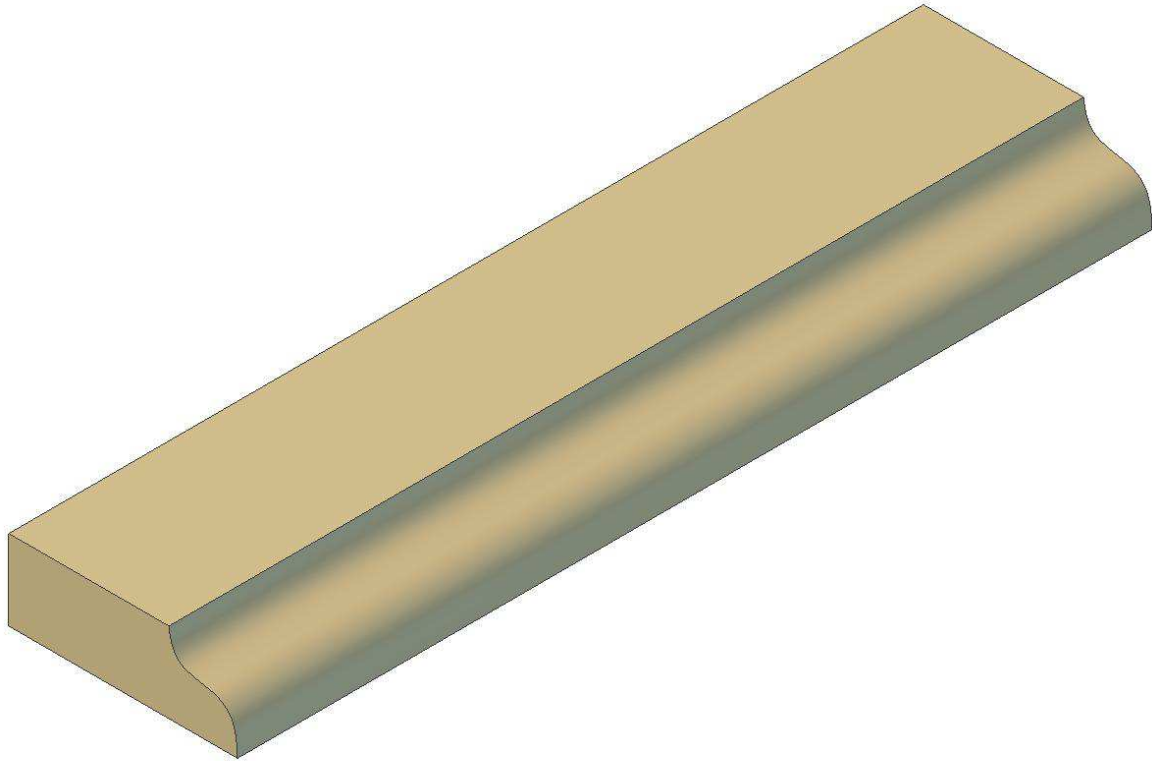

DS-02



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Door Stop

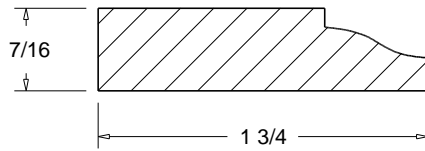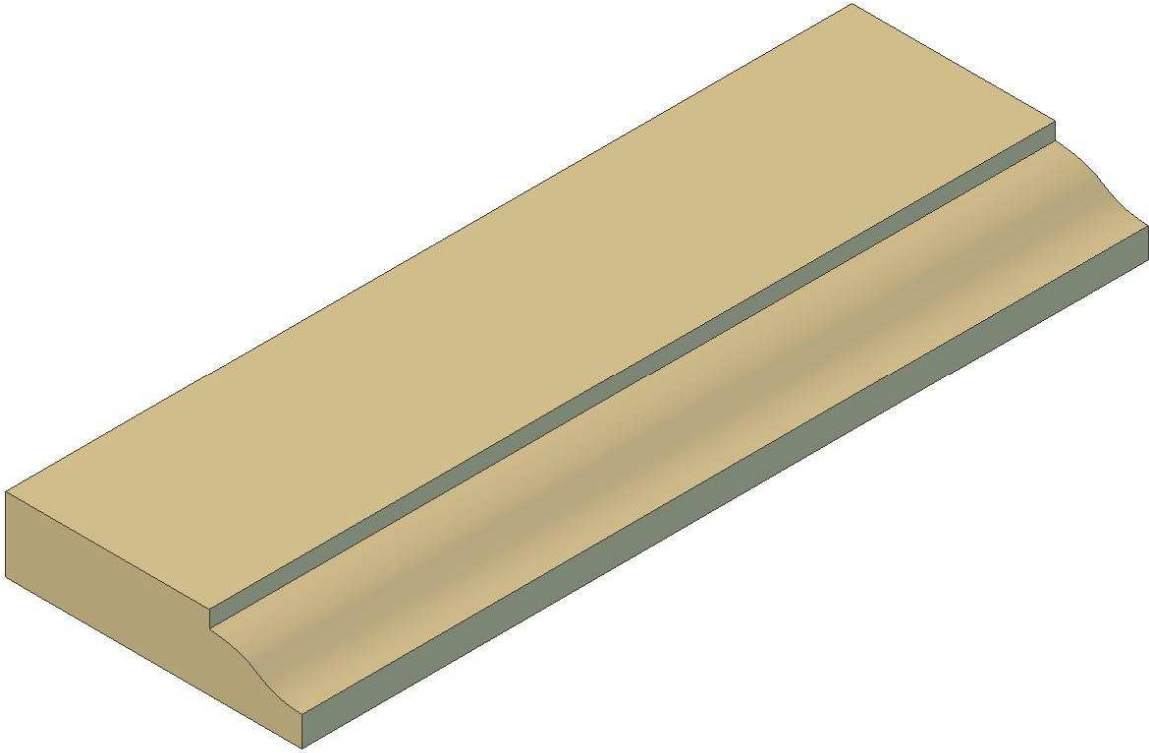

DS-03



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Door Stop

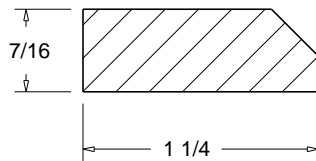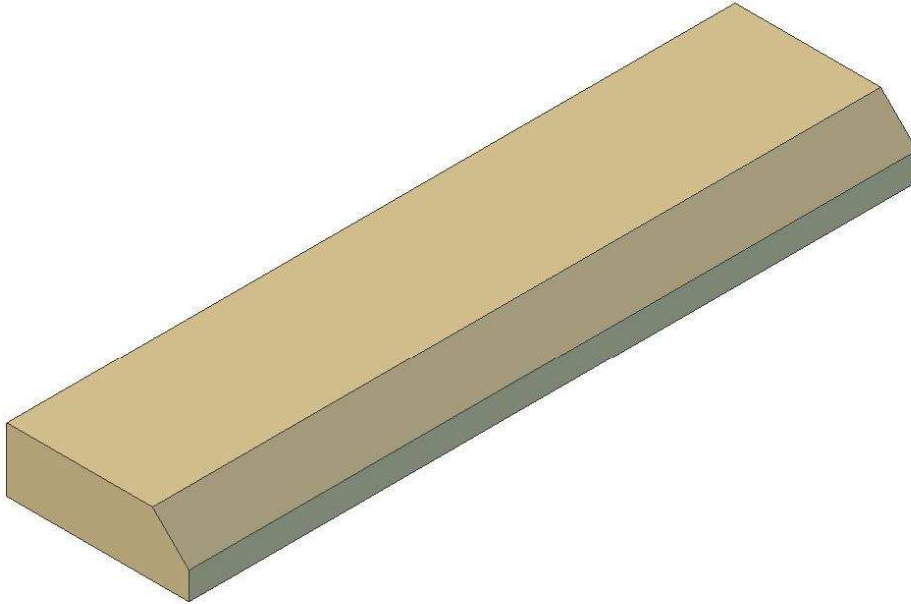

DS-03



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Kitchen Doors

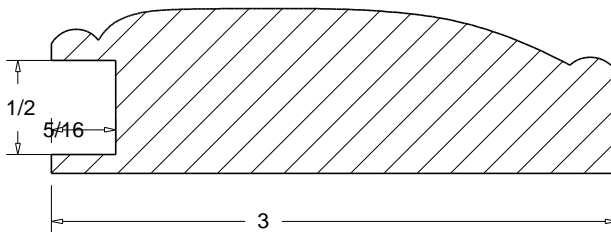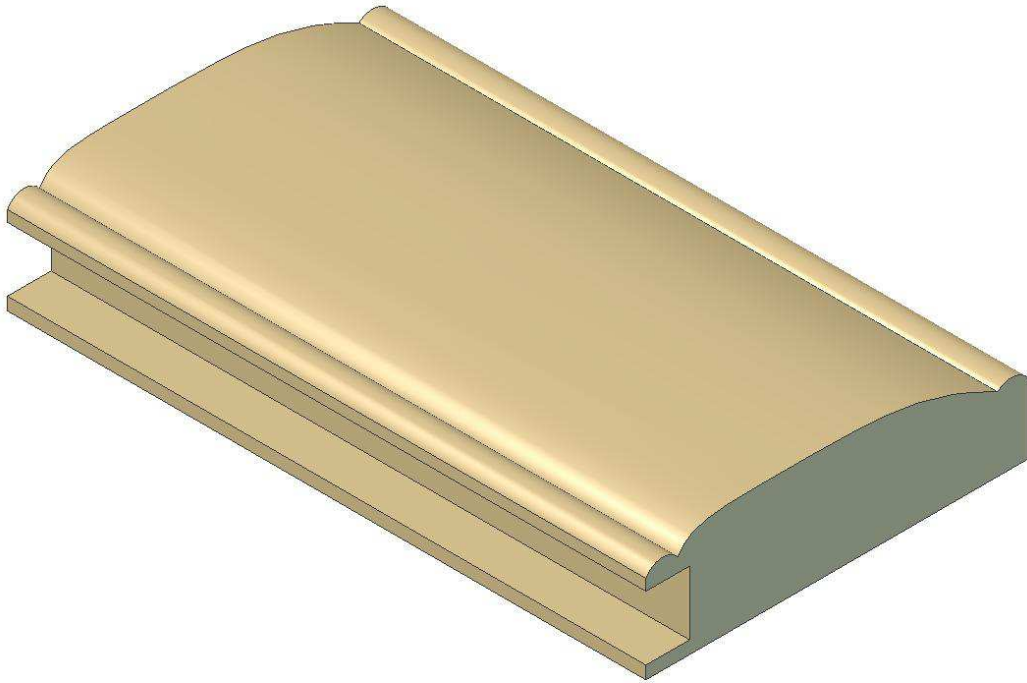

KD-01



FullScale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Kitchen Doors

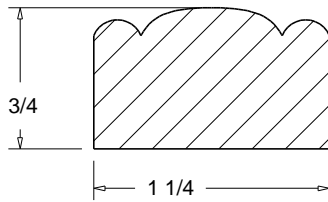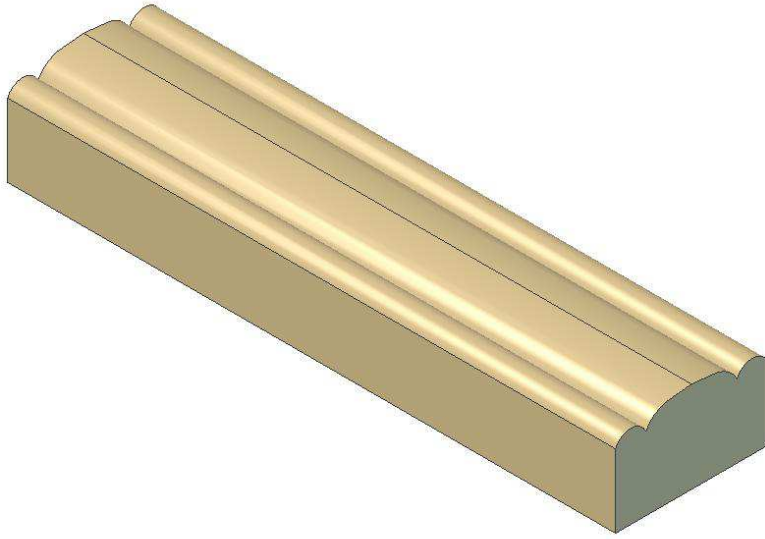

KD-02



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Plinth Block

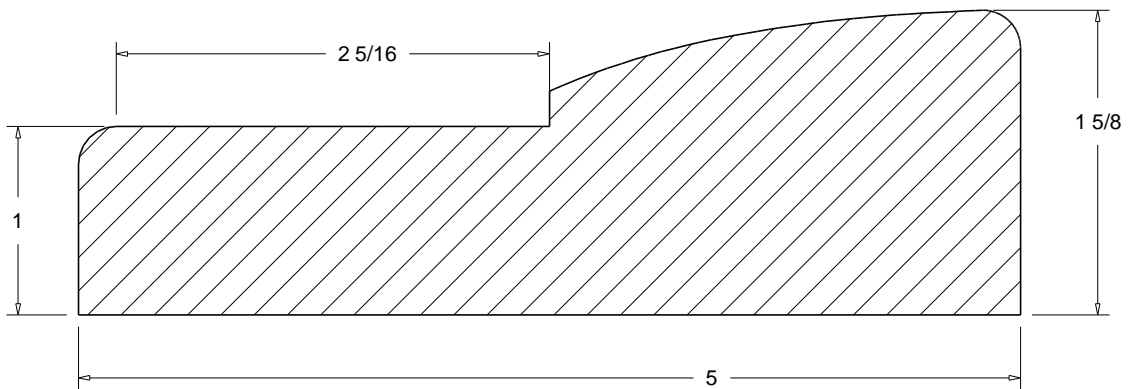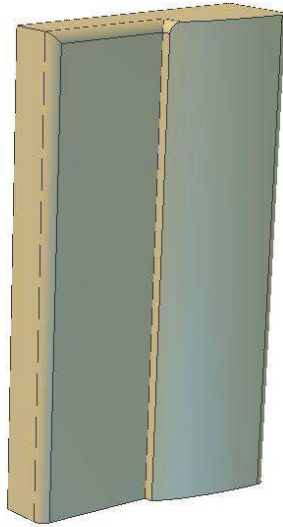

Plinth-01



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Plinth Block

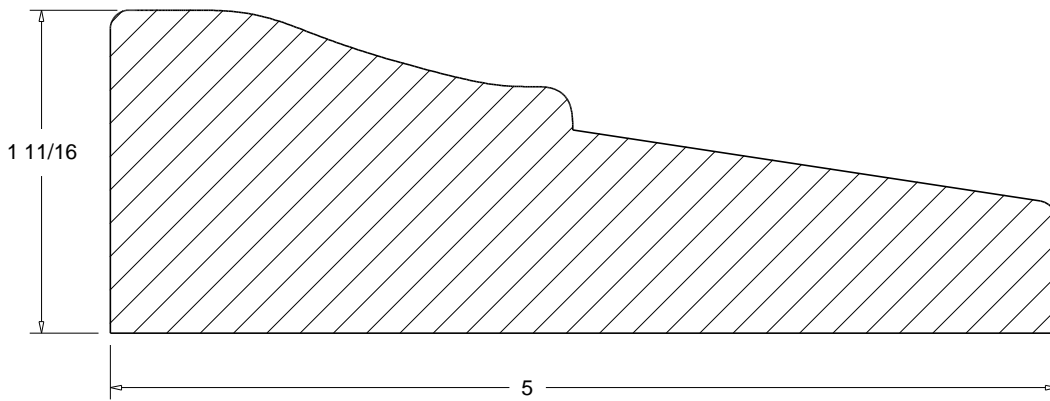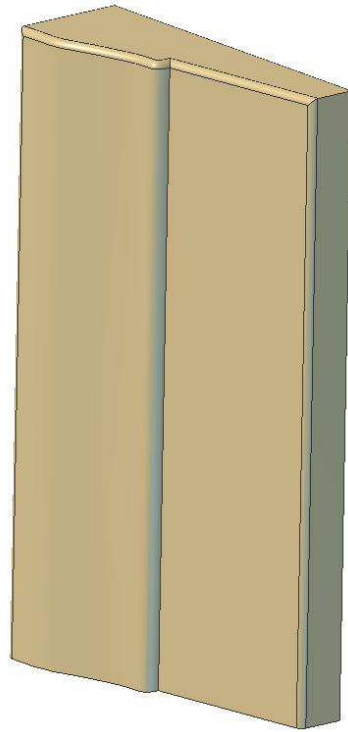

Plinth-02



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Plinth Block

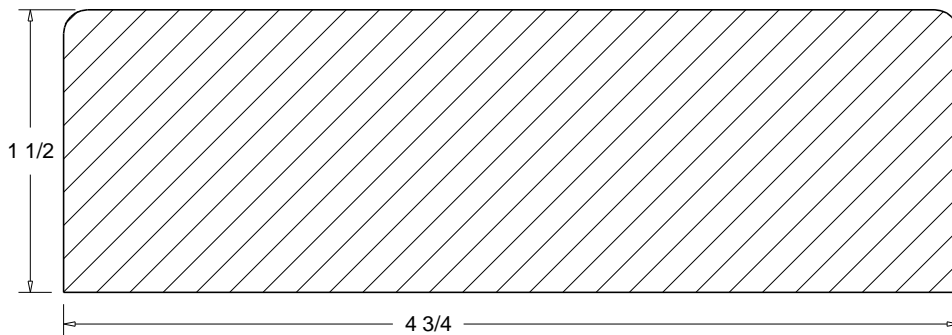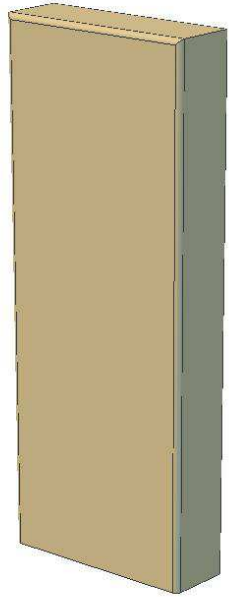

Plinth-03



Full Scale


[Click code to go back](#)





HOMESTEAD
WOODWORKS

Plinthblock

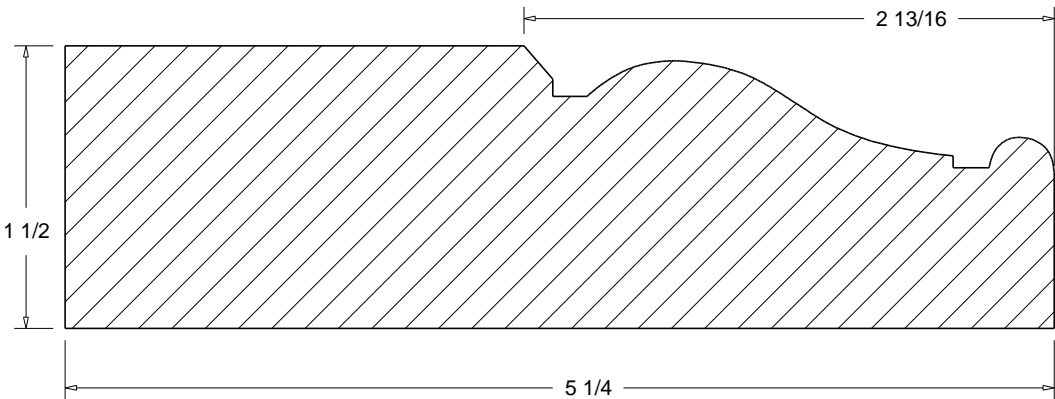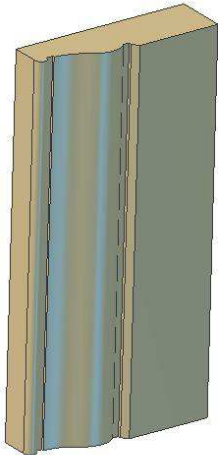

| | | |
|-----------------------|-------------------|--|
| Plinthblock-04 | Full Scale |  HOMESTEAD WOODWORKS |
| Click code to go back | | |

Shiplap

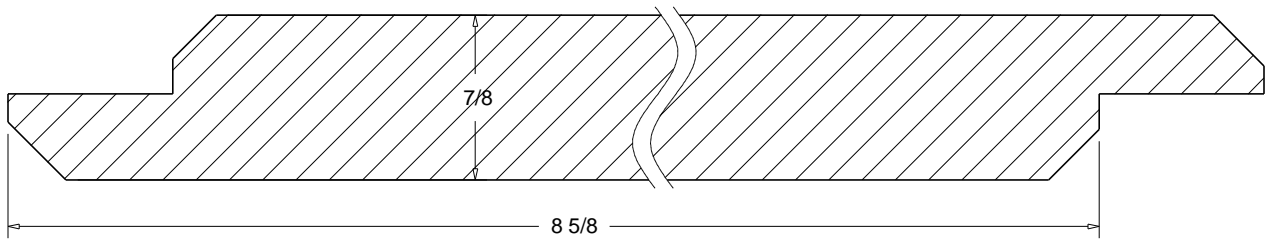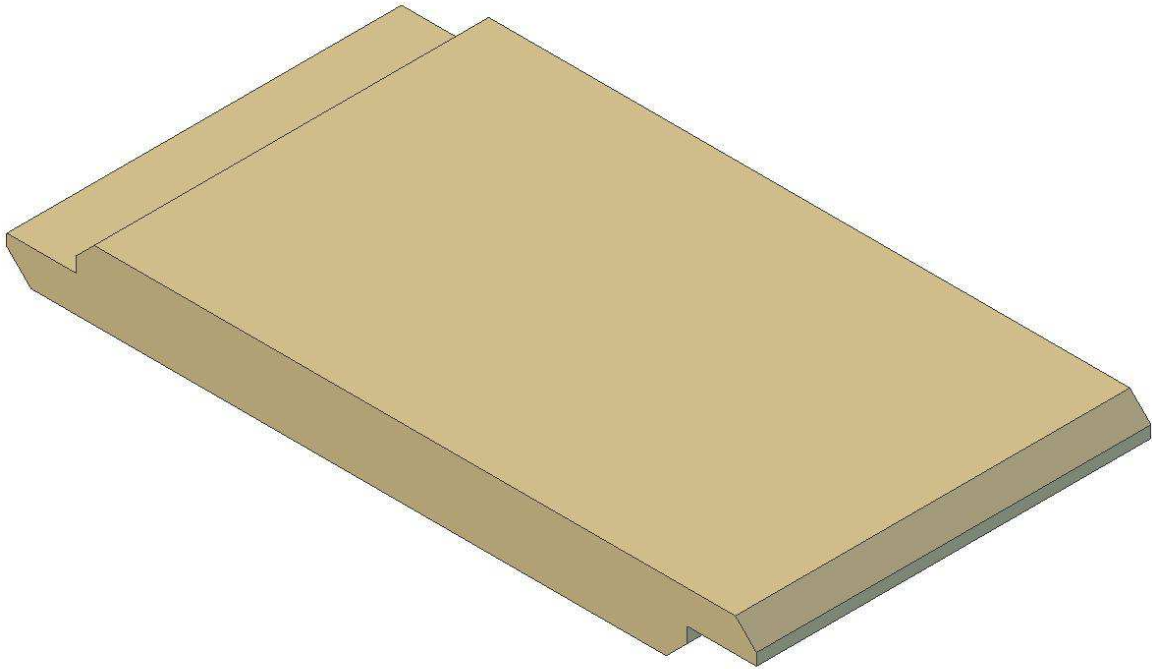



Shi-01

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Shiplap

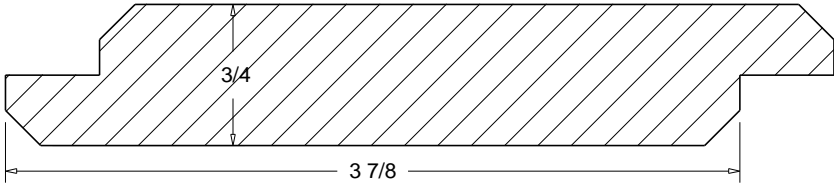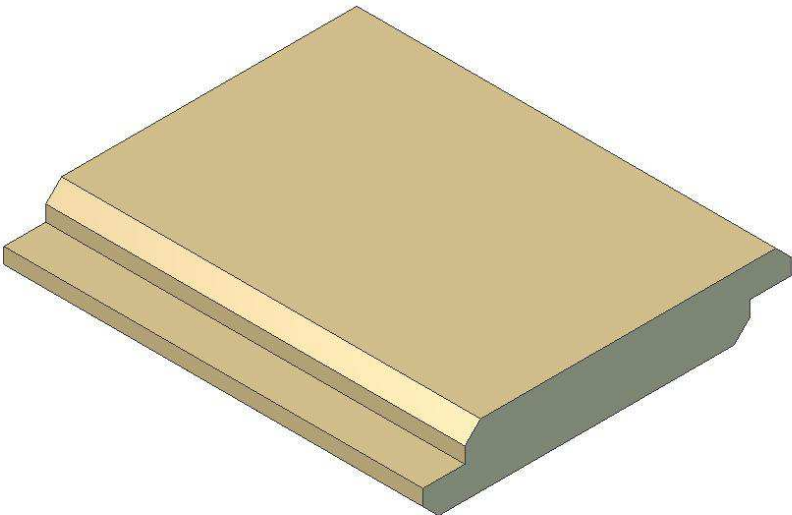

Shi-02



Full Scale

Click code to go back



HOMESTEAD
WOODWORKS

Raised Panel

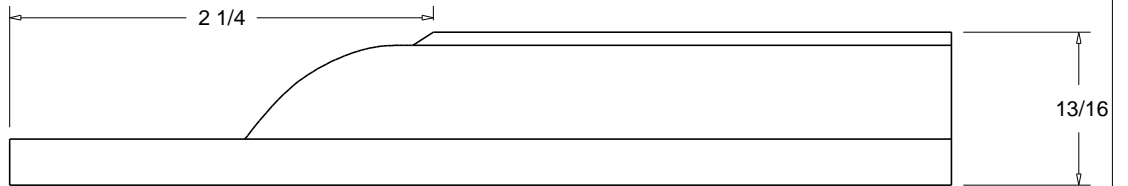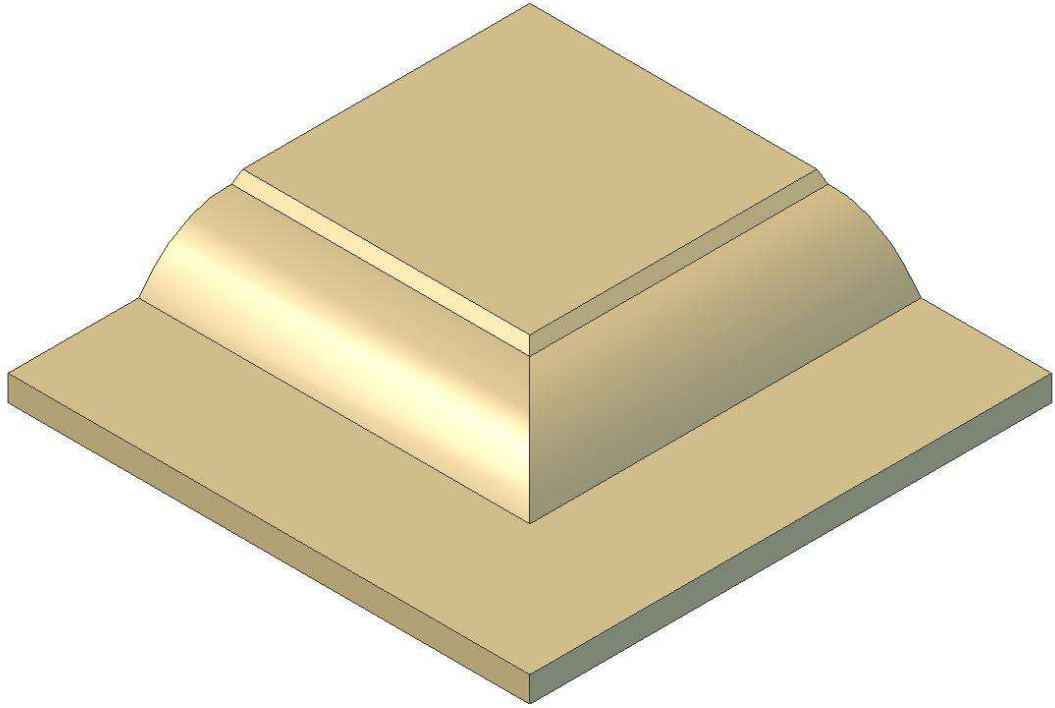

RP-01



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Raised Panel

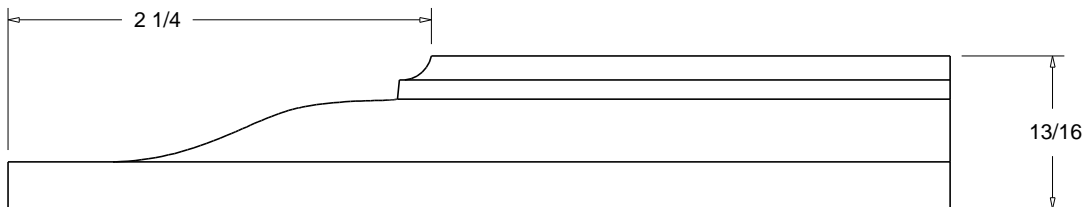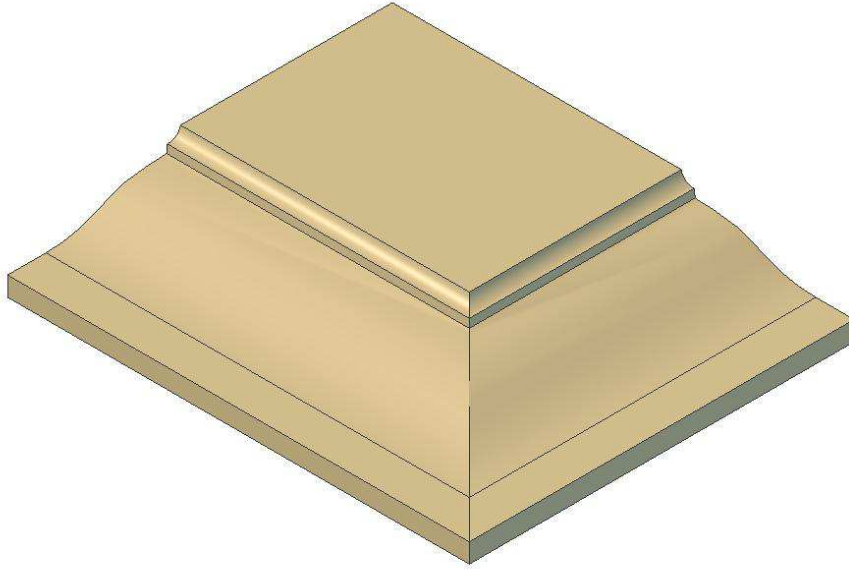

PR-02



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Raised Panel

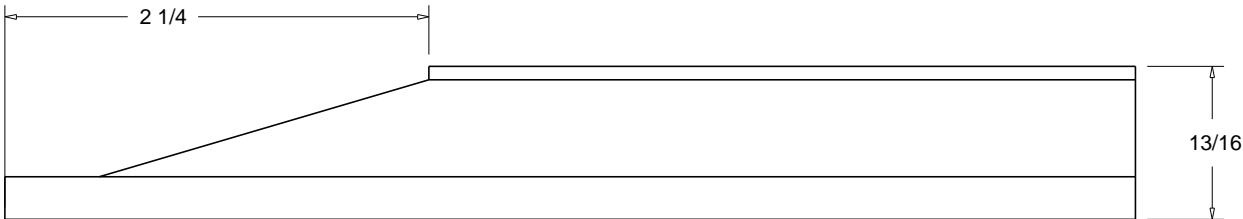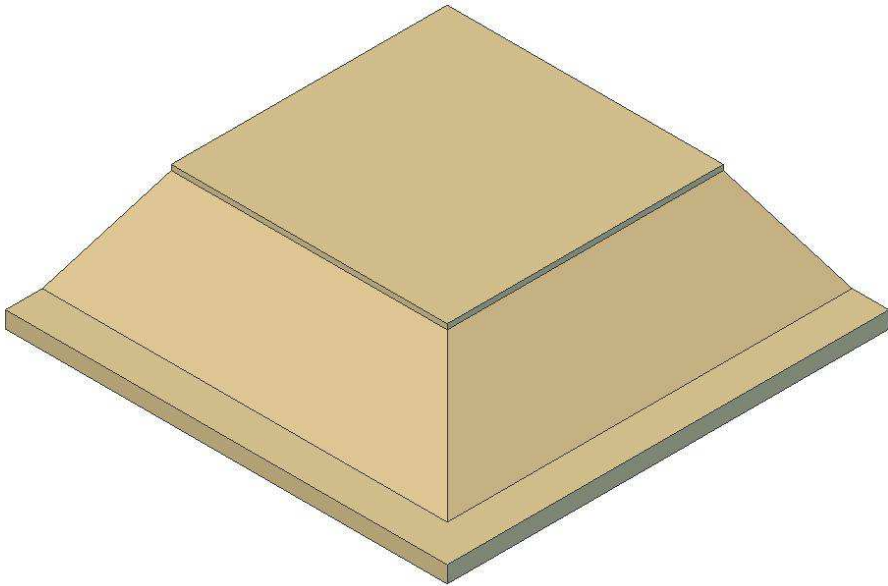

RP-03



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Raised Panel

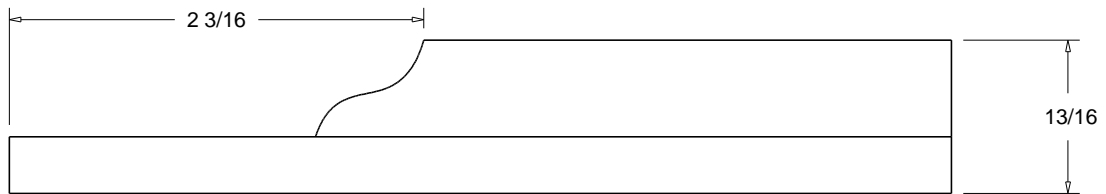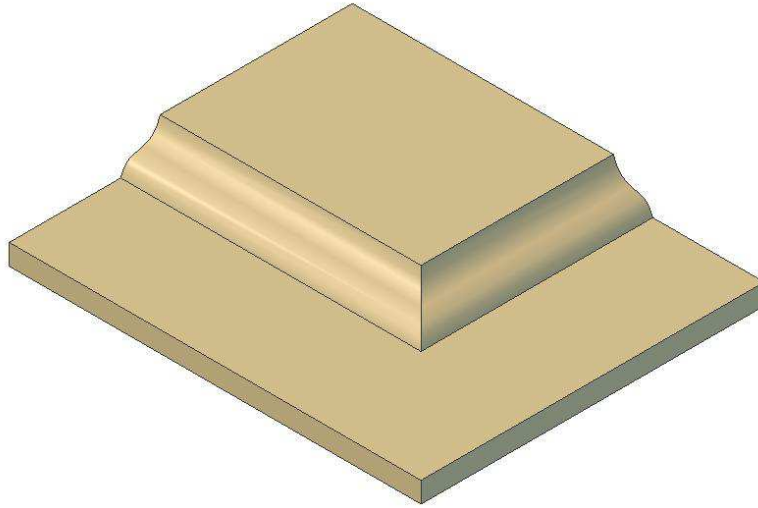

RP-04



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Raised Panel

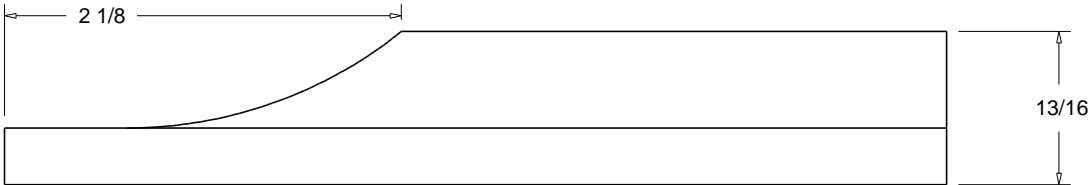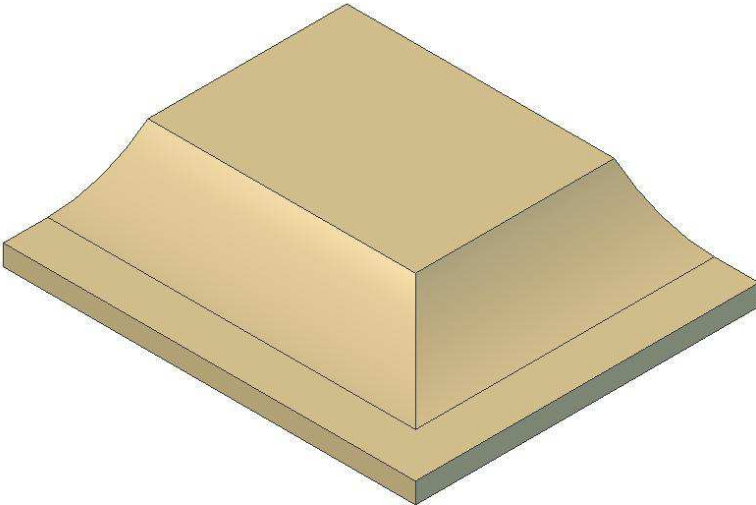

RP-05



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Brick Mould

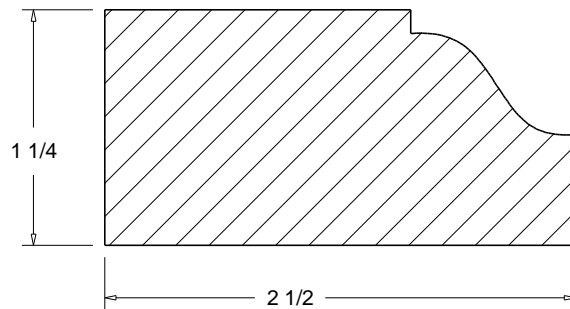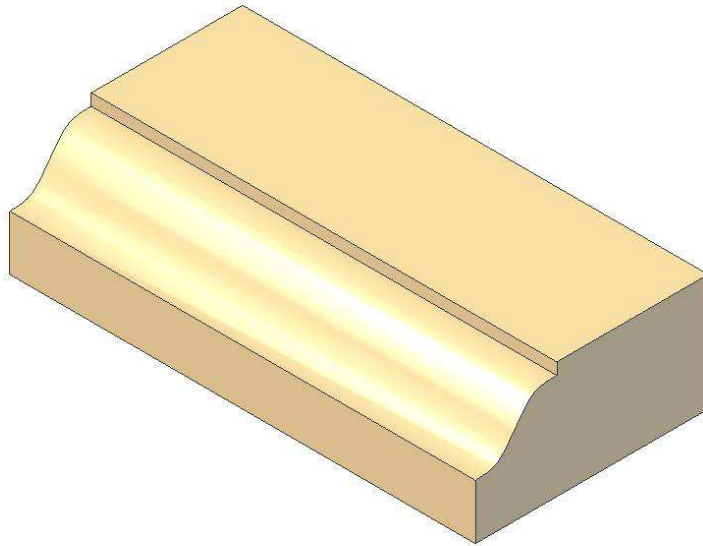

BM-01



Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS

Brick Mould

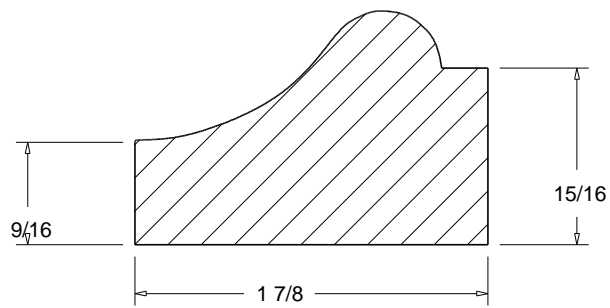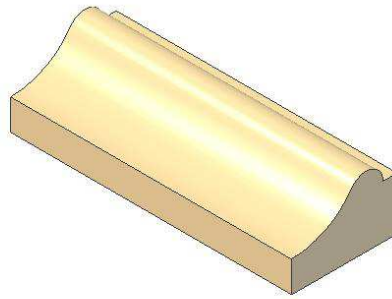

BM-02

Full Scale

[Click code to go back](#)



HOMESTEAD
WOODWORKS



3575 Broadway Street
Hawkesville, Ontario N0B 1X0
519-699-4529

www.homesteadwoodworks.ca



HOMESTEAD
WOODWORKS