
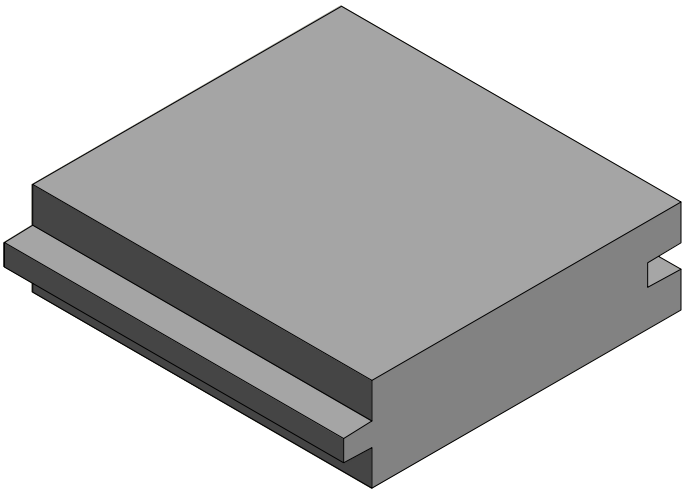



Back checking is standard on flooring only,  
but is available on request for wall paneling  
& ceiling boards.

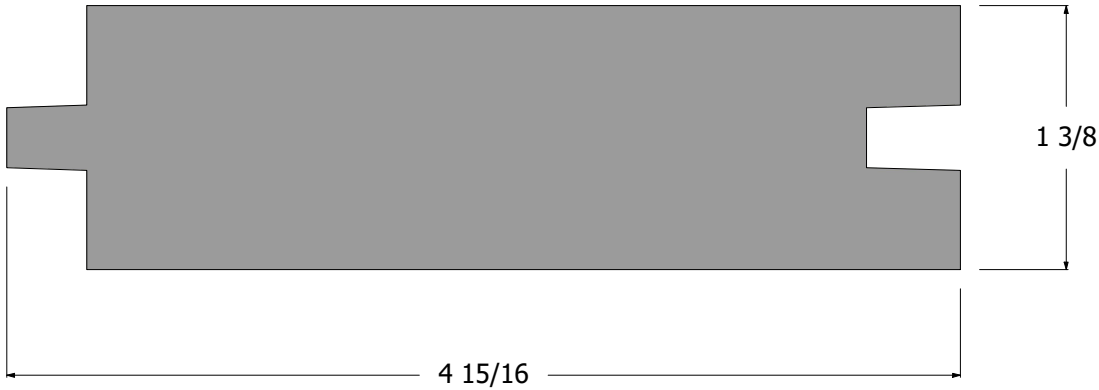

Scale : 1 : 1	Part Number : TG-08-A	Style : Modern	 <b>HOMESTEAD</b> WOODWORKS
<a href="#">Back</a>	Description : T & G Paneling		