
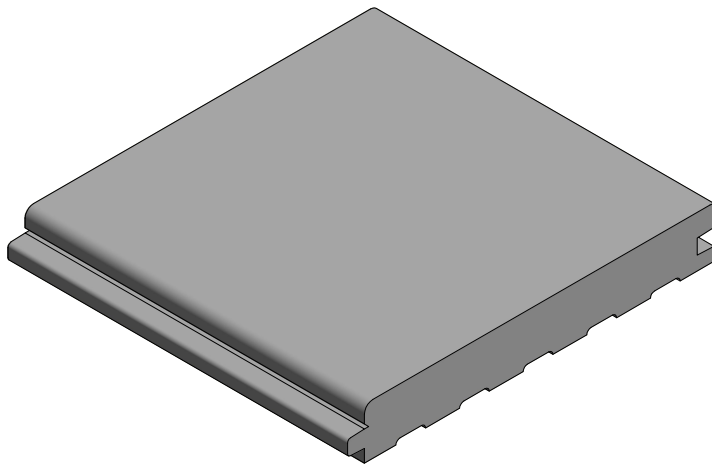


Back checking is standard on flooring only,
but is available on request for wall paneling
& ceiling boards.

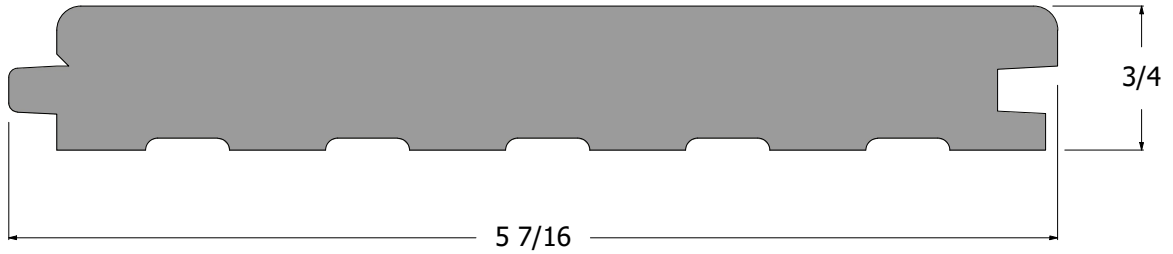

Scale :
1 : 1

Part Number :
TG-09-C

Style :
Transitional
Modern

[Back](#)

Description :
T & G 1/8 R



HOMESTEAD
WOODWORKS